

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZNOAV](#) /

› [ZNOAV Juicer Machine User Manual \(Model: juicer\)](#)

ZNOAV juicer

ZNOAV Juicer Machine User Manual

Model: juicer

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your ZNOAV Juicer Machine. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the safety lock is properly engaged before operating the juicer to prevent leaks and ensure safe high-speed operation.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Always use the food pusher.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The cutter head and filter are made of food-grade stainless steel, and the lid and juice cup are made of BPA-free food-grade material.
- This appliance is for household use only.

PRODUCT OVERVIEW

The ZNOAV Juicer Machine is designed for efficient extraction of juice from fruits and vegetables. It features a powerful 600W motor and multiple speed settings.



Figure 1: Overview of the ZNOAV Juicer Machine (Tescook branded), showing the main unit, juice pitcher, and pulp container.

Components:

- **Food Pusher:** Used to guide ingredients into the feed chute.
- **Feed Chute:** Wide opening for inserting fruits and vegetables.
- **Lid:** Transparent lid covering the juicing mechanism.
- **Filter Basket with Cutter Head:** Stainless steel component for shredding and extracting juice.
- **Juice Spout:** Directs extracted juice into the juice pitcher.
- **Pulp Container:** Collects discarded pulp.
- **Juice Pitcher:** Collects fresh juice.
- **Motor Base:** Contains the 600W motor and control dial.
- **Safety Locking Bar:** Secures the lid and ensures safe operation.
- **Control Dial:** For selecting speed settings (I, II, 0).

SETUP

1. Place the motor base on a stable, flat, and dry surface.
2. Ensure the pulp container is correctly positioned at the back of the motor base.
3. Insert the stainless steel filter basket with the cutter head into the motor base, ensuring it sits firmly.
4. Place the transparent lid over the filter basket, aligning the juice spout with the opening for the juice pitcher.
5. Secure the lid by lifting and locking the safety locking bar into place. You should hear a click.
6. Position the juice pitcher under the juice spout.
7. Insert the food pusher into the feed chute.
8. Plug the juicer into a grounded electrical outlet.



Figure 2: The safety locking bar of the ZNOAV Juicer (Tescook branded) must be securely in place before operation.

OPERATING INSTRUCTIONS

Preparing Ingredients:

- Wash all fruits and vegetables thoroughly.
- For larger items, cut them into pieces that fit comfortably into the 3.5-inch food chute. Small apples can be juiced whole.
- Remove large seeds (e.g., from peaches, plums) and hard pits.
- Peel citrus fruits (oranges, lemons, limes) as their peels can impart a bitter taste.

Juicing Process:

1. With the juicer assembled and plugged in, turn the control dial to the desired speed setting:
 - **"I" (Low Speed):** 12000-18000 RPM, suitable for soft fruits and vegetables such as oranges, strawberries, grapes, and tomatoes.
 - **"II" (High Speed):** 18000-27000 RPM, suitable for hard fruits and vegetables such as carrots, apples, pineapples, and celery.
2. Gradually feed the prepared ingredients into the feed chute.
3. Use the food pusher to gently guide the ingredients down. Do not force ingredients, as this can damage the motor or reduce juice yield.
4. Fresh juice will flow into the juice pitcher, and pulp will collect in the pulp container.
5. To stop juicing, turn the control dial to "0" (Pause).



Figure 3: Select the appropriate speed setting on the ZNOAV Juicer (Tescook branded) for your ingredients.



Figure 4: The large food chute of the ZNOAV Juicer (Tescook branded) accommodates various fruit and vegetable sizes.



Figure 5: The anti-drip design of the ZNOAV Juicer (Tescook branded) ensures clean juice collection.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your juicer.

1. Unplug the juicer from the power outlet before cleaning.
2. Disassemble all removable parts: food pusher, lid, filter basket, pulp container, and juice pitcher.
3. All removable parts are dishwasher safe. For manual cleaning, rinse them under running water and use a brush to remove any pulp residue from the filter basket.
4. Wipe the motor base with a damp towel. Do not immerse the motor base in water.
5. Ensure all parts are completely dry before reassembling or storing the juicer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in, safety locking bar not engaged, or power outage.	Check power connection, ensure safety locking bar is securely fastened, check household circuit breaker.
Low juice yield or excessive pulp.	Incorrect speed setting for ingredients, filter basket clogged, or ingredients fed too quickly.	Use appropriate speed setting (High for hard, Low for soft), clean filter basket, feed ingredients slowly and evenly.
Motor stops during operation.	Overload protection activated due to too much pressure or hard ingredients.	Turn off and unplug the juicer. Remove excess ingredients, allow motor to cool for 15-20 minutes, then restart.
Vibration or excessive noise.	Improper assembly of parts or uneven placement on surface.	Disassemble and reassemble all parts correctly, ensuring the juicer is on a stable, flat surface.

SPECIFICATIONS

- **Brand:** ZNOAV
- **Model Name:** juicer
- **Power:** 600W
- **Speed Settings:** 2 (Low: 12000-18000 RPM, High: 18000-27000 RPM)
- **Feed Chute Size:** 3.5 inches
- **Blade Material:** Stainless Steel
- **Housing Material:** Stainless Steel
- **Capacity:** 500 Milliliters (Juice Pitcher)
- **Product Dimensions:** 11"D x 10"W x 10"H
- **Item Weight:** 7.2 pounds
- **Care Instructions:** All removable parts are dishwasher safe. Wipe motor base with a damp cloth.
- **Certification:** UL certified

WARRANTY AND SUPPORT

Your ZNOAV Juicer Machine comes with a 12-month after-sales guarantee service. For any questions or support needs, please contact ZNOAV customer service. We provide 24-hour online service to assist you.

For further assistance, please refer to the contact information provided with your purchase or visit the official ZNOAV website.