



Manuals.plus /

› Coouds /

› Coouds 3089 Multi-Code Gate Opener Remote Control Instruction Manual

Coouds 3089

Coouds 3089 Multi-Code Gate Opener Remote Control Instruction Manual

1. INTRODUCTION

This manual provides instructions for the Coouds 3089 Multi-Code Gate Opener Remote Control. This device is designed to operate compatible Linear multi-code garage door and gate openers. It serves as a replacement or an additional remote for existing systems.



Great Replacement or for an Additional User

Image: The Cooods 3089 remote control positioned in front of a closed gate, illustrating its use as a gate opener.

2. COMPATIBILITY

The Cooods 3089 remote control is compatible with specific Linear multi-code garage door and gate openers. It operates at a frequency of 300 MHz and utilizes 10 dip-switches for coding.

- Compatible with all Linear multi-code garage door openers.
- Replaces models: 308911, 1089, 3070, 3060.

Important Note: This remote is not a universal remote. Please verify the compatibility of your existing gate or garage door opener to ensure it is a Linear multi-code system operating at 300 MHz before attempting to use this remote.

Compatible with All Multi-code 300MHz Garage Door Openers



Note:

NOT Universal! Please check your openers before ordering.

Image: An illustration of the Cooods 3089 remote control with its internal dip switches visible, alongside text indicating compatibility with Multi-code 300MHz Garage Door Openers and listing replacement models.

3. PACKAGE CONTENTS


Upon opening the package, ensure all the following items are present:

- One (1) Cooods 3089 Remote Control
- One (1) Visor Clip
- One (1) 12V 23A Battery
- One (1) Programming Instruction Guide

Package List



Remote Control

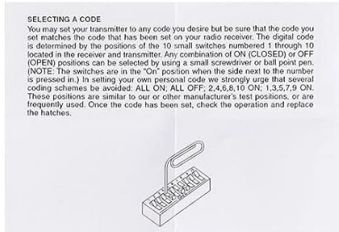

Program Guide



Visor Clip



Battery 12V 23A

Image: A visual representation of the package contents, including the remote control, visor clip, 12V 23A battery, and a programming guide.

4. SETUP AND PROGRAMMING

Follow these steps to set up and program your Cooods 3089 remote control:

1. **Battery Installation:** The remote control includes a 12V 23A battery. Ensure it is properly inserted and charged before proceeding with programming.
2. **Open the Remote:** Press to open the front cover of the remote control to access the internal dip switches.
3. **Set the Code:** Locate the 10 dip-switches inside the remote. Set these switches to match the exact code configuration of your existing receiver (garage door or gate opener).
4. **Close the Remote:** Securely close the front cover of the remote control.
5. **Test Operation:** Test the remote control to ensure it properly activates your garage door or gate opener.

Troubleshooting Tip: If the remote does not work after programming, try setting the dip switches to the opposite position (e.g., if a switch was UP, set it DOWN, and vice-versa) and retest.


Easy to Program



Press to open the front cover.



Set the code which matches your receiver.

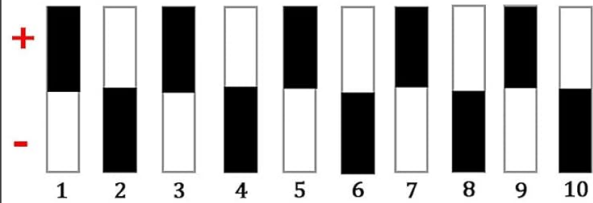

Make sure the battery is charged and test.



Note:

If the remote control doesn't work, try to dial the Dip Switches to the Opposite Position and test again.

Image: A step-by-step visual guide demonstrating how to open the remote, set the internal dip switches to match the receiver's code, and test the remote's function.

5. OPERATING INSTRUCTIONS

Once programmed, operating the remote control is straightforward:

- Press the single button on the remote control to activate your Linear multi-code gate or garage door opener.
- The remote offers an operating distance of up to 100 feet in open air without obstacles.



High Range Up to 100FT

Note: In the open air without obstacles.

Image: A hand holding the Cooouds 3089 remote control, with a visual representation of its signal extending towards a gate, indicating a high operating range of up to 100 feet.

6. MAINTENANCE

To ensure the longevity and proper function of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace the 12V 23A battery when the remote's signal weakens or stops functioning.
- **Cleaning:** Keep the remote control dry and clean. Use a soft, dry cloth for cleaning.
- **Storage:** Avoid exposing the remote to extreme temperatures, high humidity, or direct sunlight for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your Cooouds 3089 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not working after programming	<ul style="list-style-type: none"> Low or dead battery Incorrect dip switch settings Out of range Incompatible opener 	<ul style="list-style-type: none"> Check battery charge; replace if necessary. Re-verify dip switch settings against your receiver. Try opposite settings if initial match fails. Ensure you are within 100 feet of the receiver. Confirm your opener is a Linear multi-code 300 MHz system.
Reduced operating range	<ul style="list-style-type: none"> Weak battery Obstructions between remote and receiver 	<ul style="list-style-type: none"> Replace the 12V 23A battery. Ensure a clear line of sight between the remote and the receiver.

8. SPECIFICATIONS

Brand	Cooouds
Model Numbers	1089, 3089, 3070, 3060, 308911
Frequency	300 MHz
Dip Switches	10
Battery Type	12V 23A Alkaline (one included with new units)
Item Weight	3.17 ounces
Package Dimensions	4.25 x 4.09 x 0.87 inches
Color	Black
Special Feature	Ergonomic design
Max Supported Devices	1 (per remote)
Compatible Devices	Linear multi-code garage door openers

9. WARRANTY AND SUPPORT

Cooouds provides the following for this product:

- **Warranty:** A 1-Year Warranty is provided for the remote control.
- **Support:** For any inquiries or issues, please contact Cooouds through the Amazon platform. Customer support typically responds within 12 hours. Under warranty, options for a refund or a free replacement are available.