

LIVINGbasics B09K7G2XHS

LIVINGbasics Baby Playpen User Manual

Model: B09K7G2XHS

INTRODUCTION

This user manual provides essential information for the safe and proper use, assembly, and maintenance of your LIVINGbasics Baby Playpen. Please read this manual thoroughly before assembly and retain it for future reference. The LIVINGbasics Baby Playpen offers a spacious and secure environment for your child to play and explore, both indoors and outdoors. Its design prioritizes safety, visibility, and ease of use.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always keep children under supervision when they are in the playpen.
- Do not leave children unattended.
- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not use the playpen if any parts are broken, torn, or missing. Contact customer service for replacement parts.
- Do not place the playpen near open flames, heaters, or other heat sources.
- Do not use this playpen as a bed or crib.
- The bottom padding is not included. Always pair with an additional non-slip play mat for prevention and comfort.
- Keep small objects, cords, and choking hazards out of the playpen.
- The playpen is designed for children up to 5 years old.
- This playpen cannot be folded for storage.

Note: *The playpen features a scientific height of 26 inches (65.5 cm) to prevent children from climbing out, and 360-degree breathable mesh for visibility.*

ASSEMBLY INSTRUCTIONS

The LIVINGbasics Baby Playpen is designed for easy assembly without the need for tools.

Components Checklist

Before beginning assembly, ensure all components are present. Refer to the product packaging for a complete list of parts. Typical components include:

- Steel Pipes (various lengths for frame)
- Plastic Joint Connectors
- Oxford Cloth Fabric (mesh walls and floor)
- Suction Cups (pre-attached to bottom frame)
- Zippered Door

Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble the Base Frame:** Connect the longest steel pipes using the plastic joint connectors to form the rectangular base. Ensure the connectors are firmly pushed into place. The bottom of the frame includes four suction cups for stability.
3. **Attach Side Pipes:** Insert the vertical steel pipes into the connectors on the base frame.
4. **Install Top Frame:** Connect the remaining steel pipes to the top of the vertical pipes using the appropriate joint connectors to form the upper rectangular frame.
5. **Secure Fabric:** The oxford cloth fabric with mesh walls is designed to fit over the assembled frame. Slide the pipes through the fabric sleeves and secure the fabric to the frame using any integrated fasteners (e.g., Velcro straps). Ensure the zippered door is correctly positioned.
6. **Check Stability:** Once fully assembled, gently push on the frame to ensure all connections are tight and the playpen is sturdy. The suction cups at the bottom should firmly attach to a smooth floor surface.

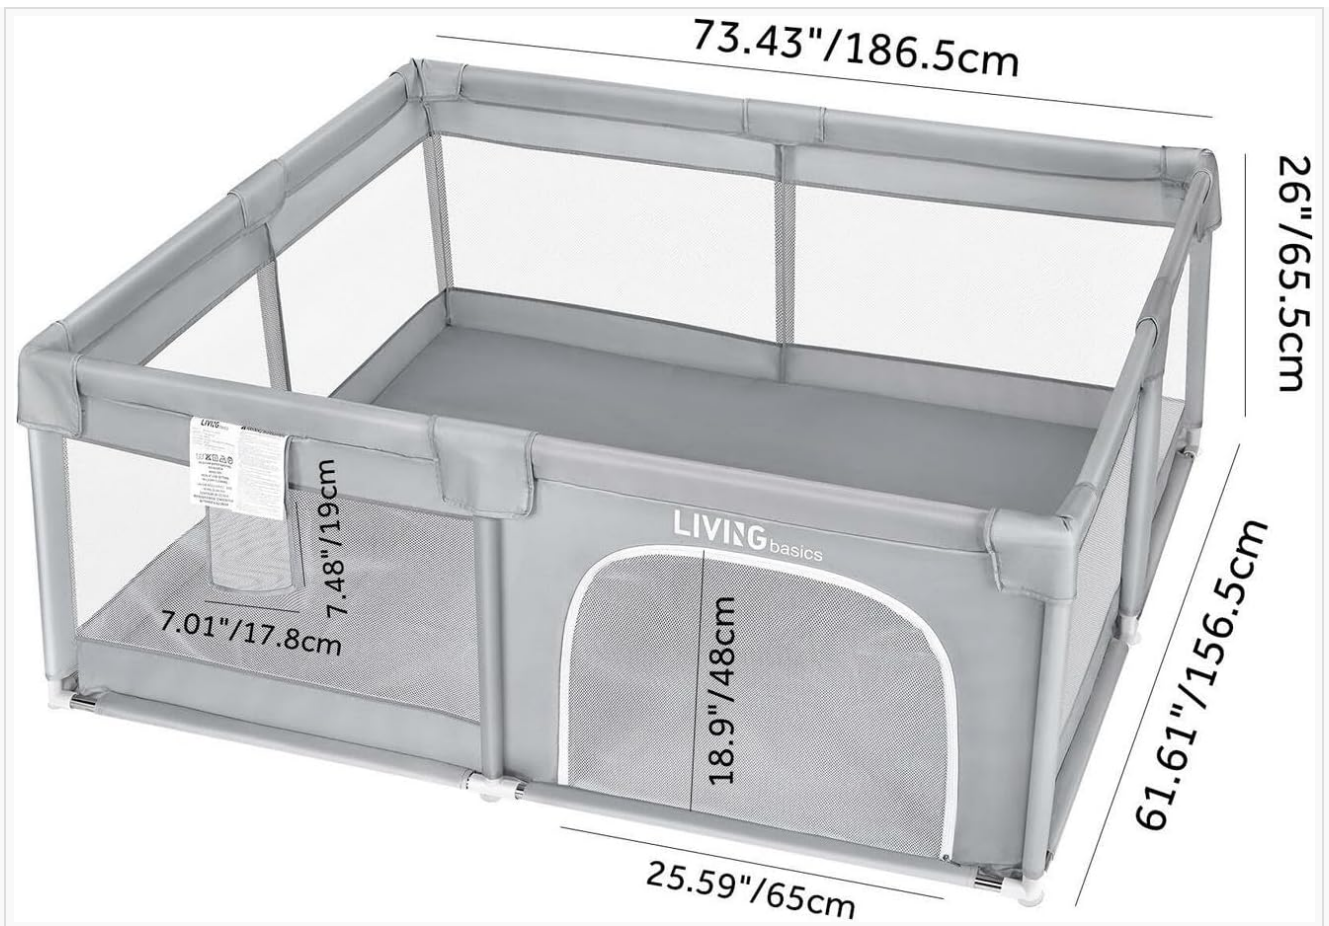


Figure 1: Assembled Playpen Dimensions. The playpen measures approximately 73.43 inches (186.5 cm) in length, 61.61 inches (156.5 cm) in width, and 26 inches (65.5 cm) in height.

360 VISIBILITY BABY PLAYPEN

SO BABIES CAN SEE THEIR MOTHER FROM DIFFERENT SIDES BEHIND THE FENCE



Figure 2: Side Zipper Door. The playpen features a smooth zippered door for easy access for children to crawl in and out.

STRONG SUCTION CUP

STEEL PIPE STRUCTURE, STABLE AND UNBREAKABLE



Figure 3: Strong Suction Cup. The base of the playpen is equipped with suction cups to firmly attach to the floor, enhancing stability and preventing overturning.



Thickened Anti-collision cotton at the Connection



Toy Storage Bag



2 Pull Rings for Assisting Child Stand Up



Gapless Protection

Figure 4: Safety Details. Features include thickened anti-collision cotton at connection points, a convenient toy storage bag, two pull rings to assist children in standing, and gapless protection at corners for enhanced safety.

OPERATING YOUR PLAYPEN

Usage

- Place the playpen on a flat, stable surface, ensuring the suction cups are engaged with the floor.
- The playpen is suitable for both indoor and outdoor use. When used outdoors, ensure it is placed on a level surface and protected from extreme weather conditions.
- Use the zippered door for easy entry and exit for your child. Ensure the zipper is fully closed when the child is inside to prevent accidental opening.
- The breathable mesh sides provide 360-degree visibility, allowing you to easily monitor your child.
- Utilize the integrated toy storage bag for keeping small toys and essentials organized within reach.
- The included pull rings can be attached to the top rail to assist children in standing and developing motor skills.

SIDE ZIPPER DOOR FOR EASY OUT AND IN



Figure 5: 360 Visibility. The transparent mesh sides allow for full visibility of the child inside the playpen from any angle.

26INCH/65.5CM SCIENTIFIC HEIGHT



Figure 6: Scientific Height. The playpen's 26-inch (65.5 cm) height is designed to be a safe barrier, preventing children from climbing out.

CARE AND MAINTENANCE

- **Cleaning:** The oxford cloth fabric can be wiped clean with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage or next use.
- **Inspection:** Regularly inspect all components, including steel pipes, plastic connectors, fabric, and zippers, for any signs of wear, damage, or loose parts.
- **Storage:** While the playpen cannot be folded, it can be disassembled for storage if needed. Store all parts in a dry, cool place away from direct sunlight.
- **Suction Cups:** Ensure the suction cups are clean and free of debris for optimal adhesion to the floor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Playpen is unstable or wobbly.	Connections are not fully secured; suction cups are not engaged.	Ensure all plastic joint connectors are firmly pushed onto the steel pipes. Press down on the playpen to engage the suction cups with a smooth, clean floor surface.
Zipper on door is stuck or difficult to operate.	Fabric caught in zipper; zipper mechanism is dirty.	Carefully check for any fabric caught in the zipper and gently pull it free. Clean the zipper teeth with a soft brush if necessary.
Fabric appears loose or sagging.	Fabric not properly aligned or secured to the frame.	Re-align the fabric sleeves over the pipes and ensure all securing straps (if any) are fastened. Check that the frame is fully assembled and rigid.
Missing or damaged parts.	Manufacturing defect or wear and tear.	Do not use the playpen. Contact LIVINGbasics customer support for replacement parts.

PRODUCT SPECIFICATIONS

- **Model:** B09K7G2XHS
- **Dimensions (Assembled):** 73.43" L x 61.61" W x 26" H (186.5 cm L x 156.5 cm W x 65.5 cm H)
- **Material:** Wear-resistant Oxford cloth, Alloy Steel pipes, Plastic joint connections
- **Color:** Grey
- **Maximum Weight Recommendation:** 150 Pounds
- **Age Range (Description):** Baby, Infant (up to 5 years old)
- **Features:** Zippered mesh door, 360-degree breathable mesh, strong suction cups, thickened anti-collision cotton, toy storage bag, pull rings.
- **UPC:** 888620158840

WARRANTY AND CUSTOMER SUPPORT

For warranty information, replacement parts, or any questions regarding your LIVINGbasics Baby Playpen, please contact LIVINGbasics customer support.

Refer to your purchase documentation or the LIVINGbasics official website for specific warranty terms and contact details.

Manufacturer: LIVINGbasics

Date First Available: June 28, 2024



© 2024 LIVINGbasics. All rights reserved.

This manual is for informational purposes only.