

Midea MF-CN40C2

Midea 4L Digital Air Fryer User Manual

Model: MF-CN40C2

Brand: Midea

INTRODUCTION

Thank you for choosing the Midea 4L Digital Air Fryer. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals, utilizing rapid hot air circulation to achieve crispy results with significantly less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Key features of your Midea Air Fryer include:

- **Health & Energy Efficiency:** Turbo hot air circulation technology and a maximum temperature of 200°C allow for faster cooking, reducing fat by up to 90% compared to traditional fryers.
- **8 Pre-set Cooking Modes:** LED screen with integrated programs for air frying, toasting, roasting, grilling, baking, dehydrating, reheating, and cooking frozen foods.
- **Precise Control:** Accurate time control (up to 60 minutes) and temperature control (35-200°C) with automatic shut-off and overheat protection.
- **Compact Design:** 4L capacity, ideal for 2-4 people, capable of holding up to 10 chicken wings or 5 small tarts.
- **Easy to Clean:** Non-stick coating and dishwasher-compatible parts for hassle-free cleaning.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or air fryer in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure the basket is properly inserted and locked before operating.
15. Do not block any ventilation openings.
16. The appliance is equipped with an automatic shut-off function.
17. This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Midea Air Fryer.



Front view of the Midea 4L Digital Air Fryer, showing the digital control panel and handle.

Für Benutzerfreundliche Bequemlichkeit Entworfen



Griff zum Aufwickeln Der Drähte

Wickeldrähte Zur Einfachen Aufbewahrung



Bedienfeld.

Der Kochstatus Wird Angezeigt, Wenn Der Kochvorgang Läuft, Pausiert, Abgeschlossen Ist Oder Wenn Das Essen Geschüttelt Werden Soll.



Rutschfester Gummifuß

Sorgt Dafür, Dass Die Fritteuse Fest Auf Der Arbeitsfläche Steht.



Backblech

Herausnehmbar Und Leicht Zu Reinigen.

Diagram highlighting key components: Control Panel, Handle for cord winding, Non-slip rubber feet, and Removable Baking Tray/Basket.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Control Panel:** LED display with touch controls for temperature, time, and pre-set programs.
- **Frying Basket:** Removable, non-stick coated basket for holding food.
- **Crisper Plate/Rack:** Sits inside the frying basket to allow air circulation around food and drain excess oil.
- **Handle:** For safely pulling out the frying basket. Also features a cord winding grip for storage.
- **Non-slip Rubber Feet:** Ensures stability on countertops.

Control Panel:

Einfaches Digitales Berührungspanel

Präzise Temperatur & Zeitkontrolle



Close-up of the digital touch panel, showing temperature and time controls, along with icons for pre-set programs.

- **Temperature Display:** Shows current or set temperature (35-200°C).
- **Time Display:** Shows current or set cooking time (up to 60 minutes).
- **Pre-set Program Icons:** Visual indicators for 8 different cooking functions (e.g., fries, chicken wings, meat, fish).
- **Temperature/Time Adjustment Buttons (+/-):** Used to increase or decrease temperature and time.
- **Menu/Program Selection Button:** Cycles through pre-set programs.
- **Start/Pause Button:** Initiates or pauses the cooking process.

SETUP AND FIRST USE

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Cleaning:** Wash the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. The basket and plate are dishwasher safe. Wipe the inside and outside of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4

inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.

4. **Pre-heating (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell may be present, which is normal and will dissipate.
5. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

General Operation:

1. Place the crisper plate inside the frying basket.
2. Place the ingredients into the frying basket. Do not overfill the basket.
3. Slide the frying basket back into the air fryer.
4. Plug the appliance into a power outlet. The display will light up.
5. Select a pre-set program or manually set the temperature and time.
6. Press the Start/Pause button to begin cooking.

Using Pre-set Programs:

8 Voreingestellte Programme, Erfüllen Alle Täglichen Anforderungen

35°C-200°C Mit Automatischer Abschaltung Und Überhitzungsschutz.



 Auftauen



 Pommes frites



 Hähnchenflügel



 Fleisch



 Shrimps



 Fisch



 Torte



 Dehydrieren



Visual representation of the 8 pre-set cooking programs available on the Midea Air Fryer.

The Midea Air Fryer comes with 8 pre-set programs for common dishes.

- Press the Menu/Program Selection button repeatedly to cycle through the pre-set icons.
- Once the desired program is selected, the air fryer will automatically set the optimal temperature and time.
- You can adjust the pre-set time and temperature using the +/- buttons if needed.
- Press the Start/Pause button to begin cooking.

Manual Temperature and Time Setting:

- After placing food in the basket, use the +/- buttons to set your desired temperature (35-200°C).
- Then, use the +/- buttons to set your desired cooking time (up to 60 minutes).
- Press the Start/Pause button to begin cooking.

Shake Reminder Function:

For certain recipes, especially those with smaller ingredients like fries or chicken nuggets, the air fryer may prompt you to

shake the basket halfway through the cooking process.

- When the "Shake" icon appears on the display, carefully pull out the frying basket.
- Gently shake the basket to redistribute the food.
- Slide the basket back into the air fryer. The cooking process will automatically resume.

Cooking Capacity Examples:

4L Fassungsvermögen Für 2-3 Personen



Examples of food quantities that fit in the 4L basket: 450g fries, 1.5kg grilled chicken, 10 chicken wings, or a 6-inch pizza.

- 450g French Fries
- 1.5kg Grilled Chicken
- 10 Chicken Wings
- 6-inch Pizza

CLEANING AND MAINTENANCE

Clean the air fryer after every use.

Sorgenfreie Lebensmittelechte Antihaft-Beschichtung

Gesünder Zu Verwenden,Einfacher Zu Reinigen.



Image illustrating the non-stick coating and dishwasher compatibility of the air fryer basket and crisper plate.

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Basket and Crisper Plate:** The frying basket and crisper plate have a non-stick coating and are dishwasher safe. For manual cleaning, use hot water, dish soap, and a non-abrasive sponge. Do not use metal utensils or abrasive cleaning materials, as this may damage the non-stick coating.
3. **Inside of the Appliance:** Wipe the inside of the appliance with a hot water and non-abrasive sponge.
4. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.
5. **Outside of the Appliance:** Wipe the outside of the appliance with a damp cloth.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance. Use the cord winding grip on the handle for neat storage.

TROUBLESHOOTING

If you encounter any issues with your Midea Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not work.	Appliance is not plugged in.	Plug the main plug into a grounded wall socket.
	Timer has not been set.	Set the timer to the required preparation time.
Food is not cooked evenly.	Too much food in the basket.	Reduce the amount of food in the basket. Cook in smaller batches.
	Food was not shaken.	Shake the basket halfway through the cooking process.
White smoke comes out of the appliance.	Fat splashes from previous use.	Clean the basket and crisper plate thoroughly after each use.
	Excess oil from fatty ingredients.	Ensure food is not excessively oily. Pat dry if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Number	MF-CN40C2 (4048164111008)
Color	Black
Product Dimensions (L x W x H)	27.5 x 31.6 x 38 cm
Item Weight	4.3 Kilograms
Capacity	4 Liters
Volume	3.5 Liters
Power	1500 Watts
Voltage	220 Volts
Material	Plastic
Automatic Shut-off Function	Yes
Special Feature	Timer
Recommended Uses	Dehydration, Frying

WARRANTY AND SUPPORT

Midea offers a **24-month warranty** for this product, ensuring peace of mind regarding its quality and performance. For any questions, concerns, or technical assistance, please contact Midea customer service. Your satisfaction is our priority. Additional resources, including 41 carefully selected recipes, can be downloaded from the product page on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question