

## Maxell 199652

# Maxell 199652 True Wireless Earbuds User Manual

Model: 199652 | Brand: Maxell

## INTRODUCTION

Thank you for choosing the Maxell 199652 True Wireless Earbuds. These earbuds are engineered to deliver a high-fidelity audio experience with advanced features for your convenience and enjoyment. This manual provides essential information on setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity.

## WHAT'S INCLUDED

Please check the package contents to ensure all items are present:

- Maxell 199652 True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- Extra Ear Tips (various sizes)





Image: Maxell 199652 True Wireless Earbuds, showing both earbuds and the open charging case with a digital battery indicator.

## PRODUCT FEATURES

---

### High-Fidelity Dual-Driver Sound

Each earbud is equipped with two 6mm professional speakers, delivering exceptional strong bass, crisp mids/highs, and luxury treble performance for a truly immersive listening experience.

# DUAL DRIVER

With two 6mm professional speakers in each earbud, the Dual Driver delivers incredible heavy bass, clear mids/highs, and prestige treble performance to achieve a beautifully immersive listening experience.



Image: An exploded diagram of an earbud highlighting the two 6mm professional speakers, illustrating the dual-driver technology.

## Bluetooth 5.0 Connectivity

Utilizing the latest Bluetooth 5.0 technology, these earbuds offer increased wireless range, reduced power consumption, and faster, more stable transmission speeds for seamless audio streaming.

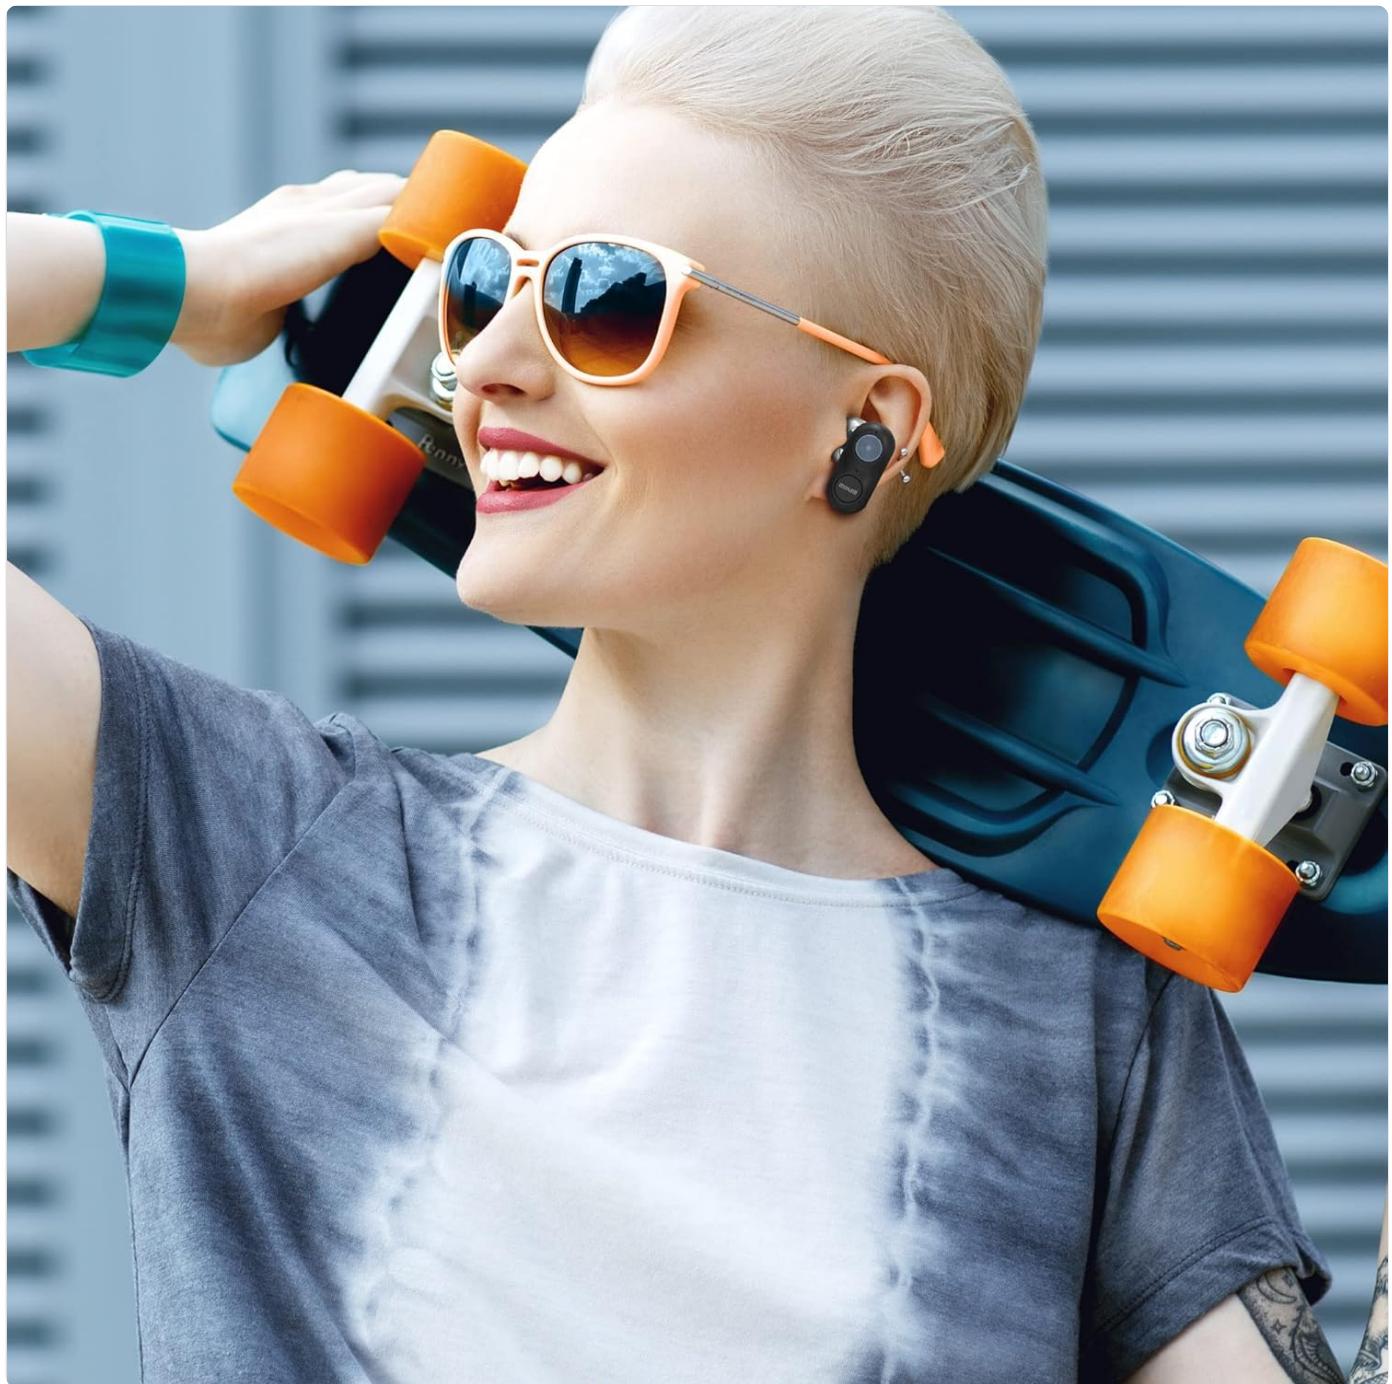


Image: A person wearing the Maxell earbuds, enjoying music wirelessly, emphasizing the Bluetooth connectivity.

### Extended Playtime

Enjoy up to 5 hours of listening time on a single charge. The portable charging case provides an additional 15 hours of battery life, totaling 20 hours of combined playtime.



Image: A visual representation indicating "20 Hours Playtime" with the earbuds and charging case.

### **Convenient Touch Control**

Manage your music playback and phone calls effortlessly with sensitive touch control keys on each earbud. No need to reach for your phone.



Image: A diagram showing the earbuds and charging case, with text overlay explaining the touch control functions for music and calls.

### IPX3 Water Resistance

Designed with IPX3 water resistance, these earbuds are protected against splashing water, making them suitable for workouts and outdoor activities.



Water  
Resistant



Image: Earbuds shown with water droplets, illustrating their IPX3 water-resistant capability.

#### Comfortable & Secure Fit

The rubberized design ensures a stable and comfortable fit, even during extended periods of use, preventing discomfort or accidental dislodgement.

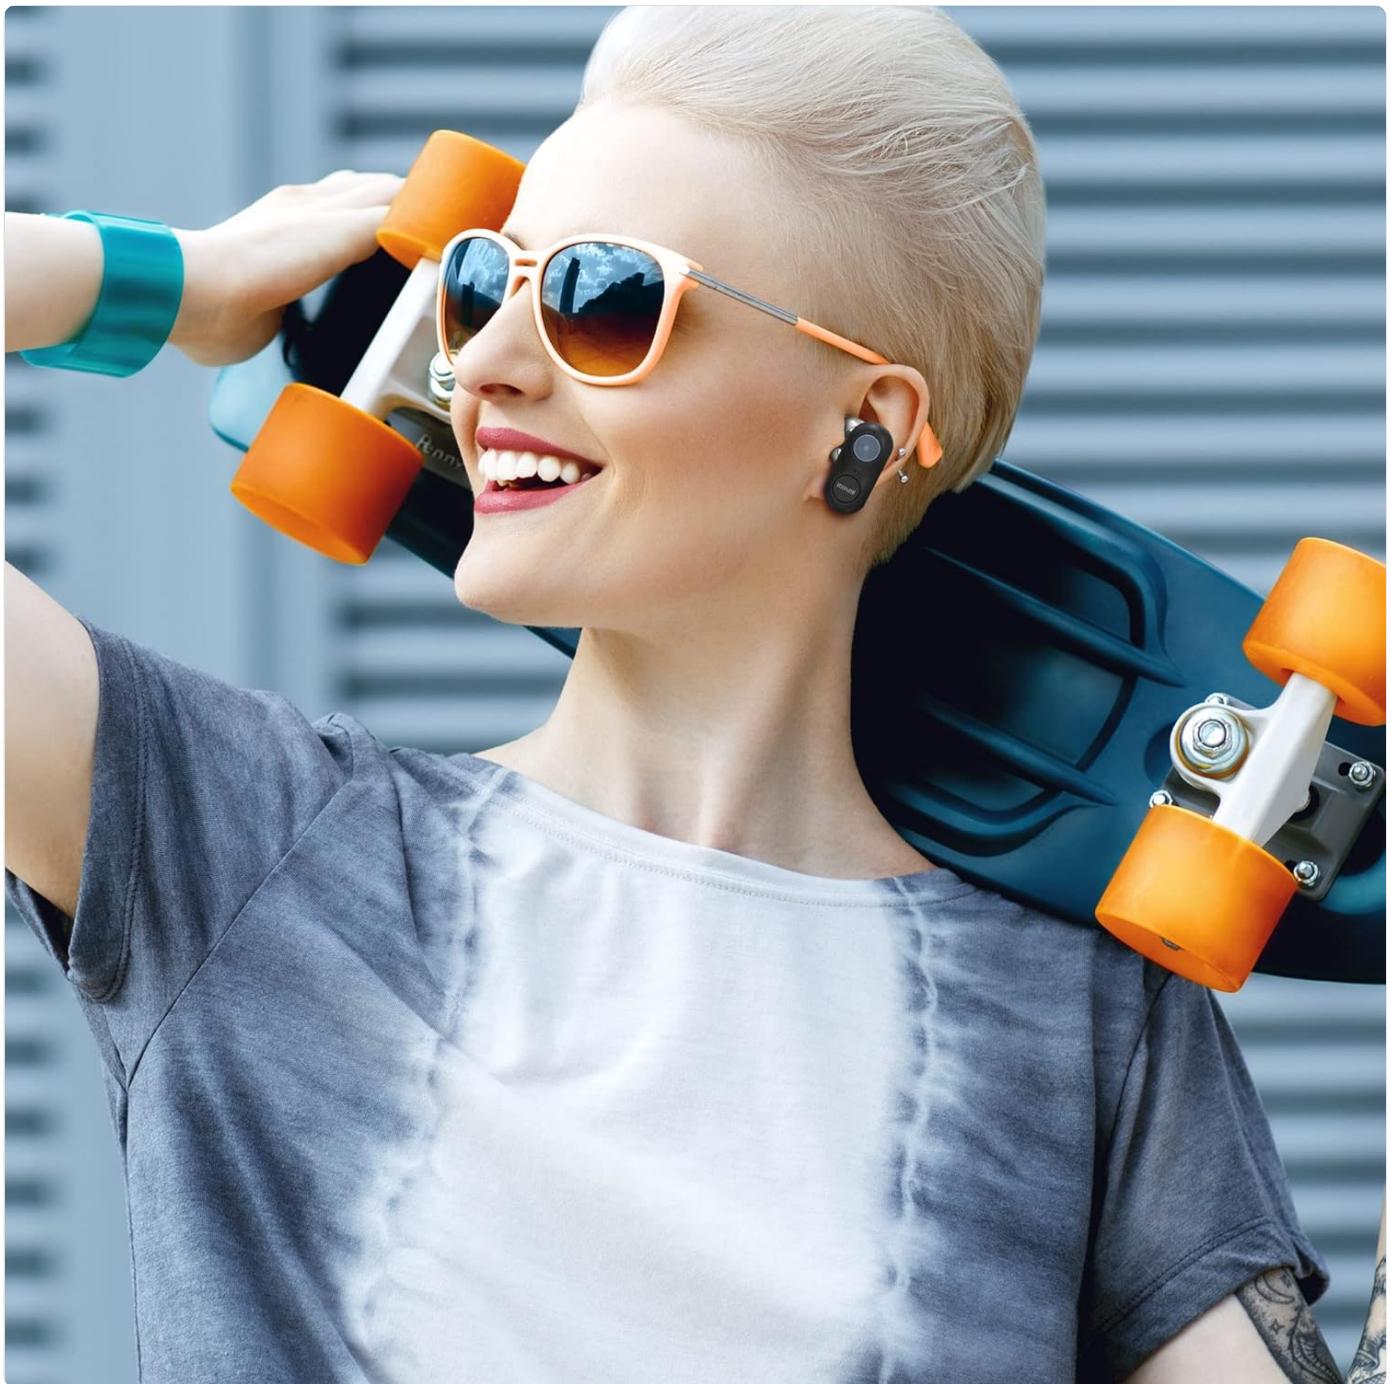


Image: A person wearing the earbuds, demonstrating their secure and comfortable fit during active use.

## SETUP GUIDE

---

### Initial Charging

1. Before first use, place both earbuds into the charging case.
2. Connect the USB charging cable to the charging port on the case and plug the other end into a USB power source (e.g., computer, wall adapter).
3. The digital display on the charging case will show the battery level. Allow the case and earbuds to fully charge.

### Pairing with Your Device

1. Ensure the earbuds are charged. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.

3. Search for "Maxell 199652" in the list of available Bluetooth devices.
4. Select "Maxell 199652" to connect. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case, provided Bluetooth is enabled on your device.

## OPERATING INSTRUCTIONS

---

The Maxell 199652 earbuds feature sensitive touch controls for easy management of audio and calls.

Function	Action
<b>Play/Pause Music</b>	Press the touch control button on either earbud once.
<b>Volume Up</b>	Triple press the touch control button on the Left earbud.
<b>Volume Down</b>	Triple press the touch control button on the Right earbud.
<b>Next Track</b>	Double press the touch control button on the Right earbud.
<b>Previous Track</b>	Double press the touch control button on the Left earbud.
<b>Answer/End Call</b>	Press the touch control button on either earbud once.
<b>Reject Call</b>	Press the touch control button on either earbud twice.
<b>Activate Voice Assistant</b>	Press and hold the touch control button on either earbud for 2 seconds.

## CHARGING THE EARBUDS AND CASE

---

To charge the earbuds, simply place them back into their charging case. The earbuds will automatically begin charging. The digital display on the case indicates the charging status and battery level of the case.

To charge the charging case, connect the provided USB cable to the case's charging port and a USB power source. The digital display will show the charging progress. A full charge for the case typically takes approximately 5 hours.



## Earbud controls:

**Pause/Play Music:** Press the power button on either bud once.

**Volume +:** Triple press the power button on the Left bud.

**Volume -:** Triple press the power button on the Right Bud.

**New Track:** Double press the power button on the Left Bud.

**Previous Track:** Double press the power button on Right Bud.

**Take and End call:** Press the power button on either bud once.

**Reject a Call:** Press the power button on either bud twice.

Once rejected your music will automatically resume.

Image: The Maxell earbuds inside their charging case, with an icon indicating 20 hours of total battery life.

## MAINTENANCE AND CARE

- Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- Ear Tips:** Remove ear tips periodically and clean them with water and mild soap. Ensure they are completely dry before reattaching.
- Charging Contacts:** If you experience charging issues, gently clean the charging contacts on both the earbuds and inside the case with a cotton swab.
- Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- Water Resistance:** While IPX3 water resistant, avoid submerging the earbuds in water or exposing them to heavy rain. Dry them thoroughly if they get wet.

## TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none"><li>Ensure earbuds are charged and removed from the case.</li><li>Turn off and on Bluetooth on your device.</li><li>Forget "Maxell 199652" from your device's Bluetooth list and try pairing again.</li><li>Ensure earbuds are close to your device.</li></ul>

Problem	Possible Solution
<b>Only one earbud working</b>	<ul style="list-style-type: none"> <li>Place both earbuds back into the charging case, close the lid, wait a few seconds, then open and remove them.</li> <li>Ensure both earbuds are charged.</li> <li>Try re-pairing the earbuds with your device.</li> </ul>
<b>Earbuds not charging</b>	<ul style="list-style-type: none"> <li>Ensure the charging case is charged.</li> <li>Clean the charging contacts on the earbuds and inside the case.</li> <li>Try a different USB charging cable or power source.</li> </ul>
<b>Poor sound quality</b>	<ul style="list-style-type: none"> <li>Ensure earbuds are properly seated in your ears. Try different sized ear tips.</li> <li>Check the audio source quality.</li> <li>Move closer to your device to avoid interference.</li> </ul>

## SPECIFICATIONS

Feature	Detail
<b>Model Name</b>	199652
<b>Connectivity Technology</b>	Wireless (Bluetooth)
<b>Bluetooth Version</b>	5.0
<b>Audio Driver Type</b>	Dynamic Driver
<b>Audio Driver Size</b>	6 Millimeters (Dual Drivers per earbud)
<b>Battery Life (Earbuds)</b>	Up to 5 Hours
<b>Total Playtime (with Case)</b>	Up to 20 Hours
<b>Charging Time (Case)</b>	Approx. 5 Hours
<b>Control Method</b>	Touch
<b>Water Resistance Level</b>	IPX3 (Water Resistant)
<b>Material</b>	Rubber
<b>Color</b>	Black/Grey
<b>Item Weight</b>	2.4 Ounces
<b>Product Dimensions</b>	1.6 x 6 x 4 inches

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Maxell website or contact their customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the official Maxell store for more information: [Maxell Official Store](#)

© 2024 Maxell. All rights reserved.