

Manuals.plus /

› **CHKOSDA** /

› Digital Wall Clock, Oversize Led Digital Clock Large Display with Auto Dimmer, Huge Countdown Timer with Remote Control, 27" Wide Display, 6 Digits, Wall Mount, Date and Temperature(Ice Blue) User Manual

CHKOSDA CH3389

Digital Wall Clock, Oversize LED Digital Clock User Manual

MODEL: CH3389

Brand: CHKOSDA

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your CHKOSDA Digital Wall Clock. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This clock is designed for indoor use and offers a large, clear display with multiple functions.

2. PRODUCT OVERVIEW


The CHKOSDA Digital Wall Clock features a large 27-inch wide LED display with 5.9-inch tall ice blue digits, making it easy to read from a distance. It includes various functions such as time display, date, temperature, multiple alarms, and a versatile countdown/stopwatch timer.

Key Features:

- **Large Display:** 5.9-inch tall numbers with a 27-inch wide LED screen for excellent readability.
- **Multipurpose Functions:** Displays time, date, and temperature. Features up to 16 alarms, a countdown timer, and a stopwatch.
- **Automatic Dimmer:** Adjusts brightness based on ambient light.
- **Manual Brightness Control:** 8 levels of adjustable brightness.
- **Durable Construction:** Display board cover made of acrylic, shell from high-strength ABS material.
- **Power Source:** Powered by a 10-foot power cord.

Components:

- Digital Wall Clock Unit
- Remote Control
- Power Adapter (USB)
- CR2032 Button Battery (for memory backup, included)

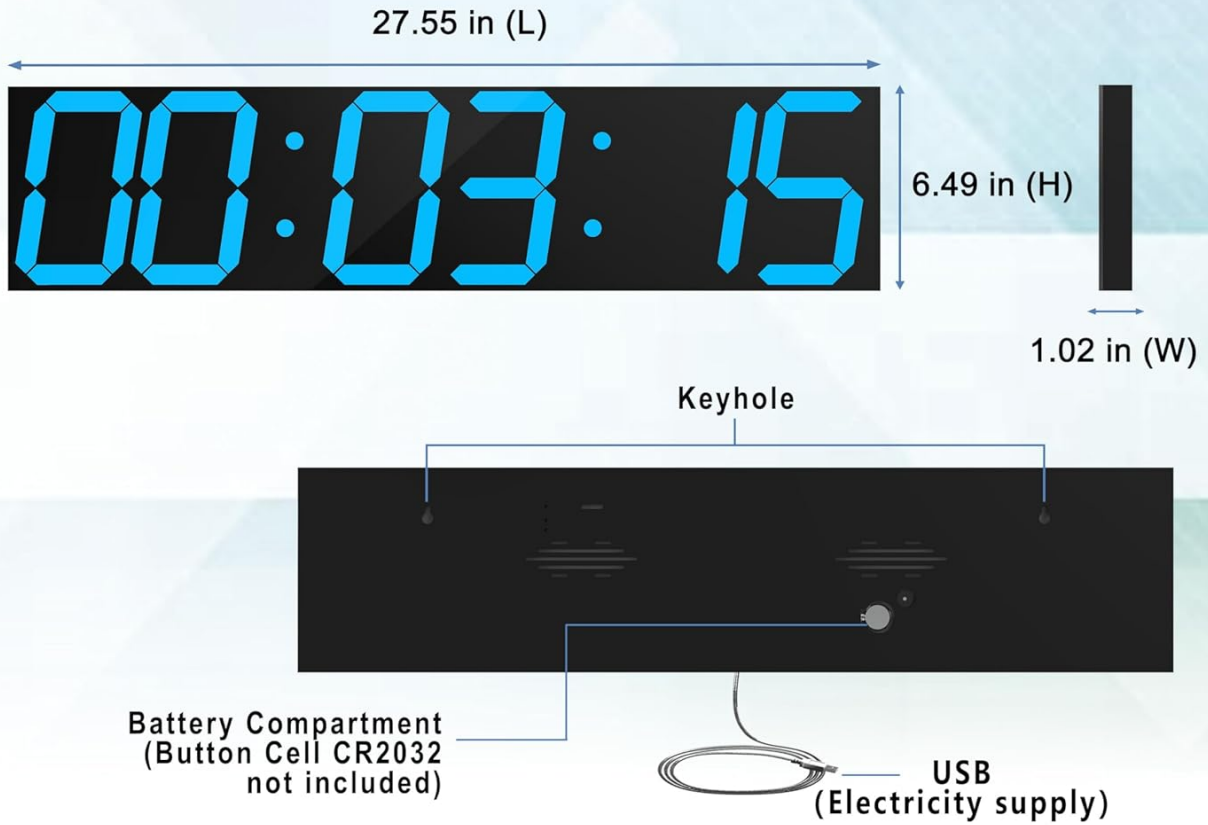











- 
Time Display
- 
Calendar
- 
Remote Control
- 
Count down
- 
Count up
- 
Alarm
- 
Auto Dimmer
- 
Temperature
- 
6-inch Font
- 
12/24 Hour

Figure 2.1: Product dimensions and key features overview.



Figure 2.2: Front view of the CHKOSDA Digital Wall Clock.

3. SETUP

3.1 Power Connection

The clock is powered by a 10-foot power cord. Connect the USB end of the power cord to the provided power adapter, and then plug the adapter into a standard wall outlet. The clock is not battery operated for primary function; the CR2032 battery only serves as a memory backup for time settings during power outages.

Up to **214 pcs**
LED lights

Stable Brightness
Better Reading Experience



Figure 3.1: Power connection and battery backup.



Figure 3.2: Power requirements and battery function.

3.2 Wall Mounting

The clock is designed for wall mounting. Locate the keyholes on the back of the clock. Use appropriate screws (not included) and wall anchors suitable for your wall type to securely mount the clock. Ensure the clock is level before tightening.



Figure 3.3: Example of wall mounting in a library setting.

4. OPERATING INSTRUCTIONS

4.1 Time, Date, and Temperature Display

Upon initial power-up, the clock will display the time. Use the remote control to switch between time, date, and temperature displays. Refer to the remote control diagram for specific buttons.

4.2 Brightness Adjustment

The clock features an automatic dimmer that adjusts the LED brightness according to ambient light conditions. You can also manually adjust the brightness to 8 different levels using the remote control. Press the 'DIM' button on the remote to toggle between manual and auto-dimming modes.



Figure 4.1: Auto dimmer and manual brightness control.

4.3 Alarm Settings

The clock supports setting up to 16 individual alarms. Consult the remote control instructions for detailed steps on setting, activating, and deactivating alarms.

4.4 Countdown and Stopwatch Functions

Utilize the built-in countdown timer for durations up to 999 days, or use the stopwatch for precise timing. These functions are ideal for meetings, cooking, or timed events. Refer to the remote control for specific button operations for these modes.



Stopwatch
Set up stopwatch
with your need.

Timer
Up to 999 days of
countdown setting.

Alarm
Up to 16 groups of
alarms.

Figure 4.2: Stopwatch, Timer, and Alarm functions.

4.5 Remote Control Usage

The included remote control allows for convenient adjustment of all clock settings from a distance. Ensure the remote control has a working battery and is pointed directly at the clock for optimal response.



Figure 4.3: Package contents including the remote control.

5. MAINTENANCE

5.1 Cleaning

To clean the clock, gently wipe the display and casing with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the acrylic display and ABS casing.

5.2 Battery Replacement (Memory Backup)

The CR2032 coin cell battery provides backup for time settings in case of a power interruption. If the clock loses time settings after a power outage, the CR2032 battery may need replacement. Locate the battery compartment on the back of the clock, remove the old battery, and insert a new CR2032 battery with the correct polarity.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------------|--|--|
| Clock not displaying | No power supply | Ensure the power adapter is securely plugged into the clock and a working wall outlet. Check the power cord for damage. |
| Remote control not responding | Remote battery low or incorrect aiming | Replace the battery in the remote control. Ensure you are pointing the remote directly at the clock's sensor. |
| Display too dim or too bright | Brightness settings need adjustment | Press the 'DIM' button on the remote to switch between auto-dimming and manual brightness modes. Use the brightness adjustment buttons on the remote to set desired level. |
| Time is inaccurate after power outage | CR2032 backup battery is depleted | Replace the CR2032 coin cell battery on the back of the clock. |

7. SPECIFICATIONS

| Feature | Detail |
|--------------------|---|
| Brand | CHKOSDA |
| Model Number | CH3389 |
| Color | Ice Blue |
| Display Type | Digital |
| Product Dimensions | 27.56"W x 6.5"H (approx. 27.3"W x 6.44"H display area) |
| Power Source | Corded Electric |
| Material | Acrylic and ABS Plastic |
| Item Weight | 4.39 pounds (2 Kilograms) |
| Backup Battery | 2 CR2032 batteries required (for memory backup, 1 included) |
| Mounting Type | Wall Mount |
| Special Features | Adjustable Brightness, Auto Dimmable, Calendar Display, Timer |
| UPC | 743815841634 |



Figure 7.1: Detailed product dimensions.

8. WARRANTY AND SUPPORT

This product comes with a **12-month guarantee** from the date of purchase, as indicated in the product packaging. For any issues or support needs, please contact the seller directly through your purchase platform. You can also refer to the official User Manual PDF for additional details: [Download User Manual \(PDF\)](#). No official product videos from the seller were found for embedding in this manual.