

Manuals.plus /

› Lovaky /

› Lovaky 2.4G Full-Sized Ergonomic Wireless Keyboard and Mouse Combo User Manual

Lovaky 230

Lovaky 2.4G Full-Sized Ergonomic Wireless Keyboard and Mouse Combo User Manual

Model: 230

INTRODUCTION

Thank you for choosing the Lovaky 2.4G Full-Sized Ergonomic Wireless Keyboard and Mouse Combo. This product is designed to provide a comfortable and efficient computing experience with its wireless connectivity and ergonomic features. This manual will guide you through the setup, operation, and maintenance of your new device.



Image: The Lovaky 2.4G Full-Sized Ergonomic Wireless Keyboard and Mouse Combo, featuring a black full-sized keyboard, a black wireless mouse, and a small USB receiver.



2.4G Wireless Keyboard and Mouse

- Comfortable Typing
- Stylish Contour
- Power-saving Design
- Wireless Freedom

Image: An overview of the 2.4G Wireless Keyboard and Mouse, highlighting comfortable typing, stylish contour, power-saving design, and wireless freedom.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver (located in the mouse battery compartment)
- 1 x User Manual

SETUP INSTRUCTIONS

1. Install Batteries:

- For the keyboard: Insert one AAA battery into the battery compartment.
- For the mouse: Insert two AAA batteries into the battery compartment.



Image: Diagram showing the battery requirements: one AAA battery for the keyboard and two AAA batteries for the mouse.

2. **Locate the USB Receiver:** The USB receiver is stored inside the mouse battery compartment. Carefully remove it.



Image: Close-up view of the wireless mouse with its battery cover open, revealing two AAA batteries and the USB receiver stored within the compartment.

3. **Connect the USB Receiver:** Plug the USB receiver into an available USB port on your computer, desktop, laptop, or notebook.



Image: A USB receiver plugged into the side of a laptop, with the wireless mouse positioned nearby, indicating wireless connectivity.

4. **Power On:** Turn on the keyboard and mouse using their respective power switches. The devices are plug-and-play and should connect automatically without requiring additional drivers.



Image: A clean desktop setup featuring the Lovaky wireless keyboard and mouse next to a monitor, illustrating a simplified and organized workspace.

The wireless connection operates on a 2.4G frequency, providing a reliable connection up to 10 meters (33

feet). Ensure no significant metal obstructions are between the devices and the receiver for optimal performance.

OPERATING INSTRUCTIONS

Keyboard Usage

- **Full-Sized Layout:** The keyboard features a standard US QWERTY layout with 104 keys, including a dedicated numeric keypad. Keys are well-spaced to minimize typing errors.
- **Ergonomic Design:** The keyboard includes foldable feet on the bottom, allowing you to adjust the typing angle for improved comfort and reduced wrist strain during extended use.
- **Quiet Typing:** The keys are designed for a soft keystroke, providing a quieter typing experience.

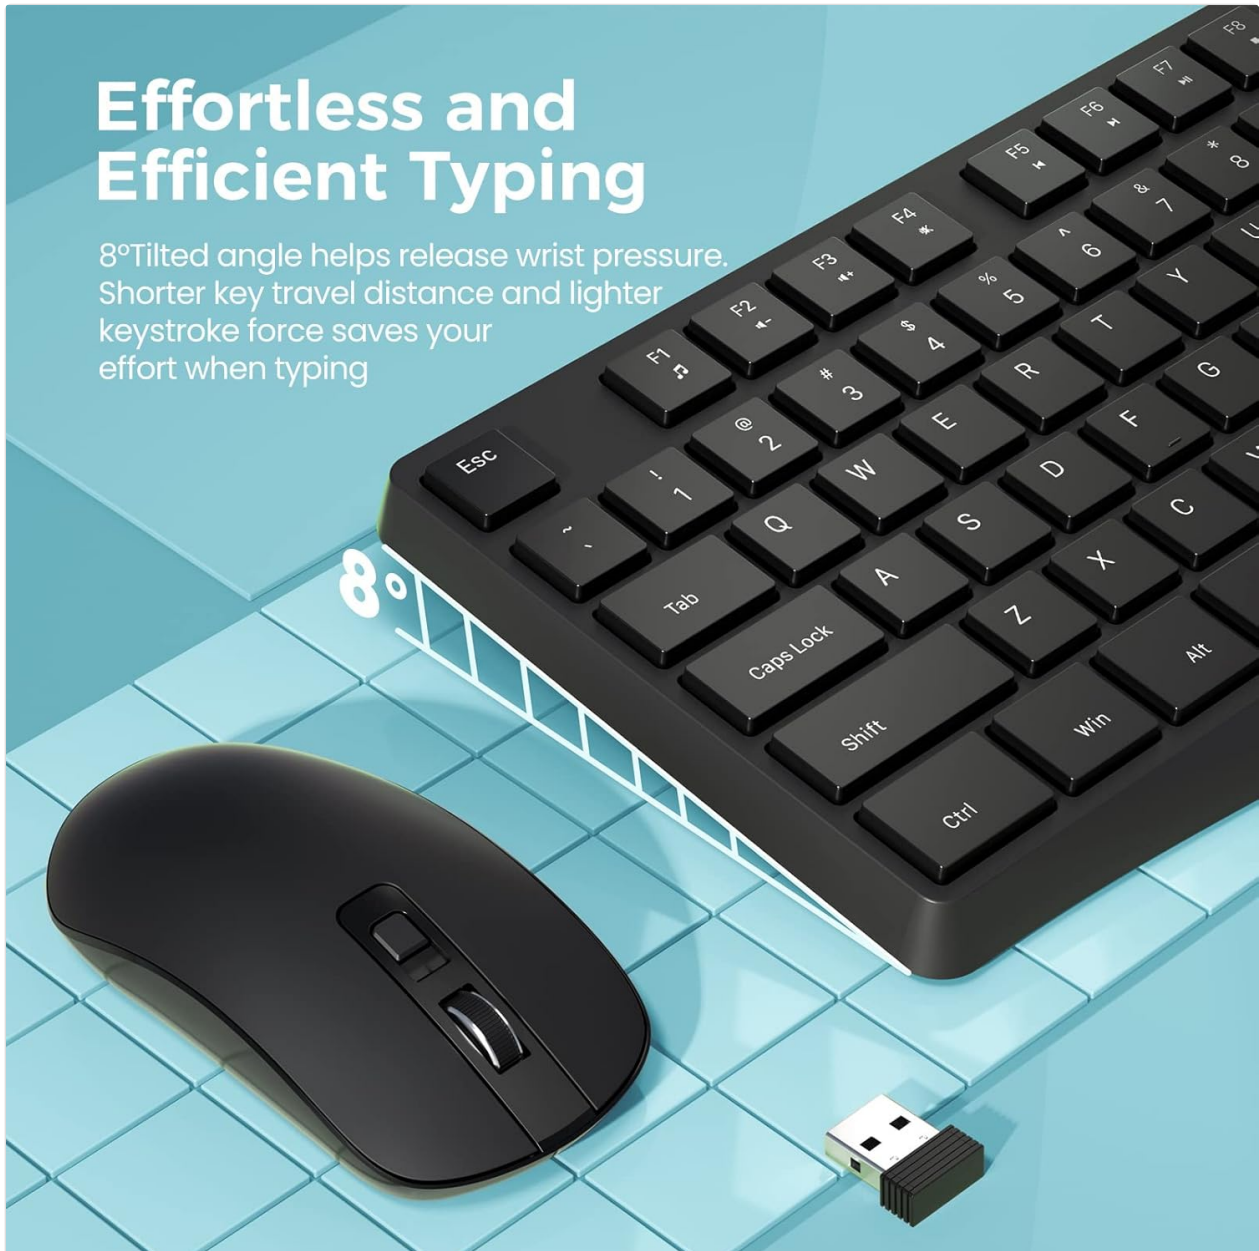


Image: A close-up of the keyboard and mouse, highlighting the keyboard's 8-degree tilted angle, designed to reduce wrist pressure and enhance typing comfort.

the devices when not in use for extended periods to further save battery power.

- **Low Battery Indicator:** The keyboard features an LED indicator light that will flash to notify you when the battery level is low and requires replacement.



Image: A close-up of the keyboard's upper right section, showing the power switch and a red LED light indicating a low battery status.

When new batteries are inserted and the devices connect normally, the red power light will flash for 5-8 seconds and then turn off. If the computer is not connected, the light may stay on for a moment before turning off. In low battery mode, pressing any key will cause the red power light to flash.

TROUBLESHOOTING

Delayed Response or Malfunction

If your keyboard or mouse experiences delayed response or is not working properly, it may be due to a connection abnormality. Follow these steps to re-establish the connection:

The keyboard / mouse response is delayed & not working properly, how can I fix it?

This situation may be a connection abnormality, and the solution is as follows:

Keyboard:

1. Remove the battery from the keyboard and the receiver from the computer.
2. Reinsert the battery into the keyboard and the receiver into the computer jack.
3. At a distance of 20 cm from the receiver, press the ESC+Q keys on the keyboard for 3-5 seconds to match the code.



Mouse:

1. Remove the battery from the mouse and the receiver from the computer.
2. Reinsert the battery into the mouse and the receiver into the computer jack.
3. At a distance of 20 cm from the receiver, press the right mouse button and the scroll wheel button simultaneously for 3 to 5 seconds to match the code.

After successful pairing, it can be used normally.

Note: If it still fail, please contact our service team to work for you.

Image: A graphic detailing troubleshooting steps for keyboard and mouse connection issues, with icons representing questions and solutions.

For the Keyboard:

1. Remove the battery from the keyboard and the USB receiver from the computer.
2. Reinsert the battery into the keyboard and the receiver into the computer's USB port.
3. At a distance of approximately 20 cm (8 inches) from the receiver, press the **ESC + Q** keys on the keyboard simultaneously for 3-5 seconds to match the code.

For the Mouse:

1. Remove the battery from the mouse and the USB receiver from the computer.
2. Reinsert the battery into the mouse and the receiver into the computer's USB port.
3. At a distance of approximately 20 cm (8 inches) from the receiver, press the **right mouse button** and the **scroll wheel button** simultaneously for 3-5 seconds to match the code.

After successful pairing, the device can be used normally. If the issue persists, please contact our service team for further assistance.

Other Potential Issues:

- **Insufficient Battery Power:** Replace the keyboard/mouse batteries with fresh ones.
- **Computer Jam:** Restart your computer and try again.
- **Distance/Obstructions:** Ensure the devices are within 33 feet (10 meters) of the receiver and that there are no metal obstructions between them.

SPECIFICATIONS

Feature	Detail
Brand	Lovaky
Model Number	230
Connectivity Technology	2.4G Radio Frequency Wireless
Keyboard Layout	104-Key Full-Sized US QWERTY
Mouse DPI Settings	800, 1200, 1600
Keyboard Dimensions	17.14 x 5.55 x 0.88 inches (43.5 x 14.1 x 2.2 cm)
Mouse Dimensions	2.44 x 4.53 x 1.26 inches (6.2 x 11.5 x 3.3 cm)
Item Weight	1.5 pounds (combined)
Keyboard Battery	1 x AAA (not included)
Mouse Battery	2 x AAA (not included)
Compatible Devices	PC, Desktop, Laptop, Notebook
Operating Systems	Windows XP / Vista / 7 / 8 / 10

WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact the Lovaky customer service team. Refer to the contact information provided with your purchase or visit the official Lovaky website for support details.

It is recommended to retain your purchase receipt for warranty purposes.