

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Corioliss](#) /

> [Corioliss C3 Professional Titanium Hair Straightener Instruction Manual](#)

Corioliss C3

Corioliss C3 Professional Titanium Hair Straightener Instruction Manual

Model: C3 | Brand: Corioliss

1. PRODUCT OVERVIEW

The Corioliss C3 Professional Titanium Hair Straightener is designed for versatile hair styling, allowing you to straighten, curl, wave, twist, and flick hair. It features extra-long, ultra-soft tilting titanium plates for efficient styling. The integrated digital temperature control offers four heat stages, ensuring precise heat management for various hair types and professional treatments.



Image 1: Corioliss C3 Hair Straightener highlighting its key features: titanium plates, professional finish, and temperature control.

- **Titanium Plates:** Extra-long, ultra-soft tilting plates for smooth gliding and versatile styling.

- **Temperature Control:** Integrated digital control with 4 heat stages (275°F, 356°F, 410°F, 455°F) and locking buttons to prevent accidental changes. Heats up in 20 seconds.
- **Advanced Technology:** Features nanotechnology of silver particles, integrated far infrared, and negative ion technology for enhanced hair care.
- **Safety Features:** Automatic safety sleep mode activates after 120 minutes of inactivity.
- **Travel-Friendly:** Dual voltage circuitry and a travel pouch are included for convenience.
- **Cord Design:** 3-meter style cord with a 360° swivel base for flexible use.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the Corioliss C3 Hair Straightener to prevent injury or damage.

- **Burn Hazard:** Surfaces become extremely hot during use. Avoid direct contact with skin.
- **Electric Shock Risk:** Keep the appliance away from water. Do not use near bathtubs, sinks, or other water sources.
- **Fire Risk:** Unplug the straightener when not in use. Do not leave it unattended when plugged in.
- **Child Safety:** Keep out of reach of children.

3. SETUP AND FIRST USE

1. **Unboxing:** Carefully remove the Corioliss C3 Hair Straightener and all accessories from its packaging.
2. **Inspect:** Check the appliance and cord for any signs of damage. Do not use if damaged.
3. **Power Connection:** Plug the straightener into a suitable electrical outlet. Ensure the voltage is compatible (dual voltage for travel).
4. **Heat Protection:** Place the straightener on a heat-resistant surface during use.



Image 2: The Corioliss C3 is designed for travel with dual voltage and includes a travel pouch.

Your browser does not support the video tag.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Temperature Selection

1. Press and hold the power button to turn on the straightener.
2. Use the temperature control buttons to select your desired heat setting. The C3 offers 4 stages:
 - 275°F (135°C) - For fine or damaged hair.
 - 356°F (180°C) - For normal hair.
 - 410°F (210°C) - For thick or coarse hair.
 - 455°F (235°C) - For professional treatments or very resistant hair.
3. The digital display will indicate the selected temperature. The straightener heats up in approximately 20 seconds.
4. To lock the temperature setting during styling, press the lock button. Press again to unlock.



Image 3: Close-up of the Corioliss C3's integrated digital temperature control and infrared heat technology.

4.2 Styling Your Hair

Ensure hair is clean, dry, and free of tangles before styling. For best results and hair protection, apply a heat protectant spray.

1. Divide your hair into small, manageable sections.
2. **For Straightening:** Place a section of hair between the plates, close the plates gently, and glide the straightener slowly from roots to ends. Repeat if necessary, but avoid excessive passes to minimize heat exposure.
3. **For Curling/Waving:**
 - Place a section of hair between the plates near the roots.
 - Rotate the straightener 180 degrees away from your face.

- Slowly pull the straightener down the hair shaft, maintaining the rotation.
 - Release the hair and allow the curl to cool before touching for better hold.
4. After styling, press and hold the power button to turn off the straightener. Unplug the appliance and allow it to cool completely before storing.



Image 4: The Corioliss C3 can create both wavy and straight hair looks.

Your browser does not support the video tag.

Video 2: Demonstration of how to achieve both wavy and straight hairstyles using the Corioliss C3.

5. MAINTENANCE AND CARE

- **Cleaning:** Ensure the straightener is unplugged and completely cool before cleaning. Wipe the plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** Store the cooled straightener in its travel pouch in a dry, safe place, away from moisture and extreme temperatures.

- **Cord Care:** Do not wrap the power cord tightly around the appliance, as this can damage the cord. Avoid twisting or kinking the cord.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Straightener does not heat up.	Not plugged in correctly, power outlet issue, or internal fault.	Ensure the straightener is securely plugged in. Test the outlet with another appliance. If the issue persists, contact customer support.
Hair is not straightening or curling effectively.	Incorrect temperature setting, hair not dry, or sections too large.	Increase temperature if hair is resistant. Ensure hair is completely dry. Work with smaller sections of hair.
Temperature changes accidentally during use.	Temperature lock feature not activated.	Activate the temperature lock feature by pressing the designated button after setting your desired temperature.

7. SPECIFICATIONS

Feature	Detail
Model	C3
Plate Material	Titanium
Temperature Settings	4 stages: 275°F, 356°F, 410°F, 455°F
Heat-up Time	20 seconds
Auto Shut-off	120 minutes (safety sleep mode)
Cord Length	3 meters (approx. 9.8 feet)
Swivel Cord	360° swivel base
Voltage	Dual Voltage (for worldwide use)
Product Dimensions	11 x 1 x 1 inches
Weight	2.2 Pounds

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Corioliss website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Corioliss

Contact: Please visit [Corioliss Store on Amazon](#) for further assistance or product information.



