

Satisfyer 360356

Satisfyer Elastic Joy Multi-Use Vibrator Instruction Manual

Model: 360356

INTRODUCTION

Thank you for choosing the Satisfyer Elastic Joy Multi-Use Vibrator. This device is designed for versatile personal pleasure, offering a flexible form factor and multiple vibration settings for various stimulation experiences. Please read this manual carefully before first use to ensure safe and optimal operation.



Image: The Satisfyer Elastic Joy Multi-Use Vibrator in its straight, unbent form. This flexible device is designed for various types of stimulation.

SAFETY INFORMATION

- This product is intended for adult use only.
- Consult a healthcare professional before use if you have any medical conditions or concerns.
- Discontinue use immediately if you experience any discomfort or pain.
- Do not use with damaged skin or open wounds.
- Keep out of reach of children.
- Use only water-based lubricants with this product. Oil-based lubricants may damage the material.
- Do not expose the device to extreme temperatures or direct sunlight for prolonged periods.

PRODUCT OVERVIEW

The Satisfyer Elastic Joy features a highly flexible design that allows it to be bent into various shapes for diverse applications. It is equipped with two powerful motors, one in each tip, offering independent control over vibration settings.

Key Features:

- **Multi-Use Design:** Adaptable for various forms of stimulation, including U-shaped partner vibrator, cock ring, or a lay-on vibrator.
- **Dual Motors:** Two independently controllable motors, each with 7 vibration rhythms and 3 additional intensities, totaling 10 settings per motor. This allows for up to 100 different vibration combinations.
- **Flexible Shape:** The device maintains its bent shape once adjusted, providing customized comfort and targeting.
- **Waterproof (IPX7):** Suitable for use in the shower or bath, protected against immersion in water up to 1 meter deep for up to 30 minutes.
- **Rechargeable:** Integrated rechargeable batteries for convenient and environmentally friendly power.



Image: The Satisfyer Elastic Joy bent into a U-shape, demonstrating its flexible design for various uses.

SETUP AND FIRST USE

Charging:

1. Before first use, fully charge the device.
2. Locate the magnetic charging contacts on the device.
3. Connect the magnetic USB charging cable (provided) to the device's charging contacts. Ensure a secure connection.
4. Plug the USB end of the cable into a standard 5V USB power adapter (not included) or a computer's USB port.
5. The indicator light on the device will illuminate or flash to indicate charging. Refer to the device's specific light patterns for charging status (e.g., solid light for fully charged, flashing for charging).
6. A full charge typically takes approximately 2-3 hours.

Cleaning Before First Use:

Clean the device thoroughly before its initial use. Refer to the "Cleaning and Maintenance" section for detailed instructions.

OPERATING INSTRUCTIONS

Power On/Off:

- To turn on, press and hold the power button (usually the largest or central button) for 2-3 seconds.
- To turn off, press and hold the power button again for 2-3 seconds.

Adjusting Vibration Settings:

The Elastic Joy features two independent motors, each with its own control buttons. There are typically two smaller buttons near the power button, one for each motor's settings.

- Press the respective motor control button to cycle through the 7 vibration rhythms and 3 intensity levels for that specific motor.
- Experiment with different combinations by adjusting each motor independently to find your preferred sensation.

Using the Flexible Design:

Gently bend the device into the desired shape. The internal structure is designed to hold its form once adjusted. Common configurations include:

- **U-Shape:** For partner play or clitoral/perineal stimulation.
- **Straight/Slightly Curved:** For targeted G-spot or external stimulation.
- **Cock Ring:** The flexible body can be shaped to fit as a cock ring.



Image: Two Satisfyer Elastic Joy devices, one straight and one bent into a complex shape, illustrating the product's extreme flexibility.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance are essential for hygiene and extending the lifespan of your device.

1. Always clean the device before and after each use.
2. Wash the device with warm water and a mild, toy-specific cleaner or antibacterial soap.
3. Rinse thoroughly with clean water to remove all soap residue.
4. Dry the device completely with a lint-free cloth or allow it to air dry.
5. Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the material.

6. The device is waterproof (IPX7), allowing for easy cleaning under running water.

STORAGE

- Store the device in a clean, dry, and dust-free environment.
- Keep it away from direct sunlight and extreme temperatures.
- Avoid storing with other toys made of different materials, especially those containing silicone, to prevent material degradation or reactions. Store in a separate pouch or compartment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.
Device does not charge.	Charging cable not properly connected or faulty.	Ensure the magnetic contacts are clean and securely connected. Try a different USB power source. If issues persist, contact customer support.
Buttons are unresponsive.	Device may be locked or experiencing a temporary software glitch.	Try turning the device off and on again. Ensure it is fully charged.

SPECIFICATIONS

Feature	Detail
Model Number	360356
Dimensions (L x W x H)	19.9 x 3.3 x 2.4 cm
Weight	70 g
Battery	1 Lithium Ion (rechargeable, included)
Water Resistance	IPX7 (Waterproof up to 1 meter for 30 minutes)
Vibration Settings	2 independently controllable motors, each with 7 rhythms and 3 intensities (10 settings per motor, 100 combinations total)
Care Instructions	Hand Wash

WARRANTY AND DISPOSAL

Warranty:

The Satisfyer Elastic Joy comes with a 15-year warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Satisfyer website or contact customer support.

Disposal:

This product contains a rechargeable lithium-ion battery and electronic components. Do not dispose of it with household waste. Please follow local regulations for the disposal of electronic waste and batteries. Contact your local waste management authority for information on recycling options.

IMPORTANT INFORMATION

Actual product packaging and materials may contain more and different information than what is presented in this manual. We recommend that you do not rely solely on the information presented here and that you always read labels, warnings, and directions provided with the physical product before using or consuming it.