

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LG](#) /

> [LG S3MFC Clothing Care System/Styler User Manual](#)

LG S3MFC

LG S3MFC Clothing Care System/Styler User Manual

Model: S3MFC

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your LG S3MFC Clothing Care System/Styler. Please read this manual thoroughly before using the appliance and retain it for future reference.

The LG S3MFC Styler is designed to refresh, sanitize, and gently dry your garments using advanced TrueSteam technology and a moving hanger system. It helps reduce allergens, odors, and wrinkles, providing a convenient solution for clothing care at home.

2. SAFETY INFORMATION

For your safety and to prevent damage to the appliance, always adhere to the following precautions:

- Ensure the appliance is connected to a grounded power outlet.
- Do not operate the Styler with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.
- Use only pure water in the water tank. Do not add detergents, perfumes, or other chemicals.
- Avoid placing flammable materials near the Styler.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the Styler for any shipping damage. Report any damage to your retailer immediately.

3.2 Placement

Position the Styler on a firm, level surface. Ensure there is adequate space around the unit for ventilation (at least 10 cm on sides and back). Avoid direct sunlight or heat sources. The appliance should be placed indoors, away from moisture.



Figure 1: Front view of the LG S3MFC Clothing Care System/Styler. This image shows the sleek, mirror-finish design of the appliance, indicating its compact and modern aesthetic suitable for various home environments.

3.3 Power Connection

Plug the power cord into a dedicated, grounded 220-240V, 50/60Hz electrical outlet. Do not use extension cords or adapters.

3.4 Water Tank Preparation

Locate the water supply tank and the drain tank. Fill the water supply tank with pure, distilled water up to the indicated maximum fill line. Ensure the drain tank is empty before starting operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel is located on the front of the Styler and features touch-sensitive buttons and a digital display.



Figure 2: Close-up view of the LG S3MFC Styler's control panel. This image highlights the touch-sensitive buttons for various functions such as Refresh, Special Care, Sanitary, Gentle Dry, Delay Start, and the digital display showing cycle status and time.

4.2 Loading Garments

Open the Styler door. Hang garments on the included hangers, ensuring they are evenly spaced and do not touch the bottom or sides of the unit. For pants, use the dedicated pants press on the inside of the door.

4.3 Selecting a Cycle

Press the Power button () to turn on the Styler. Select the desired cycle from the available options on the control panel:

- **Refresh:** For everyday garments to remove odors and light wrinkles. Options include Normal, Light, and Downloaded.
- **Special Care:** For delicate fabrics or specific items like Suits/Coats, Steaming, Pants Crease, Bedding.
- **Sanitary:** For sanitizing items, reducing allergens and bacteria. Options include Normal, Heavy Duty, Kid's Item.
- **Gentle Dry:** For low-temperature drying of delicate items. Options include Normal, Rain/Snow, Dehumidify.

4.4 Starting a Cycle

After selecting a cycle, press the Start/Pause button () to begin operation. The display will show the remaining cycle time.

4.5 Delay Start Function

To delay the start of a cycle, select your desired cycle, then press the Delay Start button repeatedly to set the

desired delay time. Press Start/Pause to confirm.

4.6 SmartThinQ (Wi-Fi) Connectivity

The Styler supports SmartThinQ for remote control and cycle download. Refer to the LG SmartThinQ application manual for detailed setup and usage instructions.

5. MAINTENANCE AND CLEANING

5.1 Water Tank Cleaning

Regularly empty the drain tank after each use. Clean both the water supply and drain tanks periodically to prevent mineral buildup. Rinse with clean water and allow to air dry.

5.2 Exterior Cleaning

Wipe the exterior surfaces of the Styler with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.3 Interior Cleaning

Wipe the interior of the Styler with a soft, damp cloth as needed. Ensure the moving hanger rail is free from obstructions.

6. TROUBLESHOOTING

If you encounter issues with your LG S3MFC Styler, refer to the following common problems and solutions:

- **Styler does not power on:** Check if the power cord is securely plugged into a functional outlet.
- **Cycle does not start:** Ensure the door is fully closed. Check if the water supply tank is filled and the drain tank is empty.
- **Error code displayed:** Note the error code and consult the full LG service manual or contact customer support for assistance.
- **Poor performance (wrinkles/odors not removed):** Ensure garments are not overloaded. Check water tank levels. Select an appropriate cycle for the fabric type.

For issues not listed here or if problems persist, contact LG Customer Support.

7. SPECIFICATIONS

Feature	Detail
Brand	LG
Model Name	S3MFC
Form Factor	Styler
Access Location	Front Door
Color	Mirror

Manufacturer	LG
ASIN	B09KCDYL4H
First Available Date	25 October 2021

8. WARRANTY AND SUPPORT

Your LG S3MFC Clothing Care System/Styler is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service inquiries, or to locate an authorized service center, please visit the official LG website or contact LG Customer Service.

LG Customer Support: www.lg.com/sg/support