

Satisfyer 4003382

Satisfyer Top Secret Connect App Vibrator User Manual

Model: 4003382

[Introduction](#) [Safety Information](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the Satisfyer Top Secret Connect App Vibrator. This device is designed for targeted G-spot stimulation, offering a discreet, silent, and powerful experience. It features Bluetooth connectivity for app control, allowing for a wide range of vibration programs and interactive possibilities. This manual provides essential information for safe and effective use, including setup, operation, maintenance, and troubleshooting.



Image: The Satisfyer Top Secret Connect App Vibrator in its primary product view.

2. SAFETY INFORMATION

- **Material Safety:** The device is made of medical-grade silicone. Clean thoroughly before and after each use with warm water and a mild, toy-friendly cleaner.
- **Charging:** Use only the provided USB charging cable. Do not use the device while it is charging. Ensure the charging port is dry before connecting the cable.
- **Water Resistance:** The device is waterproof (IPX7) and can be used in the shower or bath. However, avoid submerging it for extended periods or at depths greater than 1 meter.
- **Storage:** Store in a clean, dry place away from direct sunlight and extreme temperatures. Keep out of reach of children.
- **Discontinue Use:** If you experience any discomfort, irritation, or pain during use, discontinue immediately and consult a healthcare professional.
- **Battery:** Contains a rechargeable battery. Do not attempt to open or replace the battery. Dispose of the device responsibly according to local regulations.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your Satisfyer Top Secret device. Connect the provided USB charging cable to the magnetic charging points on the device and to a USB power source. The LED indicator light will illuminate during charging and turn off or change color when fully charged. A full charge typically takes a few hours.

3.2 App Installation

To unlock the full potential of your device, download the free Satisfyer Connect App from your smartphone's app store (iOS or Android). Search for "Satisfyer Connect".

3.3 Bluetooth Pairing

1. Ensure your device is charged and turned off.
2. Open the Satisfyer Connect App on your smartphone.
3. On the device, press and hold the Bluetooth button (often indicated by a Bluetooth icon or a specific control button) for approximately 5 seconds until you feel a double pulse. The LED light will start flashing, indicating it is ready for pairing.
4. Follow the on-screen instructions in the Satisfyer Connect App to connect to your device. Once connected, the LED light on the device may change to a solid color or stop flashing.



Image: The Satisfyer Top Secret device held in hand, showing the power, program, and Bluetooth buttons with their functions.

4. OPERATING INSTRUCTIONS

4.1 Basic Device Operation

- **Power On/Off:** Press and hold the Power button for 2 seconds to turn the device on or off.
- **Change Programs:** While the device is on, press the Programs button to cycle through the 12 built-in vibration programs.

4.2 App Control

Once connected via Bluetooth to the Satisfyer Connect App, you can control the device remotely and access additional features:

- **Remote Control:** Use your smartphone as a remote to adjust vibration intensity and patterns.
- **Vibration Creator:** Design and save your own custom vibration patterns.
- **Playlist Vibration:** Sync vibrations to your favorite music.
- **Partner Control:** Allow a partner to control your device remotely through the app.
- **Stories & Meditation:** Explore guided experiences and audio content.

4.3 Waterproof Use

The Satisfyer Top Secret is IPX7 waterproof, making it suitable for use in wet environments such as the shower or bath. Ensure the charging port is completely dry before charging after water exposure.

Satisfyer

Why you will love it:



Image: The Satisfyer Top Secret device covered in water droplets, demonstrating its waterproof capability.

5. MAINTENANCE

5.1 Cleaning

To ensure hygiene and prolong the life of your device, clean it thoroughly after each use:

- Wash the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow it to air dry completely before storing.
- Do not use alcohol-based cleaners, petroleum-based lubricants, or harsh chemicals, as these can damage the silicone material.

5.2 Storage

Store your Satisfyer Top Secret in a clean, dry, and dust-free environment. Keep it away from direct sunlight, extreme temperatures, and other sex toys made of different materials to prevent potential damage or reactions.

6. TROUBLESHOOTING

6.1 Device Not Turning On or Vibrating

- **Check Battery:** Ensure the device is fully charged. Connect it to the charger and wait for the LED indicator to confirm charging.
- **Power Button:** Make sure you are pressing and holding the power button for the required 2 seconds.

6.2 Bluetooth Connectivity Issues

Users have reported occasional difficulties maintaining a stable Bluetooth connection. If you experience issues:

- **Re-pair Device:** Try unpairing the device from the app and your phone's Bluetooth settings, then re-pair it following the instructions in Section 3.3.
- **App Restart:** Close and restart the Satisfyer Connect App.
- **Device Proximity:** Ensure your smartphone is close to the device (within a few feet) for optimal connection. Obstacles like clothing or walls can interfere with the signal.
- **Phone Bluetooth:** Turn your phone's Bluetooth off and on again.
- **App Updates:** Ensure your Satisfyer Connect App is updated to the latest version.

6.3 Charging Problems

- **Correct Cable:** Ensure you are using the original magnetic USB charging cable provided with the device. Generic cables may not be compatible.
- **Port Dryness:** Verify that the charging contacts on both the device and the cable are clean and completely dry before connecting.
- **Power Source:** Try a different USB power source (e.g., a different wall adapter or computer USB port).

7. SPECIFICATIONS

Model Number	4003382
Dimensions (L x W x H)	11 x 8.85 x 4.35 cm
Weight	78 grams
Material	Silicone
Color	Rose
Water Resistance	IPX7 (Waterproof)
Battery Type	Rechargeable (1 AAA included)
Connectivity	Bluetooth, Satisfyer Connect App
Included Components	1 x Satisfyer Top Secret, 1 x USB Charging Cable

8. WARRANTY

Satisfyer offers a 15-year warranty on this product, ensuring long-lasting satisfaction and reliable performance. For detailed warranty terms and conditions, please refer to the official Satisfyer website or contact customer support.



Image: An icon representing the 15-year warranty offered by Satisfyer.

9. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Satisfyer Top Secret Connect App Vibrator, please visit the official Satisfyer website for FAQs, support resources, or to contact their customer service team directly. Please have your model number (4003382) ready when contacting support.