



Manuals.plus /

- › Emerio /
- › Emerio WK-122730 Glass Kettle with Temperature Selection - Instruction Manual

Emerio WK-122730

Emerio WK-122730 Glass Kettle with Temperature Selection - Instruction Manual

Model: WK-122730

INTRODUCTION

Thank you for choosing the Emerio WK-122730 Glass Kettle. This appliance is designed for efficient water heating and tea preparation, offering precise temperature control and a convenient integrated tea infuser. Please read this manual carefully before first use to ensure safe and optimal operation.



Image: The Emerio WK-122730 glass kettle with its integrated tea infuser, filled with tea, on a wooden surface.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Place the kettle on a stable, flat, heat-resistant surface, away from hot surfaces or open flames.
- Do not fill above the maximum level indicator to prevent boiling water from overflowing.
- Always close the lid securely before operating.
- Unplug the kettle from the outlet when not in use and before cleaning.
- The kettle is equipped with an automatic shut-off and boil-dry protection for safety.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the maximum level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: The Emerio WK-122730 glass kettle resting on its 360-degree rotating power base, illustrating ease of placement.

OPERATING INSTRUCTIONS

Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the minimum (0.5L) or above the maximum (1.7L) mark.
3. Close the lid firmly.

Using the Tea Infuser

The kettle features a removable stainless steel tea infuser for brewing loose leaf tea directly.

1. After filling with water, open the infuser basket and add your desired amount of loose leaf tea.
2. Close the infuser basket and place it securely into the kettle.
3. Proceed with temperature selection and heating.
4. Once brewing is complete, carefully remove the infuser using its handle to prevent over-steeping.

Integrierter Teefilter

Bereite mühelos
aromatischen Tee zu.



Image: A person demonstrating the placement of the tea infuser into the Emerio WK-122730 glass kettle.

Temperature Selection and Heating

The kettle offers 5 preset temperature options for various beverages.

1. Place the filled kettle onto the power base.
2. Press the temperature selection button (often marked with a thermometer icon or temperature values) repeatedly to cycle through the available temperatures: **50°C, 70°C, 80°C, 90°C, 100°C**. The selected temperature will be indicated by an illuminated LED.
3. Press the power button (often marked with an 'On/Off' symbol) to start the heating process.
4. The LED lighting inside the kettle will change color according to the water temperature, providing a visual indication of the heating progress.
5. Once the selected temperature is reached, the kettle will automatically switch off.

Bedienung mit nur einem Klick



Einfache Bedienung mit
nur einem Tastendruck.

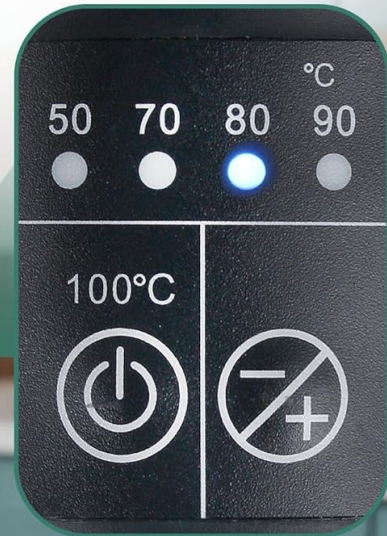


Image: A close-up of the control panel on the Emerico WK-122730 kettle, showing temperature selection buttons and power button.

Farbwechselnde Beleuchtung

Zeigt dir sofort die Temperatur deines Wassers an.



50°C



70°C



80°C



90°C



100°C

Image: Multiple views of the Emerio WK-122730 glass kettle, illustrating the color-changing LED illumination for 50°C, 70°C, 80°C, 90°C, and 100°C.

Keep Warm Function

The kettle includes a keep-warm function. After reaching the selected temperature, the kettle can maintain this temperature for a certain period. Refer to the specific product documentation for the exact duration of the keep-warm function.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

3. **Interior Cleaning:** For general cleaning, rinse the interior with clean water.
 4. **Tea Infuser Cleaning:** Remove the tea infuser and rinse it under running water. Use a small brush if necessary to remove tea leaves. It is dishwasher safe.
 5. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.
 - Discard the mixture and rinse the kettle thoroughly several times with fresh water to remove any residue and odor.
- **Storage:** When not in use, store the kettle in a dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	No power supply; Kettle not properly placed on base; Boil-dry protection activated.	Check power outlet and plug; Ensure kettle is correctly seated on the base; Allow kettle to cool down, then refill with water.
Water has an unusual taste.	New appliance odor; Limescale buildup.	Perform initial cleaning steps (boil and discard water several times); Descale the kettle.
Kettle switches off before boiling/reaching selected temperature.	Limescale buildup; Faulty sensor.	Descal the kettle thoroughly; If problem persists, contact customer support.
LED lights not working.	Electrical malfunction.	Ensure kettle is powered on; If problem persists, contact customer support.

PRODUCT SPECIFICATIONS

Model Number: WK-122730

Capacity: 1.7 Litres

Power: 2200 Watts

Voltage: 220 Volts

Material: Borosilicate Glass, Stainless Steel, Plastic

Color: Silver

Special Features: BPA-free, Temperature Selection (50|70|80|90|100°C), Color-changing LED Interior Lighting, Keep Warm Function, Automatic Shut-off, Overheat Protection, Removable Stainless Steel Tea Infuser.

Item Weight: 1.42 Kilograms

Country of Origin: China

Kompakte Teezubereitung

Passt stilvoll in jede Küche.



Image: The Emerio WK-122730 glass kettle displaying its approximate height (27 cm) and base width (21.80 cm).



Image: A circular green logo indicating the product is BPA-free.

WARRANTY INFORMATION

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. Spare parts availability is typically 1 year from the date of purchase. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact the retailer or the manufacturer's customer service department. Contact details can usually be found on the product packaging or the manufacturer's official website.