

[Manuals.plus](#) /

› [SPENCER](#) /

› SPENCER DVD Instruction Manual

SPENCER B09KDZTR49

SPENCER DVD Instruction Manual

Model: B09KDZTR49

1. PRODUCT OVERVIEW

The SPENCER DVD presents an imagining of events during a critical period in Princess Diana's life. This film features Kristen Stewart as Princess Diana and is directed by Pablo Larraín. The narrative focuses on the Christmas festivities at the Queen's Sandringham Estate, exploring the personal struggles within the royal family.

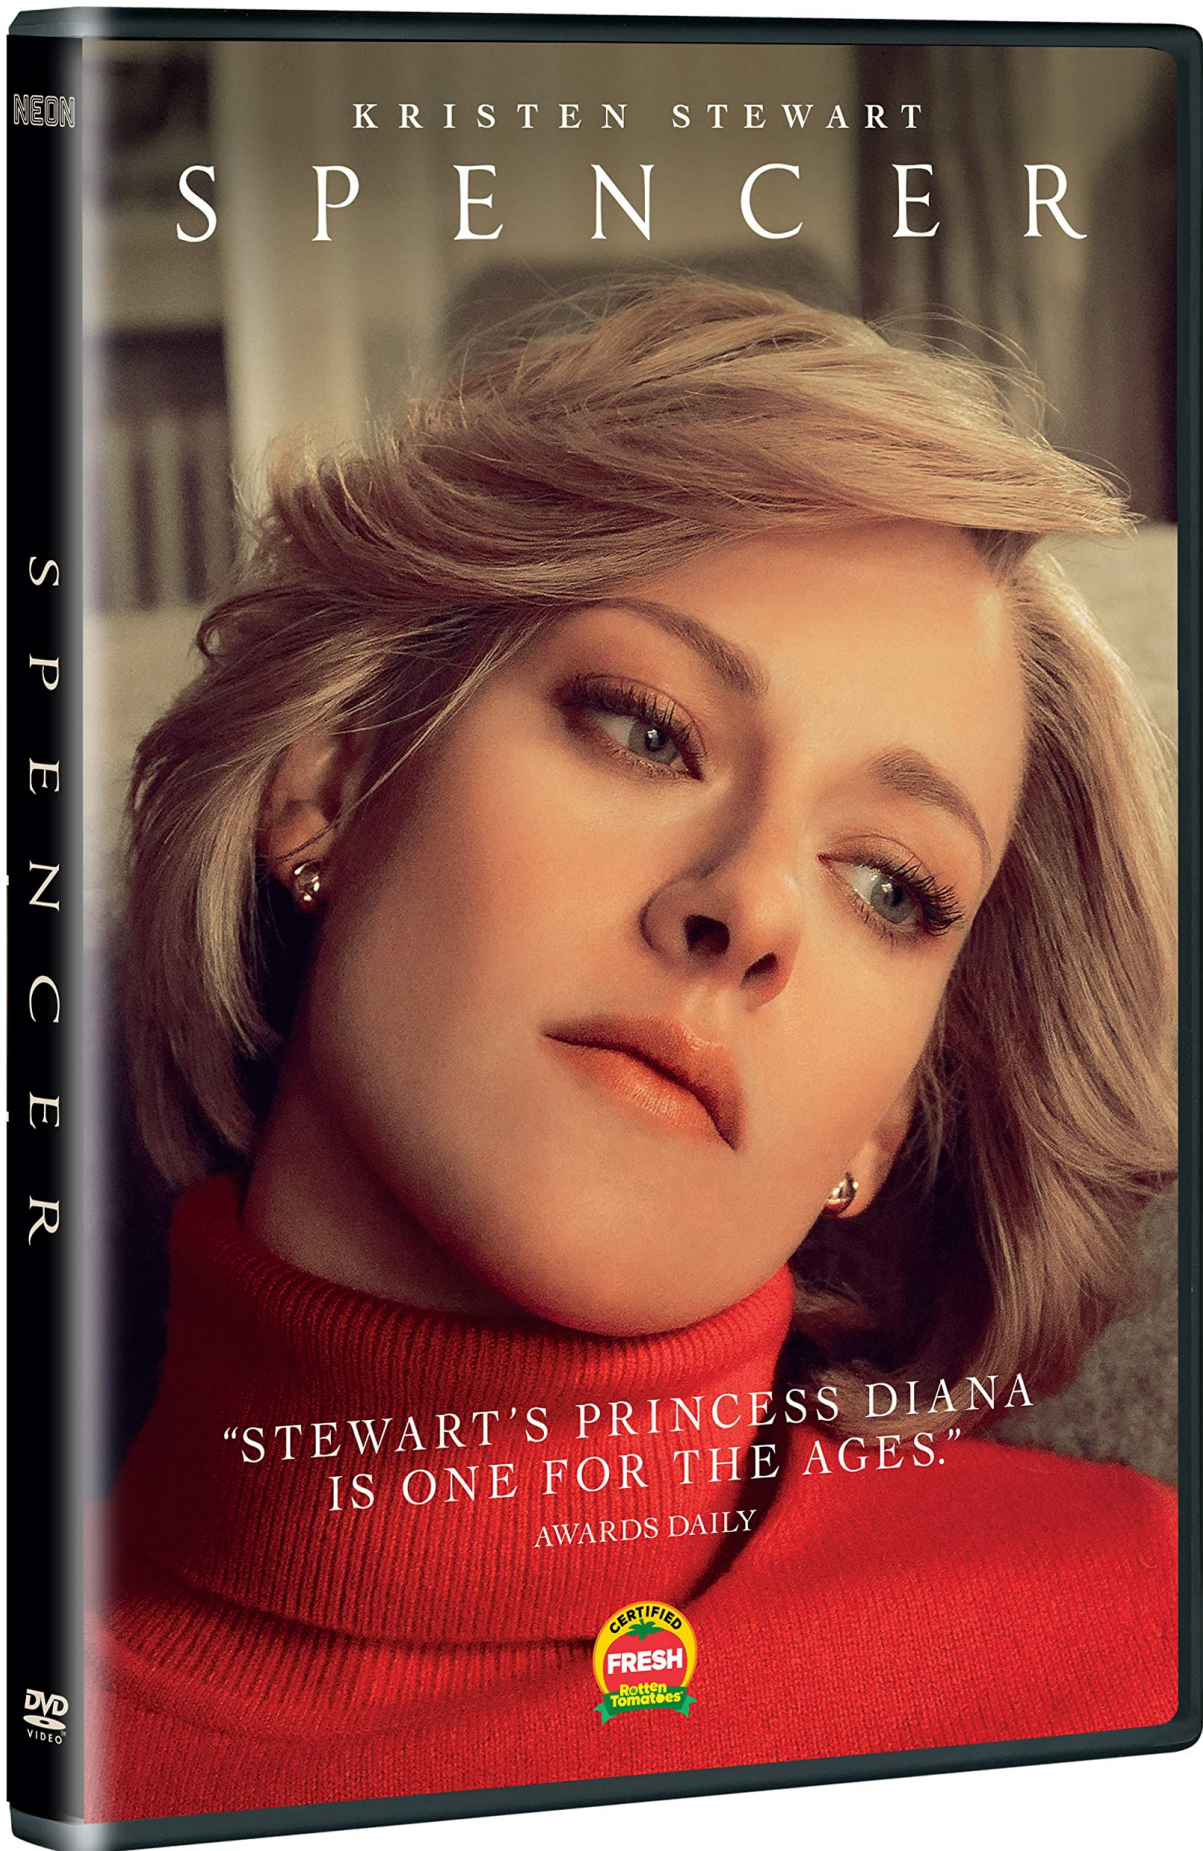


Image 1.1: Front cover of the SPENCER DVD, showing Kristen Stewart in character.

The DVD includes the main feature film with a runtime of 1 hour and 51 minutes. It is presented in NTSC format with English language audio and English subtitles.



Image 1.2: Back cover of the SPENCER DVD, detailing the plot and cast.

2. SETUP

To begin watching the SPENCER DVD, follow these steps:

1. **Unpack the DVD:** Carefully remove the DVD disc from its packaging. Handle the disc by its edges to avoid

fingerprints on the playing surface.

2. **Prepare your DVD Player:** Ensure your DVD player is connected to your television or display device according to its own instruction manual. Power on both the DVD player and the television.
3. **Insert the DVD:** Open the disc tray of your DVD player. Place the SPENCER DVD disc into the tray with the label side facing up. Close the disc tray.
4. **Select Input:** On your television, select the correct input source (e.g., HDMI 1, AV, Component) that corresponds to your DVD player's connection.

The DVD player should automatically detect the disc and display the main menu or begin playback.

3. OPERATING (PLAYBACK)

Once the DVD is loaded, use your DVD player's remote control to navigate and control playback.

3.1 Main Menu Navigation

- Use the **Arrow** buttons on your remote to highlight options on the DVD's main menu.
- Press the **Enter** or **OK** button to select a highlighted option (e.g., Play Movie, Scene Selection, Audio Settings).

3.2 Basic Playback Controls

- **Play (▶):** Starts or resumes playback of the movie.
- **Pause (⏸):** Temporarily stops playback. Press Play to resume.
- **Stop (■):** Stops playback and returns to the main menu or the beginning of the disc.
- **Fast Forward (▶▶):** Advances playback quickly. Press Play to resume normal speed.
- **Rewind (◀◀):** Rewinds playback quickly. Press Play to resume normal speed.
- **Skip (▶| or ◀|):** Jumps to the next or previous chapter/scene.

3.3 Audio and Subtitle Selection

The SPENCER DVD includes English audio and English subtitles.

- During playback, press the **Audio** or **Language** button on your remote to cycle through available audio tracks.
- Press the **Subtitle** or **CC (Closed Caption)** button on your remote to cycle through available subtitle options (On/Off).

4. MAINTENANCE

Proper care of your DVD will ensure its longevity and optimal playback performance.

4.1 Cleaning the Disc

- If the disc surface becomes dirty or smudged, gently wipe it with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in straight lines, not in a circular motion.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the disc.
- For stubborn dirt, a slightly dampened cloth with water can be used, followed by immediate drying with a clean, dry cloth.

4.2 Storage

- Always return the DVD to its original case after use to protect it from dust, scratches, and direct sunlight.

- Store the DVD case in a cool, dry place, away from extreme temperatures and humidity.
- Avoid exposing the disc to direct sunlight or heat sources, as this can cause warping.

5. TROUBLESHOOTING

If you encounter issues during playback, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. DVD player malfunction.	Clean the disc (see Section 4.1). Ensure the disc is inserted label-side up. Try the disc in another DVD player. Consult your DVD player's manual.
No audio or video during playback.	Incorrect TV input, loose cables, TV/player volume muted, or incorrect audio settings.	Verify TV input. Check all cable connections. Ensure TV and DVD player volume is up and not muted. Check audio settings on the DVD player and TV.
Video skips, freezes, or pixelates.	Disc is dirty, scratched, or damaged. DVD player lens is dirty.	Clean the disc thoroughly. Inspect the disc for deep scratches or damage. If the problem persists with other discs, your DVD player may need cleaning or servicing.
Cannot select desired language or subtitles.	Incorrect remote button used or feature not available.	Ensure you are using the correct 'Audio' or 'Subtitle' button on your remote. Confirm the desired language/subtitle is available on the disc (English audio and subtitles are available for this DVD).

6. SPECIFICATIONS

- **Title:** SPENCER
- **ASIN:** B09KDZTR49
- **MPAA Rating:** NR (Not Rated)
- **Director:** Pablo Larraín
- **Actors:** Kristen Stewart, Timothy Spall
- **Studio:** Decal - Neon
- **Media Format:** NTSC
- **Run Time:** 1 hour and 51 minutes
- **Release Date:** January 11, 2022
- **Number of Discs:** 1
- **Genre:** Drama
- **Language:** English
- **Product Dimensions:** 7.61 x 5.61 x 0.64 inches
- **Item Weight:** 2.72 ounces

7. WARRANTY INFORMATION

As a media product, the SPENCER DVD does not typically come with an extended manufacturer's warranty. However, it is subject to standard retail return policies for manufacturing defects. If you receive a defective disc,

please contact the retailer from whom you purchased the product within their specified return period for a replacement or refund.

8. SUPPORT

For technical issues related to your DVD player or television, please consult the instruction manual provided with those devices or contact their respective manufacturers for support.

For inquiries regarding the SPENCER DVD disc itself, such as manufacturing defects or content issues, please contact the retailer where the purchase was made. Provide your purchase details (date, order number, retailer name) when seeking assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question