

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CINEDIGM](#) /

› [RED STONE DVD Instruction Manual](#)

CINEDIGM B09KF2GS43

RED STONE DVD Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your RED STONE DVD. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This DVD contains the action and thriller film "RED STONE," directed by Derek Presley and starring Neal McDonough and Michael Cudlitz.

SETUP

To begin enjoying your RED STONE DVD, follow these steps:

1. **Connect your DVD Player:** Ensure your DVD player is correctly connected to your television or display device according to its manufacturer's instructions. This typically involves connecting video (HDMI, composite, component) and audio cables.
2. **Power On:** Turn on your television and DVD player. Select the correct input source on your television for the DVD player.
3. **Insert the DVD:** Gently open the DVD player's disc tray. Hold the RED STONE DVD by its edges to avoid touching the playback surface. Place the disc label-side up into the tray. Close the disc tray.

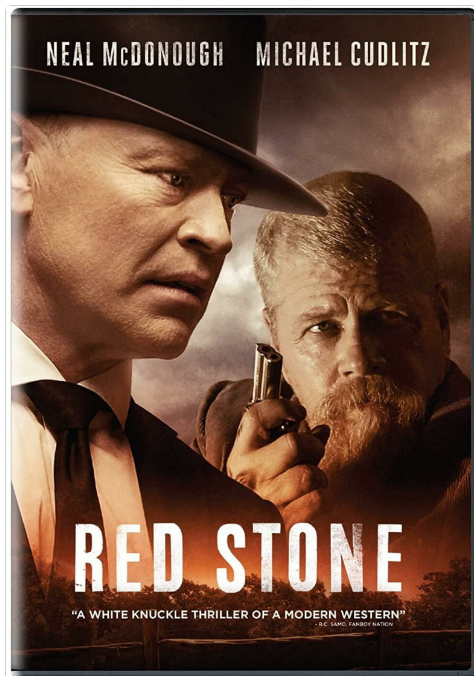


Image: The front cover of the RED STONE DVD, featuring the main actors.

OPERATING INSTRUCTIONS

Once the DVD is inserted and your player is powered on, the disc should load automatically. If not, press the 'Play' button on your DVD player or remote control.

- **Main Menu:** After loading, the DVD's main menu will typically appear. Use the arrow keys on your remote to navigate through options such as 'Play Movie', 'Scene Selection', 'Audio Options', and 'Subtitles'. Press 'Enter' or 'OK' to select an option.
- **Playing the Movie:** Select 'Play Movie' to start the film from the beginning.
- **Scene Selection:** If available, this option allows you to jump to specific chapters or scenes within the movie.
- **Audio Options:** Use this to select different audio tracks (e.g., English 5.1 Surround, English Stereo) if available.
- **Subtitles:** Select this option to turn subtitles on or off, or to choose a different subtitle language (e.g., English for the hearing impaired).
- **Playback Controls:** Use your remote's standard controls for playback:
 - **Play/Pause:** To start or temporarily stop the movie.
 - **Stop:** To end playback and return to the main menu or stop the disc.
 - **Fast Forward/Rewind:** To quickly advance or go back through the movie.
 - **Skip:** To jump to the next or previous chapter.



Image: A still from the RED STONE film, depicting two individuals inside a vehicle.

MAINTENANCE

Proper care of your DVD will ensure its longevity and consistent playback quality.

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Storage:** Store the DVD in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues while playing your RED STONE DVD, consider the following common solutions:

- **Disc Not Playing/Loading:**
 - Ensure the disc is inserted correctly (label side up).
 - Check if the disc is clean and free of scratches or smudges. Clean if necessary.
 - Verify your DVD player is functioning correctly by trying another known-good DVD.
 - Ensure your TV is on the correct input source.
- **Skipping or Freezing:**
 - Clean the disc thoroughly as described in the Maintenance section.
 - Check the disc for deep scratches or damage. Severely damaged discs may not play correctly.
 - Try playing the disc in another DVD player to rule out player issues.

- **No Audio or Video:**

- Check all audio and video cable connections between your DVD player and TV.
- Ensure your TV's volume is not muted and is turned up.
- Verify the correct audio track is selected from the DVD menu (if applicable).
- Restart your DVD player and TV.

SPECIFICATIONS

Title	RED STONE
Model Number (ASIN)	B09KF2GS43
Media Format	DVD, NTSC, Subtitled
MPAA Rating	NR (Not Rated)
Run Time	1 hour and 37 minutes
Number of Discs	1
Language	English
Subtitles	English
Director	Derek Presley
Actors	Alexandria DeBerry, Dash Melrose, Michael Cudlitz, Neal McDonough
Studio	CINEDIGM
Release Date	January 18, 2022
Genre	Action, Thriller

WARRANTY INFORMATION

As a media product, this DVD typically does not come with a manufacturer's warranty for playback issues unless the disc is found to be defective upon purchase. Please inspect the disc immediately upon receipt. For issues related to manufacturing defects, please contact your retailer within their specified return period.

CUSTOMER SUPPORT

For technical support regarding your DVD player, please refer to your DVD player's instruction manual or contact its manufacturer. For inquiries related to the RED STONE DVD content or manufacturing defects, please contact the retailer from whom you purchased the product. General information about the film can often be found on the studio's official website, CINEDIGM.