

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AMERLIFE](#) /

› [AMERLIFE EF-23 Fireplace TV Stand Instruction Manual](#)

AMERLIFE EF-23

AMERLIFE EF-23 Fireplace TV Stand Instruction Manual

Model: EF-23 | Brand: AMERLIFE

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your AMERLIFE EF-23 Fireplace TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper functionality.

IMPORTANT SAFETY INFORMATION

CAUTION: This product contains an electric fireplace that can cause burns if touched while in use. Keep children and pets away from the fireplace area. Always unplug the product before cleaning or performing any maintenance.

This product is a piece of furniture and can tip over if not properly assembled or used. Always follow the assembly instructions carefully. This product contains small parts that may pose a choking hazard to young children. Keep small parts out of reach of children.

PACKAGE CONTENTS

Your AMERLIFE EF-23 Fireplace TV Stand is shipped in two packages. Please ensure all parts and hardware are present before beginning assembly. Refer to the assembly video for visual identification of components.

Main TV Stand Components

- Top Panel (1)
- Back Panel (2)
- Side Panels (4, 5)
- Middle Vertical Panels (6, 7)
- Horizontal Support Panels (8, 9, 10, 11, 12, 15)
- Small Vertical Panels (13, 14, 16, 17, 18, 19, 20, 21, 22)

Electric Fireplace Unit

- Electric Fireplace Insert (V)
- Remote Control
- Mounting Brackets and Screws (U)
- Decorative Crystals

Hardware & Accessories

- Various Screws (A, B, D, E, H, K, M, N, P, Q)
- Wooden Dowels (C)
- Hinges (L)
- Anti-tip Brackets (G)
- LED Strip Light (W)
- Door Magnets (S)

ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow the steps below. It is recommended to have two people for assembly.

Your browser does not support the video tag.

Official AMERLIFE Fireplace TV Stand Assembly Video

Step 1: Assemble Base Frame

Attach screws (A) to panels (15) and (16). Insert wooden dowels (C) into panel (15). Connect panels (22) and (16) to panel (15) using screws (B). Repeat for the other side to form the base frame.

Step 2: Assemble Side Cabinets

Attach screws (D) to panels (6) and (10). Secure panel (10) to panel (6) using screws (D). Repeat for panels (7) and (11). Attach panel (21) to connect panels (6) and (7) using wooden dowels (C).

Step 3: Prepare Back Panels

Attach magnets (N) and screws (E) to panel (2). Insert screws (A) into panel (2). Attach panels (13) to panel (2) using wooden dowels (C) and screws (D).

Step 4: Connect Main Structure

Connect the assembled side cabinets (from Step 2) to the back panel (2) using screws (B). Insert wooden dowels (C) into panels (4) and (5). Attach hinges (L) to panels (8) and (9) using screws (A) and (E). Connect panels (8) and (9) to panels (4) and (5) respectively using wooden dowels (C) and screws (B).

Step 5: Install Shelves and Top Panel

Insert panels (14) into the side cabinet structures. Attach wooden dowels (C) to the top edges of the assembled structure. Carefully place the top panel (1) onto the dowels and secure with screws (B) from underneath. Ensure the LED strip (W) is attached to the underside of the top panel (1) using clips (F) and screws (E). Secure anti-tip brackets (G) to the top panel (1) with screws (E).

Step 6: Install Adjustable Shelves and Doors

Insert shelf pins (O) into the desired holes for adjustable shelves (20) in the side cabinets. Place shelves (20) onto the pins. Attach hinges (K) to doors (17) using screws (E). Attach handles (M) to doors (17) using screws (H). Mount doors (17) to the side cabinets using screws (E). Install door magnets (S) to ensure doors close securely.

Step 7: Install Electric Fireplace

Remove the front glass panel from the electric fireplace unit (V). Connect the internal wiring. Place the decorative crystals into the fireplace unit. Carefully insert the electric fireplace unit (V) into the central opening of the TV stand. Secure it with screws (U) on the sides. Reattach the front glass panel.

Step 8: Final Touches

Attach the LED strip power adapter (W) to a power source. Ensure all connections are secure and the unit is stable. The sliding barn doors can be moved to cover the side cabinets or the central fireplace opening as desired.

OPERATING INSTRUCTIONS

Your AMERLIFE EF-23 Fireplace TV Stand features an integrated electric fireplace with various settings for comfort and ambiance.



Remote Control



3 Levels of Brightness



Electric fireplace control panel and remote control for easy adjustments.

Electric Fireplace Features:

- **Power On/Off:** Use the power button on the control panel or remote to turn the unit on or off.
- **Heat Settings:** The 1400W electric fireplace provides supplemental zone heating for up to 400 square feet. Temperature can be adjusted from 65°F to 95°F in 5°F increments.
- **Flame Effect:** Enjoy realistic 3D flame effects with glowing logs and ember bed. The flame can be operated with or without heat.
- **Flame Brightness:** Choose from 3 levels of flame brightness (L1, L2, L3) to suit your preference.
- **Timer Function:** Set the built-in timer to automatically turn off the fireplace between 30 minutes and 8 hours.
- **Remote Control:** All functions can be conveniently controlled using the included remote.

LED Strip Lighting:

The integrated LED strip lighting in the open shelves can be controlled via its dedicated power adapter. Use the controls on the adapter to change colors or turn the lights on/off.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and fireplace.

Cleaning the TV Stand:

- Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- For stubborn marks, use a mild furniture cleaner.
- Ensure all surfaces are dry after cleaning.

Cleaning the Electric Fireplace:

- Always unplug the fireplace from the power outlet before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the air intake and exhaust vents regularly with a vacuum cleaner or soft brush to prevent dust buildup.
- Do not use abrasive cleaners or spray liquids directly onto the fireplace.

TROUBLESHOOTING

If you encounter any issues with your AMERLIFE EF-23 Fireplace TV Stand, refer to the following common troubleshooting tips:

- **Fireplace Not Turning On:** Check if the power cord is securely plugged into a working outlet. Ensure the main power switch on the fireplace unit is in the 'ON' position.
- **No Heat Output:** Verify that the heat function is activated and the temperature setting is above the current room temperature. Check for any obstructions in the air vents.
- **Flame Effect Not Working:** Ensure the flame effect button is pressed. If the unit is on but no flame is visible, contact customer support.
- **Remote Control Not Responding:** Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unstable Furniture:** Recheck all assembly screws and connections to ensure they are tightened securely. Ensure the unit is placed on a flat, level surface.

If problems persist after attempting these solutions, please contact AMERLIFE customer support for further assistance.

SPECIFICATIONS

Brand	AMERLIFE
Model Number	EF-23
Overall Dimensions (H x W x D)	30.7 x 59 x 15.5 inches
Electric Fireplace Dimensions (H x W)	23 x 17.5 inches
Item Weight	87 pounds
Maximum Recommended Load	250 Pounds
Material	Manufactured Wood (Particleboard and MDF)
Heating Area	Up to 400 square feet
Temperature Range	65°F to 95°F
Timer Settings	30 minutes to 8 hours
Flame Brightness Levels	3

UPC	742224101865
-----	--------------

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact AMERLIFE directly through their official channels. Keep your purchase receipt for any warranty claims.