

CYBORIS S5

CYBORIS S5 Portable Bluetooth Speaker (Model X7) Instruction Manual

Model: S5 (X7)

Brand: CYBORIS

WELCOME

Thank you for choosing the CYBORIS S5 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

KEY FEATURES

- **Intense 20W Stereo Sound:** Equipped with dual high-sensitivity drivers, dual-dynamic diaphragm, and DSP bass design for unexpectedly loud, crisp sound and deeper bass.
- **Practical & Portable Design:** Features a built-in carabiner for easy transport and a microphone for hands-free calls.
- **High Protection (IPX7 Waterproof):** Safeguards against rain, dust, snow, and spills. The silicone shell and port cover make the speaker shockproof. Supports full immersion up to 3 ft underwater for approximately 30 minutes.
- **Bluetooth 5.0 & Wide Compatibility:** Provides lossless music transmission and a stable 66 ft wireless connection. Ensures zero distortion and HD hands-free calls.
- **Versatile Connectivity:** Supports Micro SD/TF cards, AUX port, and Bluetooth connection.
- **Long Playtime:** Designed for extended use, making it suitable for outdoor activities.
- **Dual Pairing (TWS):** Allows two speakers to be paired for 360° surround sound.

PRODUCT OVERVIEW

Package Contents

- CYBORIS S5 Portable Bluetooth Speaker
- USB Type-C Charging Cable
- AUX Cable
- User Manual

Speaker Layout



This image displays the CYBORIS S5 Portable Bluetooth Speaker in a green camouflage design, highlighting its compact dimensions of approximately 7cm in length, 2cm in height, and 2cm in width. Water splashes are visible, illustrating its IPX7 waterproof capability.

Top Panel Controls

The top panel features tactile buttons for easy control:

- **Power Button:** Press and hold to power on/off.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Play/Pause Button (Triangle):** Short press to play or pause music.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Mode Button (M):** Short press to switch between Bluetooth, AUX, and Micro SD/TF modes.

Side Panel Ports

The side panel, typically protected by a waterproof rubber flap, contains the following ports:

- **Type-C Port:** For charging the speaker.
- **Micro SD/TF Card Slot:** Insert a Micro SD/TF card for direct music playback.
- **AUX IN Port:** Connect external audio devices using the provided AUX cable.

SETUP

Charging the Speaker

1. Connect the USB Type-C charging cable to the speaker's Type-C port and a compatible USB power adapter (5V/1.0A recommended).
2. The charging indicator light will illuminate, typically red, while charging.
3. Once fully charged, the indicator light will change color or turn off, indicating the battery is full.

Bluetooth Pairing

1. Power on the speaker by pressing and holding the Power button. The Bluetooth indicator will flash, indicating it is in pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "CYBORIS S5" in your device's Bluetooth list and select it to connect.
4. Once connected, the Bluetooth indicator will stop flashing and remain solid, and you may hear a confirmation tone.

Dual Pairing (TWS Function)

To achieve 360° surround sound, you can pair two CYBORIS S5 speakers together:

1. Ensure both speakers are powered off.
2. Power on both speakers. They will automatically enter Bluetooth pairing mode.
3. On one of the speakers (this will be the primary speaker), double-press the Play/Pause button. The speakers will attempt to connect to each other.
4. Once successfully paired, you will hear a confirmation tone, and the primary speaker's Bluetooth indicator will flash, while the secondary speaker's indicator will be solid.
5. Now, connect your device to the primary speaker via Bluetooth as described above. Both speakers will play audio simultaneously.

OPERATING INSTRUCTIONS

Basic Functions

- **Power On/Off:** Press and hold the Power button.
- **Play/Pause:** Short press the Play/Pause button.
- **Volume Control:** Short press the '+' button to increase volume, short press the '-' button to decrease volume.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.
- **Mode Switching:** Short press the 'M' button to cycle through Bluetooth, AUX, and Micro SD/TF

modes.

Hands-Free Calling

When connected via Bluetooth:

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button.
- **Redial Last Number:** Double-press the Play/Pause button.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the finish or internal components.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to preserve battery health.

Waterproofing

To maintain the IPX7 waterproof integrity, always ensure the rubber flap covering the charging and AUX ports is securely closed before exposing the speaker to water. Do not submerge the speaker for extended periods or beyond the specified depth of 3 feet.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Solution
Speaker does not power on	Ensure the speaker is fully charged. Press and hold the Power button for a few seconds.
Cannot pair via Bluetooth	Ensure the speaker is in pairing mode (flashing blue light). Turn off and on your device's Bluetooth. Move the speaker closer to your device.
No sound	Check volume levels on both the speaker and your connected device. Ensure the correct mode (Bluetooth, AUX, TF) is selected using the 'M' button.
Poor sound quality	Move the speaker closer to your device to reduce interference. Ensure the audio source is of good quality.
Dual pairing not working	Ensure both speakers are the same model and fully charged. Follow the dual pairing instructions carefully, ensuring only one speaker is connected to your device initially.

SPECIFICATIONS

Technical Specifications

- **Model:** S5 (X7)
- **Brand:** CYBORIS
- **Speaker Output Power:** 2 x 10W (Total 20 Watts)
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Bluetooth Version:** 5.0
- **Wireless Range:** Up to 66 ft (20 meters)
- **Audio Output Mode:** Stereo, Surround
- **Mounting Type:** Freestanding
- **Speaker Type:** Outdoor, Surround Sound
- **Additional Features:** IPX7 Waterproof, Built-in Microphone
- **Control Method:** Buttons on speaker
- **Item Weight:** 0.46 Kilograms
- **Compatible Devices:** Smartphone and other Bluetooth-enabled devices
- **Power Source:** Battery Powered
- **Battery Capacity:** 3600 mAh (2 Lithium Ion batteries included)
- **Input:** 5V/1.0A

WARRANTY AND SUPPORT

Warranty Information

Your CYBORIS S5 Portable Bluetooth Speaker is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific details on coverage, terms, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact CYBORIS customer support through the retailer where you purchased the product or visit the official CYBORIS website for further assistance. Provide your model number (S5/X7) and a detailed description of the issue when contacting support.