

VOVIGGOL K61

VOVIGGOL K61 2.4GHz Wireless Presenter

Instruction Manual

1. INTRODUCTION

Thank you for choosing the VOVIGGOL K61 2.4GHz Wireless Presenter. This device is designed to enhance your presentations by providing seamless control over slides, hyperlinks, and media. This manual will guide you through the setup, operation, and maintenance of your new presenter.

2. PRODUCT OVERVIEW

The VOVIGGOL K61 is a plug-and-play wireless presenter featuring a bright red laser pointer and intuitive controls. Its compact design includes a magnetic storage compartment for the USB receiver.

Key Features:

- **Plug & Play:** No software installation required.
- **Multi-functional Buttons:** Control hyperlinks, volume, window switching, full screen/black screen, and page navigation.
- **Bright Red Laser Pointer:** Visible up to 200 meters (not recommended for LED/LCD screens).
- **Long Control Range:** Wireless control up to 30 meters.
- **Ergonomic Design:** Soft silicone, raised buttons for comfortable and accurate use.
- **Low Power Indicator:** LED flashes when battery is low.
- **Integrated USB Receiver Storage:** Magnetic compartment for secure storage.

Components:

Familiarize yourself with the presenter's components:



Image: Detailed diagram of the VOVIGGOL K61 Wireless Presenter, showing the Indicator Light, Switch Windows button, Hyperlink button, Page Up/Full Screen button, Page Down/Black Screen button, Light Key (laser pointer), Volume Up/Down buttons, ON/OFF switch, Battery Cover, and Magnetic USB Receiver.

3. SETUP

Follow these steps to set up your VOVIGGOL K61 Wireless Presenter:

1. **Install Battery:** The presenter requires one AAA battery (not included). Open the battery cover on the back of the presenter and insert the AAA battery, ensuring correct polarity.
2. **Retrieve USB Receiver:** The mini USB receiver is stored magnetically in the tail of the presenter. Gently pull it out.

One-Piece Design

USB is stored securely with magnetism in the tail of the presenter.



The low power LED indicator will flash when the power starts to decrease.

The presentation clicker is powered by 1 AAA battery (not included)

Image: The VOVIGGOL K61 Wireless Presenter with its back open, revealing the battery compartment and the USB receiver being pulled out from its magnetic storage. A low power LED indicator is also highlighted.

3. **Connect USB Receiver:** Plug the USB receiver into an available USB port on your computer. Your computer will automatically detect and install the necessary drivers.
4. **Power On:** Slide the ON/OFF switch on the side of the presenter to the "ON" position. The presenter is now ready for use.

4. OPERATING INSTRUCTIONS

The VOVIGGOL K61 Wireless Presenter offers a range of functions to control your presentations effectively.

Button Functions:

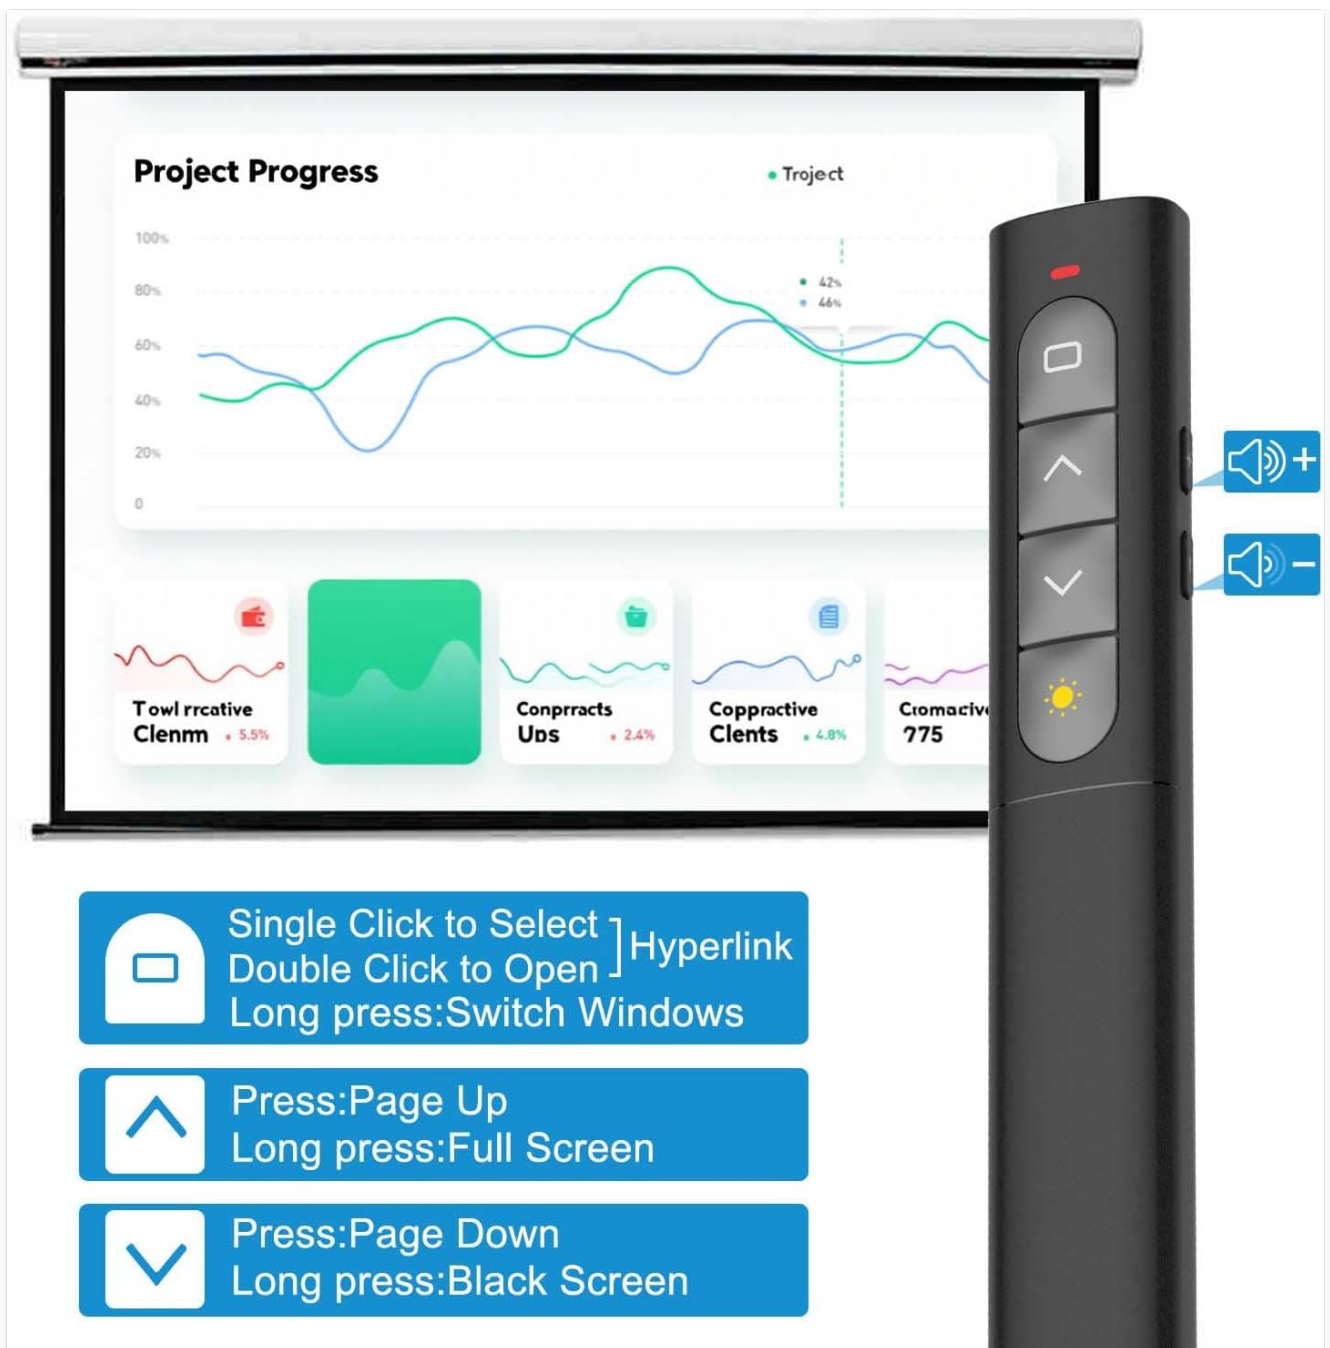


Image: The VOVIGGOL K61 Wireless Presenter with a screen displaying a presentation. Overlays indicate the functions of the main buttons: square button for hyperlinks and window switching, up arrow for Page Up/Full Screen, and down arrow for Page Down/Black Screen.

- **Square Button (Hyperlink / Switch Windows):**

- Single Click: Select a hyperlink.
- Double Click: Open the selected hyperlink.
- Long Press: Switch between open windows.

- **Up Arrow Button (Page Up / Full Screen):**

- Press: Move to the previous slide (Page Up).
- Long Press: Enter or exit full screen mode.

- **Down Arrow Button (Page Down / Black Screen):**

- Press: Move to the next slide (Page Down).
- Long Press: Toggle between black screen and presentation display.

- **Light Key (Laser Pointer):** Press this button to activate the red laser pointer. Release to turn off.
- **Volume Up/Down Buttons:** Use the side buttons to adjust the system volume.

Compatibility:

The presenter is widely compatible with various operating systems and presentation software:



Widely Compatible

With newest RF 2.4GHz wireless technology,
support sensitive and stable operation, compatible
with Windows, Mac OS, Linux, Android.

Softwares

			
Word	Excel	Powerpoint	ACD See
			
Pages	Numbers	Onenote	Keynote
			•••••
Google Slides	Prezi	Photos	

System

			
Mac os	Windows	Android	Linux

Image: The VOVIGGOL K61 Wireless Presenter with a graphic illustrating its compatibility. Supported operating systems include Mac OS, Windows (2003, XP, Vista, 7, 8, 10), Android, and Linux. Supported software includes Word, Excel, PowerPoint, ACD See, Pages, Numbers, Onenote, Keynote, Google Slides, Prezi, and Photos.

- **Operating Systems:** Windows 2003 / XP / Vista / 7 / 8 / 10, Mac OS, Linux, Android.
- **Software:** PowerPoint, Google Slides, iWork (Keynote, Numbers, Pages), Prezi, PDF, MS Word, Excel, ACD See, web browsers, etc.

Control Range:

The wireless control range is approximately 30 meters, and the red laser pointer has a range of up to 200 meters,

allowing you to move freely during your presentation.



Long Control Range

Long Range Control to move more freely
Bright Red Light to seize the attention

	$\leq 200M$ Light Range		$\leq 30M$ Wireless Range
---	----------------------------	---	------------------------------

Image: The VOVIGGOL K61 Wireless Presenter in use during a presentation, with text indicating a light range of up to 200 meters and a wireless control range of up to 30 meters.

5. MAINTENANCE

To ensure the longevity and optimal performance of your presenter, follow these maintenance guidelines:

- **Battery Replacement:** When the low power LED indicator flashes, replace the AAA battery promptly to avoid interruption during presentations.



Image: A close-up of the VOVIGGOL K61 Wireless Presenter with a red low battery icon indicating the need for battery replacement.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, turn off the presenter and store the USB receiver in its magnetic compartment to prevent loss. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your presenter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Presenter not responding	Low or dead battery USB receiver not properly connected Presenter is off	Replace the AAA battery Ensure USB receiver is firmly plugged into a working USB port Slide the ON/OFF switch to "ON"
Laser pointer not working	Low battery Laser emitter blocked Not pressing the Light Key	Replace the AAA battery Ensure nothing is obstructing the laser output Press and hold the Light Key button
Limited control range	Obstructions between presenter and receiver Interference from other wireless devices	Reduce distance to computer or remove obstructions Move away from other 2.4GHz devices
Hyperlink function not working	Hyperlink not selected Software incompatibility	Single-click the square button to select the hyperlink, then double-click to open Ensure your software supports hyperlink control via presenter

7. SPECIFICATIONS

Feature	Detail
Brand	VOVIGGOL

Feature	Detail
Model Number	K61
Wireless Technology	2.4 GHz RF
Control Distance	Up to 30 meters
Laser Pointer Range	Up to 200 meters (red light)
Power Source	1 x AAA Battery (not included)
Item Weight	20.5 grams
Color	Functional Black Presenter
Manufacturer	Beisite

8. WARRANTY AND SUPPORT

Specific warranty information for the VOVIGGOL K61 Wireless Presenter is not provided in the product details. For warranty claims, technical support, or further inquiries, please contact the manufacturer or your point of purchase directly.

© 2023 VOVIGGOL. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question