

[Manuals.plus](#) /

> [ALLIMITY](#) /

> Allimity Universal TV Remote Control for Samsung Smart TVs Instruction Manual

ALLIMITY AMT-RM-L1593

Allimity Universal TV Remote Control for Samsung Smart TVs

Model: AMT-RM-L1593

1. INTRODUCTION

This manual provides instructions for the Allimity Universal TV Remote Control, model AMT-RM-L1593. This remote is designed as a replacement for various Samsung Smart LCD LED HD UHD SUHD TV models from 2018, 2019, 2020, and 2021. It operates using infrared (IR) technology.

Key Features:

- Universal compatibility with a wide range of Samsung Smart TV models.
- Infrared wireless technology for reliable control.
- Durable plastic construction.





Image 1.1: Front and back view of the Allimity Universal TV Remote Control. The front shows various control buttons including power, navigation, volume, channel, and dedicated app buttons. The back features a textured grip.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.

3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image 2.1: Back view of the remote control with the battery compartment open, showing the slots for two AA batteries.

2.2 Initial Use

This universal remote control is pre-programmed for compatible Samsung Smart TVs. No complex pairing or code entry is typically required. To operate your TV:

- Point the remote control directly towards the infrared sensor on your Samsung TV.
- Ensure there are no obstacles between the remote control and the TV sensor that could block the signal.

3. OPERATING INSTRUCTIONS

The remote control features standard buttons for navigating and controlling your Samsung Smart TV. Below is a general overview of common button functions:

- **Power Button** (⏻): Turns the TV on or off.
- **123 Button**: Accesses the on-screen numeric keypad for channel selection or data input.
- **List Button**: Displays a list of channels or content.
- **EXTRA Button**: Provides access to additional TV functions or information.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Used to navigate menus, select items, and confirm choices.
- **Back Button** (⬅️): Returns to the previous screen or menu.
- **Home Button** (🏠): Accesses the TV's Smart Hub or home screen.
- **Play/Pause Button** (⏮️): Controls media playback.
- **VOL (Volume) Buttons**: Adjusts the TV's volume level (Up/Down).
- **CH (Channel) Buttons**: Changes TV channels (Up/Down).
- **NETFLIX Button**: Direct access to the Netflix application.
- **Prime Video Button**: Direct access to the Amazon Prime Video application.
- **WWW Button**: Direct access to the TV's web browser.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps in Section 2.1 to replace the old batteries with new AA batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

If you encounter issues with your Allimity Universal TV Remote Control, refer to the following troubleshooting tips:

- **Remote not responding:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote control and the TV's IR sensor.
 - Verify that you are pointing the remote directly at the TV's IR sensor.
- **Limited functionality or incorrect responses:**
 - Confirm that your Samsung TV model is listed as compatible in the product description or Section 1.
 - Ensure no other devices are interfering with the IR signal.
- **Remote does not power on the TV:**
 - Ensure the TV is plugged into a power source and is not in a deep standby mode that requires manual power-on.

If the issue persists after attempting these troubleshooting steps, please contact customer support for further assistance.

6. SPECIFICATIONS

Model Number	AMT-RM-L1593 (RM-L1593)
Brand	ALLIMITY
Product Material	Plastic
Wireless Technology	Infrared (IR)
Product Dimensions	7 x 2 x 0.6 inches (17.8 x 5.1 x 1.5 cm)
Item Weight	1.6 ounces (45 grams)
Batteries Required	2 x AA batteries (not included)
Compatible Devices	Samsung Smart LCD LED HD UHD SUHD TVs (2018-2021 models)

7. SUPPORT

For further assistance or inquiries regarding your Allimity Universal TV Remote Control, please contact customer

service. If you cannot find your specific TV or remote model listed as compatible, or if the remote is not functioning as expected, our customer service team can provide professional suggestions and support.

Please refer to the contact information provided with your purchase or on the official ALLIMITY website for support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09KH614FV>

More documents and user manuals: <https://manuals.plus/>