

CROWN SHADES Gazebo

CROWN SHADES 13x13 Pop Up Gazebo Instruction Manual

Model: Gazebo

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and care of your CROWN SHADES 13x13 Pop Up Gazebo. Please read all instructions carefully before setup and retain this manual for future reference.

Important Safety Information

- **Never** leave the gazebo unattended. It may blow away or collapse in heavy wind or rain.
- **Always** take down the gazebo when a storm is approaching.
- When in use, **always** secure your canopy with both the included stakes and guy ropes.
- This product is designed for daily use to protect from sun and light rain. It is not intended as a permanent structure.

2. COMPONENTS LIST

Before assembly, ensure all components are present:

- 1 x Steel Frame
- 1 x Cover Bag (Sto 'N Go bag)
- 1 x Canopy Top
- 4 x Side Walls (removable netting-screens)
- 1 x Small Fabric (for top vent)
- 4 x Weight Bags
- 4 x Guy Ropes
- 8 x Spikes
- 1 x Hexagon Spanner



Image: All included components for the gazebo.

3. SETUP INSTRUCTIONS


The CROWN SHADES gazebo features a patented one-push center lock technology for simplified assembly.

Step-by-Step Assembly:

- 1. Open the Canopy Frame:** With two people, gently pull the frame outwards from opposing corners until it is partially extended.
- 2. Attach the Canopy Top:** Place the canopy fabric over the partially opened frame. Ensure the corners are aligned. Secure the canopy fabric to the frame using the FastClip system. These clips easily secure the fabric, preventing water buildup and keeping the top in place.
- 3. Engage CenterLok Technology:** Position yourself under the center of the canopy. With one push, the central hub will lock out all four legs into place. This mechanism allows for single-person setup.
- 4. Adjust Leg Height:** Use the soft pinch-free buttons on each leg to set the desired height. There are three adjustable height

levels.

5. **Secure the Gazebo:** Utilize the integrated staking holes at the base of each leg. Insert the provided spikes into the ground through these holes. Attach the guy ropes to the frame and stake them into the ground at an angle to enhance stability. Fill the provided weight bags with sand, pebbles, or bottle water and attach them to the gazebo legs for additional stability.

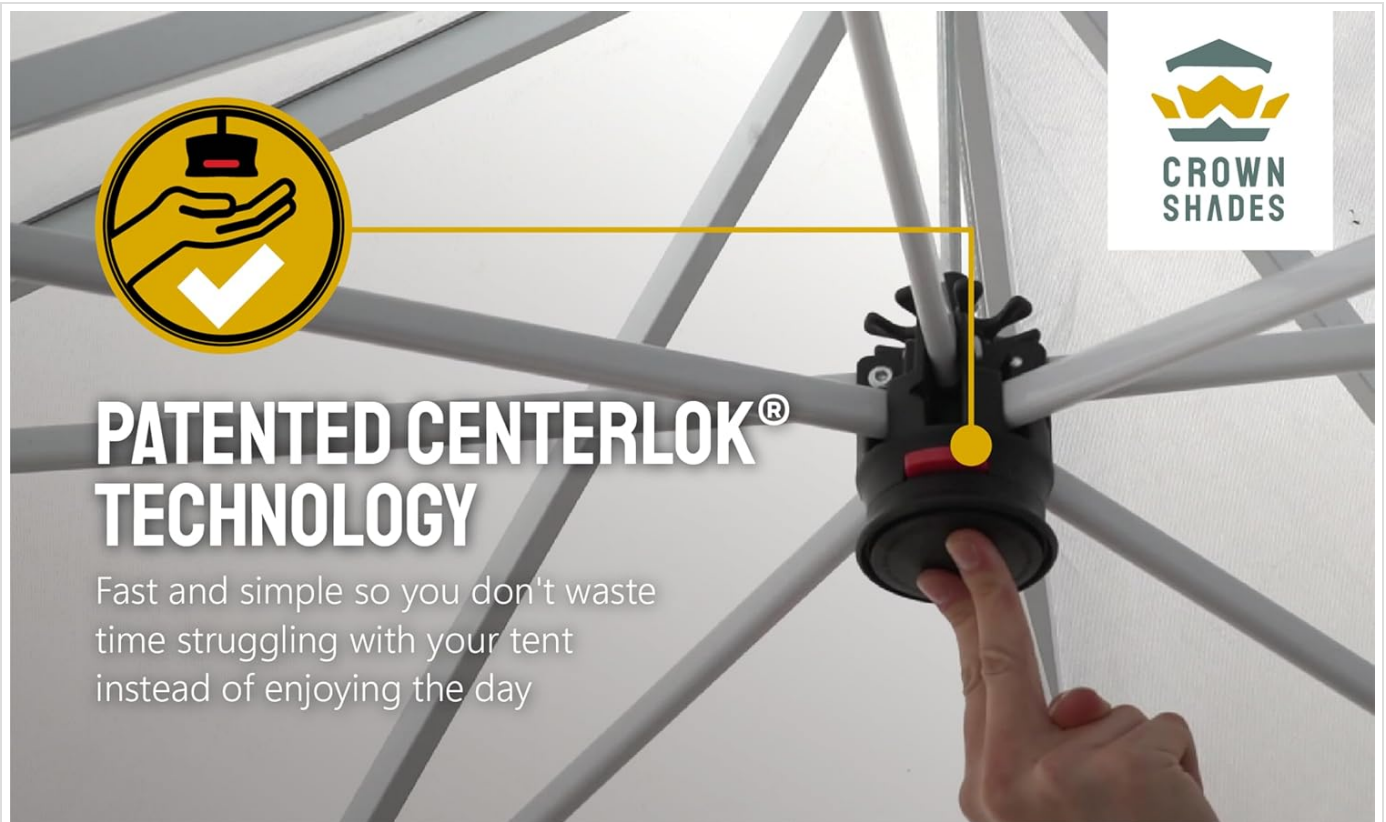

PATENTED CENTERLOK® TECHNOLOGY

Fast and simple so you don't waste time struggling with your tent instead of enjoying the day

EASY SETUP IN JUST 3 STEPS!

The central hub lets you lock and release all 4 legs with just one touch.



STEP 1

Open the canopy



STEP 2

Push the central button



STEP 3

Adjust the height

Image: Visual guide for the 3-step setup process.



STO'N GO

Feet with integrated wheels for easier mobility
make transportation a breeze!

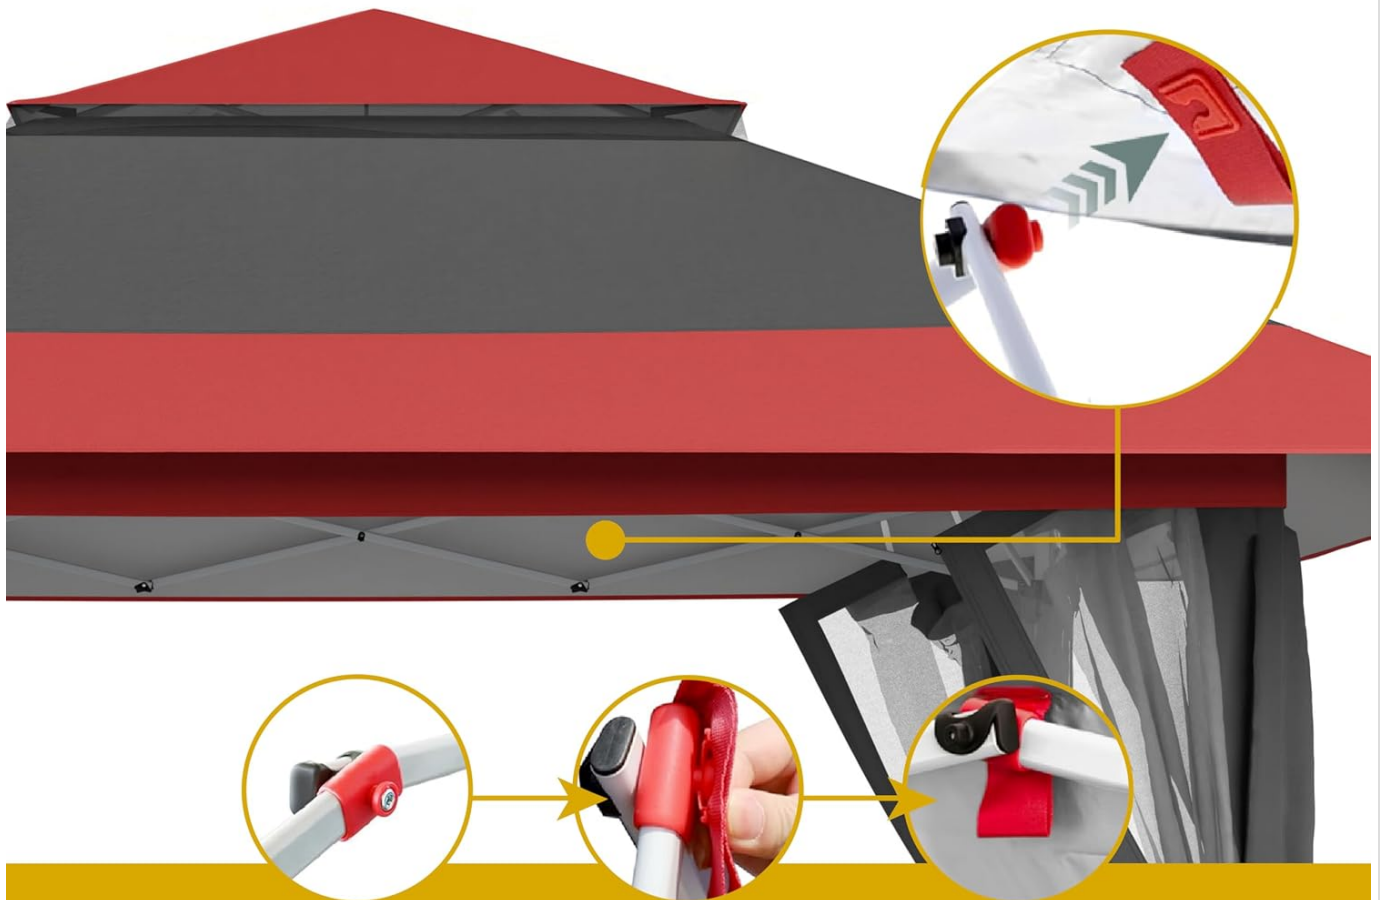 


Image: Detail of the CenterLok central hub for quick locking.



FASTCLIP SIMPLE CLIP SYSTEM

Easily secures the canopy fabric, preventing
rain buildup and keeping the top in place



Simply clip the canopy to the frame for a quick setup wherever you are.

Image: Illustration of the FastClip system for securing the canopy.



EXTENDED EAVES

Extended cornice adds more shade coverage.



Image: Anchoring spikes and guy ropes for enhanced stability.

SANDBAG FILLING MATERIALS



**NOTE: Sandbag
is Empty**

PEBBLES

SAND

BOTTLE WATER

SOIL

Image: Suggested materials for filling weight bags.

4. OPERATING INSTRUCTIONS

Height Adjustment

The gazebo offers three height settings. To adjust, press the red push buttons located on each leg and slide the leg to the desired height. Ensure all four legs are set to the same height for stability.



FAST CLIP

Fast clips and perfect fit help protect against water pooling in wet conditions.



Image: Push button mechanism for leg height adjustment.

Using the Removable Netting-Screens

The gazebo includes four removable netting-screens designed to help keep pests away. These screens can be zipped together to enclose the gazebo area. The netting extends close to the ground to maximize effectiveness.

**THE NETTING IS CLOSE TO THE
GROUND TO KEEP MOSQUITOES OUT**



Image: Gazebo with netting-screens deployed.



Image: Detail of the breathable zippered mesh.

Ventilation

The gazebo features dual top vents to aid air circulation and help prevent rainwater accumulation.



Image: Dual top vents for ventilation and rain protection.

5. MAINTENANCE

Cleaning

To clean the canopy fabric, use a mild soap and water solution. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric's protective coating. Rinse thoroughly and allow to air dry completely before storage.

Storage

After each use, especially before long-term storage, ensure the gazebo is clean and completely dry to prevent mold and mildew. Collapse the frame and pack all components into the provided Sto 'N Go wheeled cover bag for easy transport and compact storage. The storage bag dimensions are 47" x 8" x 8".

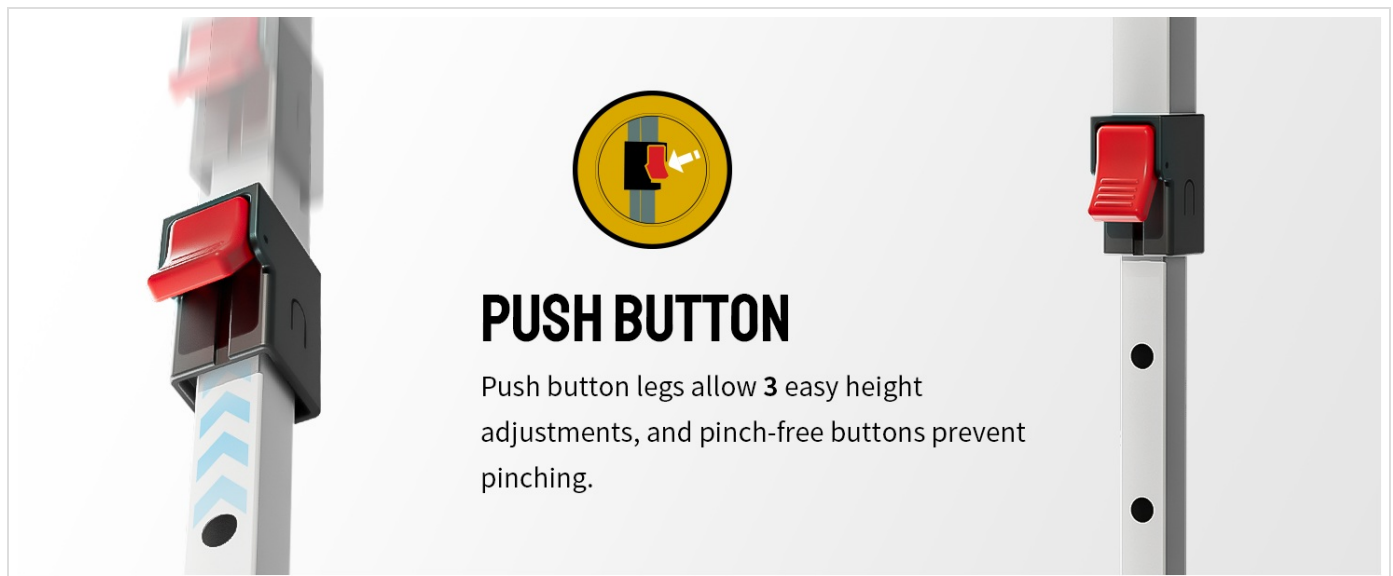 


Image: Sto 'N Go feet with integrated wheels for transport.

6. TROUBLESHOOTING

Gazebo Instability

- **Issue:** Gazebo feels unstable or sways in light wind.
- **Solution:** Ensure all legs are fully extended and locked at the same height. Verify that all anchoring spikes are firmly in the ground and guy ropes are taut. Use the provided weight bags, filled with appropriate material, attached to each leg for additional stability.

Water Pooling on Canopy

- **Issue:** Water collects on the canopy during rain.
- **Solution:** Ensure the canopy fabric is properly stretched and secured to the frame using the FastClip system. The fabric includes waterproof sealing tape to protect against water pooling, but proper tension is crucial. If pooling persists, gently push up from underneath to release accumulated water.

Difficulty with Setup/Takedown

- **Issue:** Frame is difficult to open or close.
- **Solution:** Ensure the CenterLok mechanism is fully disengaged (for takedown) or engaged (for setup). Apply even pressure when opening or closing the frame. If resistance is met, check for any obstructions or misaligned parts.

7. SPECIFICATIONS

Key specifications for the CROWN SHADES 13x13 Pop Up Gazebo:

Brand	CROWN SHADES
Model Number	Gazebo
Material	Alloy Steel (Frame), 150D Silver Coated Fabric (Canopy)
Color	Red & Grey
Base Dimensions	10' x 10'
Canopy Dimensions	13' x 13'
Shade Area	169 square feet
Maximum Interior Height	Over 9'
Maximum Clearance (under valance)	Over 6'
Product Dimensions (Overall)	156"L x 156"W x 112"H
Item Weight	45.2 Pounds
UV Protection	UPF 50+ (95% Ultraviolet Light Protection)
Water Resistance Level	Waterproof (with sealing tape)
Flame Resistance	CPAI-84 rated
Assembly Required	Yes



I50D CANOPY FABRIC

The CPAI-84 flame-resistant fabric is water-repellent and features waterproof sealing tape to prevent water pooling.

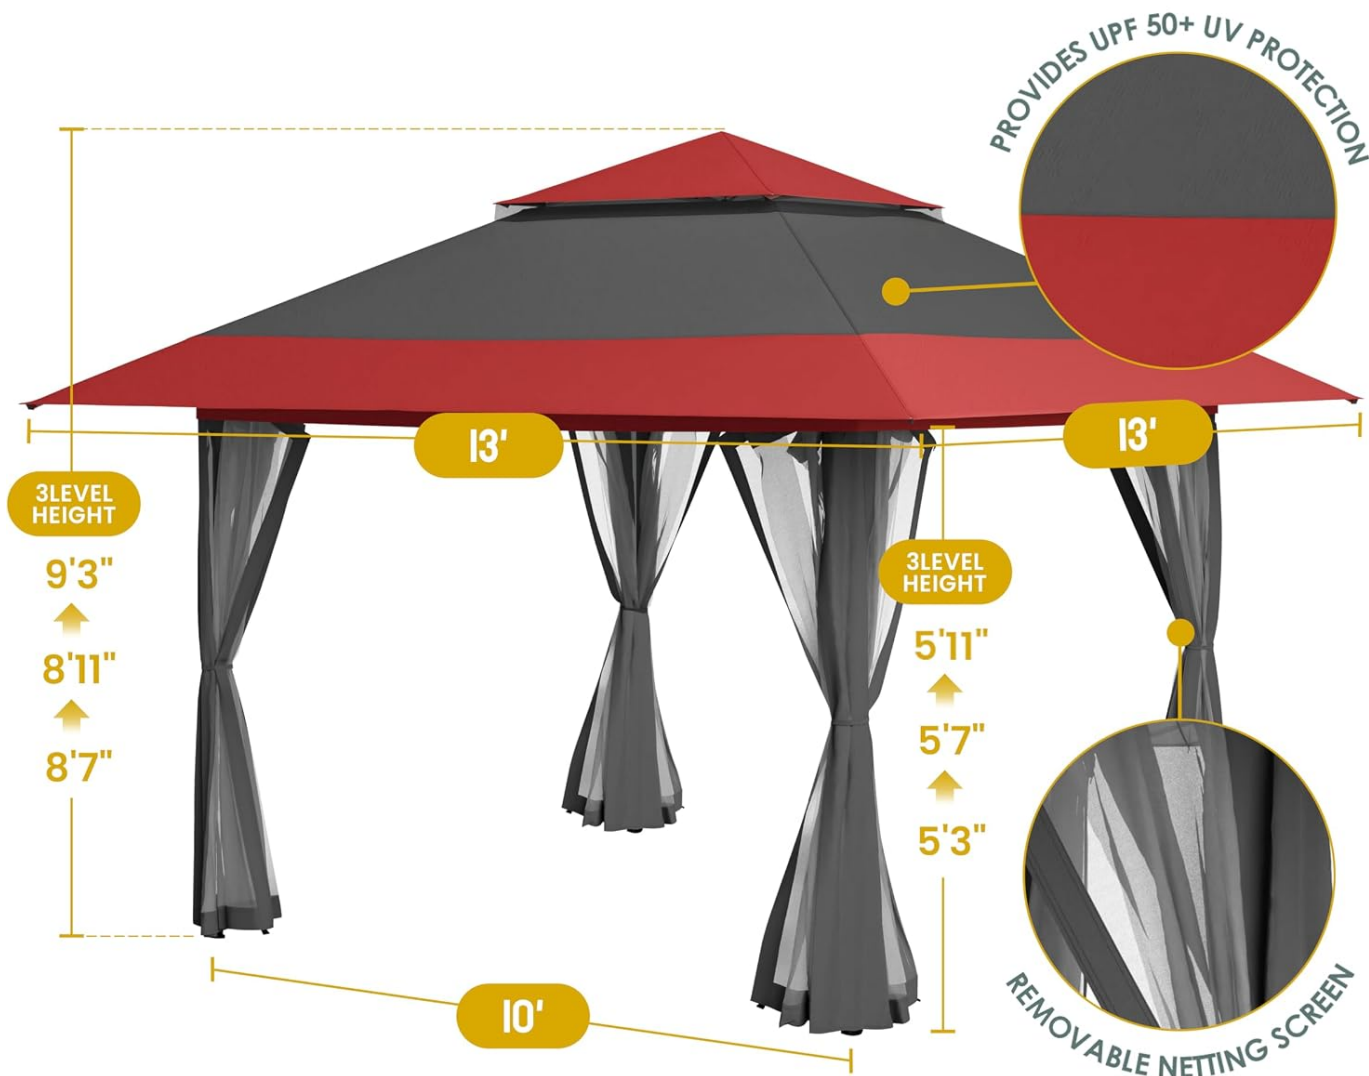 


Image: Gazebo dimensions and fabric details.



Image: Silver-coated fabric for rain and UV protection.

8. WARRANTY AND SUPPORT

CROWN SHADES products are designed for durability and user satisfaction. Customer support is available to assist with any questions or issues regarding your gazebo. Please refer to the product packaging or the official CROWN SHADES website for specific warranty details and contact information.

For further assistance, please visit the [CROWN SHADES Store](#).

© 2025 CROWN SHADES. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question