

NEDIS WIFIVCL001CBK

Nedis SmartLife WLAN Robot Vacuum Cleaner - User Manual

Model: WIFIVCL001CBK

INTRODUCTION

Thank you for choosing the Nedis SmartLife WLAN Robot Vacuum Cleaner. This 3-in-1 device combines vacuuming and mopping functionalities with advanced laser navigation for efficient home cleaning. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your robot vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not operate the robot vacuum cleaner in wet environments or near water.
- Ensure the charging dock is placed on a flat, stable surface and is connected to a power outlet.
- Keep loose clothing, hair, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up large objects, sharp objects, or liquids with the robot vacuum cleaner.
- Supervise children and pets when the robot vacuum cleaner is in operation.
- Only use accessories and replacement parts specified by the manufacturer.

PACKAGE CONTENTS



Upon opening the package, please verify that all listed items are present and in good condition:

- Nedis SmartLife Robot Vacuum Cleaner
- Charging Dock
- Power Adapter
- Remote Control
- Filter
- Battery (pre-installed or separate)
- Side Brushes (2 pairs)
- Cleaning Tool
- Water Tank with Mop Pad
- User Manual (this document)

Image Description: An overhead view of all included accessories for the Nedis SmartLife Robot Vacuum Cleaner. The main robot unit is visible on the right, with its charging dock, power adapter, spare side brushes, and filters arranged around it. A remote control and a cleaning tool are also shown. On the left, the water tank with an attached mop pad is displayed.

SETUP

1. Charging Dock Placement

Place the charging dock against a wall in an open, uncluttered area. Ensure there is at least 1 meter (3 feet) of clear space in front of the dock and 0.5 meters (1.5 feet) on either side. Connect the power adapter to the charging dock and plug it into a wall outlet. Ensure the power indicator on the dock lights up.

2. Installing Side Brushes

Turn the robot vacuum cleaner upside down. Align the side brushes with the corresponding posts (L and R) on the bottom of the robot and press them down until they click into place.



Image Description: The underside of the Nedis SmartLife Robot Vacuum Cleaner is shown. Two green side brushes are visible at the front, and a central main brush is located between the two large wheels. A hand is shown attaching a blue mop pad to the water tank compartment at the rear of the robot.

3. Initial Charging

Place the robot vacuum cleaner onto the charging dock, ensuring the charging contacts on the robot align with those on the dock. The robot will begin charging automatically. For first use, fully charge the robot for at least 6 hours or until the battery indicator shows a full charge.

4. Nedis SmartLife App Connection

For full functionality, download the "Nedis SmartLife" app from your smartphone's app store (iOS or Android). Follow the in-app instructions to connect your robot vacuum cleaner to your home Wi-Fi network. This will enable features such as remote control, scheduling, cleaning mode selection, and real-time mapping.



Image Description: The Nedis SmartLife Robot Vacuum Cleaner is positioned on a rug in a modern living room. To the left, a smartphone screen displays the Nedis SmartLife app interface, showing a map of a cleaned area with different colored zones. Various icons representing features like battery life, suction power, and cleaning time are also visible.

OPERATING THE ROBOT VACUUM CLEANER

Power On/Off

Press and hold the power button on the robot or use the remote control/app to turn the robot on or off.

Starting a Cleaning Cycle

Press the 'Clean' button on the robot, remote control, or initiate a cleaning cycle via the Nedis SmartLife app. The robot will automatically start cleaning and return to its charging dock when finished or when the battery is low.



Image Description: A close-up, top-down view of the Nedis SmartLife Robot Vacuum Cleaner. The circular device is black with a glossy finish. A central raised tower houses the laser navigation system. Three illuminated buttons are visible on the top surface: a Wi-Fi indicator, a power/start button, and a home/recharge button.

Cleaning Modes

The robot offers multiple cleaning modes to suit different needs:

- **Auto Clean:** The robot intelligently navigates and cleans the entire floor area.
- **Spot Clean:** Cleans a specific area more intensely.
- **Edge Clean:** Cleans along walls and furniture edges.
- **Scheduled Clean:** Set specific times for the robot to clean automatically via the app.

Mopping Function

To use the mopping function, fill the water tank with clean water and attach the mop pad. Insert the water tank into the designated slot on the robot. The robot will then vacuum and mop simultaneously. Do not use cleaning solutions other than water in the tank unless specified by the manufacturer.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner. Always turn off the robot and disconnect it from the charging dock before performing any maintenance.

Emptying the Dustbin

Open the top cover of the robot and remove the dustbin. Empty its contents into a trash can. It is recommended to empty the dustbin after each cleaning cycle.

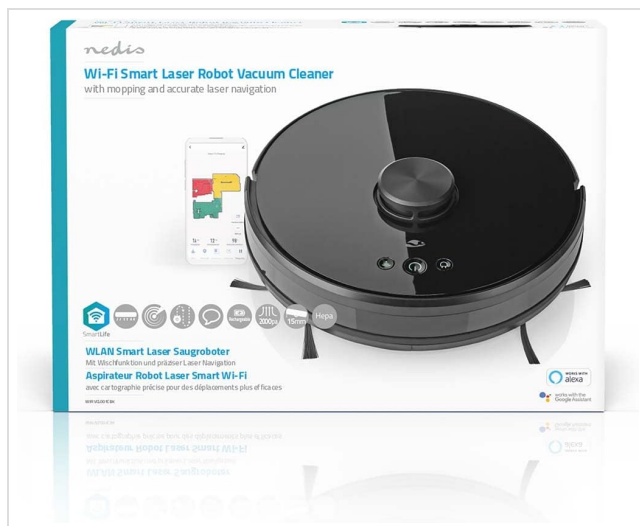


Image Description: A hand is shown lifting the dustbin out of the top compartment of the Nedis SmartLife Robot Vacuum Cleaner. The robot's top cover is open, revealing the internal mechanism where the dustbin is housed.

Cleaning the Filter

Remove the filter from the dustbin. Tap the filter gently to remove dust and debris. The HEPA filter is not washable; replace it every 3-6 months depending on usage. The pre-filter can be rinsed with water and air-dried completely before reinstallation.

Cleaning the Main Brush

Remove the main brush cover and then the main brush. Use the provided cleaning tool to remove hair and debris tangled around the brush. Reinstall the brush and cover.

Cleaning Side Brushes

Periodically check the side brushes for tangled hair or debris. Remove them if necessary and clean. Replace worn or damaged side brushes.

Cleaning the Water Tank and Mop Pad

After mopping, remove the water tank. Empty any remaining water and rinse the tank thoroughly. Remove the mop pad and wash it by hand or machine. Allow both to air dry completely before reattaching or storing.



Image Description: A hand is shown holding the transparent water tank of the robot vacuum cleaner under a running water faucet, indicating the process of filling or rinsing the tank. The tank has measurement markings and a blue cap.

Cleaning Sensors and Charging Contacts

Wipe the cliff sensors, wall sensors, and charging contacts on both the robot and the charging dock with a clean, dry cloth. This prevents cleaning errors and ensures proper charging.

TROUBLESHOOTING

If your robot vacuum cleaner encounters issues, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power button not pressed correctly.	Charge the robot; Press and hold the power button for a few seconds.
Robot does not charge.	Charging contacts are dirty; Power adapter not connected.	Clean charging contacts on robot and dock; Ensure power adapter is securely plugged in.
Robot gets stuck frequently.	Obstacles in cleaning path; Robot stuck on high thresholds.	Clear cables, toys, and other obstacles; Use virtual walls or no-go zones in the app.

Problem	Possible Cause	Solution
Poor cleaning performance.	Dustbin full; Filter clogged; Brushes tangled.	Empty dustbin; Clean/replace filter; Clean main and side brushes.
Robot cannot connect to Wi-Fi.	Incorrect Wi-Fi password; Router too far; 5GHz network.	Verify password; Move robot closer to router; Ensure 2.4GHz Wi-Fi network is used.

If the problem persists, please refer to the support section or contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	NEDIS
Model Number	WIFIVCL001CBK
Product Dimensions	25 x 15 x 15 cm
Item Weight	500 g
Color	Black
Power Source	Battery Powered
Voltage	240 Volt, 220 Volt
Average Battery Life	150 Minutes
Navigation Type	Laser Technology
Functions	Vacuuming, Mopping
App Integration	Nedis SmartLife App
Voice Assistant Compatibility	Amazon Alexa, Google Home

WARRANTY AND SUPPORT

Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or visit the official Nedis website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

If you have any questions, require technical assistance, or encounter issues not covered in this manual, please contact Nedis customer support. You can find contact information on the official Nedis website: www.nedis.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question