



Manuals.plus /

› Gemmy /

› Gemmy Christmas ColorMotion Icicle Light String User Manual

Gemmy 119761

Gemmy Christmas ColorMotion Icicle Light String User Manual

Model: 119761

INTRODUCTION

The Gemmy Christmas ColorMotion Icicle Light String is designed to transform your home into a festive display with its vibrant, energy-efficient LED lighting. This string features 24 multicolor LEDs and is suitable for both indoor and outdoor use, offering versatile placement options for your holiday decorations. Its robust construction ensures durability, and the ability to connect multiple sets allows for extensive coverage.

WHAT'S INCLUDED

- 1 x LED Light String with 24 Icicle Bulbs
- 1 x Color-Changing Controller

SETUP INSTRUCTIONS

1. Unpacking and Inspection

Carefully remove all components from the packaging. Inspect the light string and controller for any signs of damage. Do not use the product if any part is damaged.

2. Placement

This light string is designed for both indoor and outdoor use. When using outdoors, ensure the product is placed in an area where it is protected from direct heavy rain or standing water, despite its water-resistant design. Avoid placing the controller or plug in areas where they could be submerged or exposed to excessive moisture.



Image: Gemmy ColorMotion Icicle Lights installed on a roofline, showcasing their vibrant multicolor display against a night sky. The lights are suspended from the eaves of a house, illustrating a typical outdoor installation.

3. Power Connection

Plug the light string into a standard 120-volt electrical outlet. Ensure the outlet is suitable for outdoor use if installing outdoors (e.g., a GFCI outlet).



Image: A close-up view of the white male and female electrical plugs. The male plug, with its two prongs, is positioned to connect into the female receptacle, demonstrating the end-to-end connectivity feature of the light string.

4. Connecting Multiple Sets

You can connect up to 17 additional Gemmy LightShow sets (for a total of 18 sets) end-to-end to cover larger areas. Always ensure that the total wattage of connected sets does not exceed the maximum capacity specified on the product label or packaging.

Safety Precautions

- Do not overload electrical outlets.
- Ensure all connections are secure and protected from moisture.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.

OPERATING INSTRUCTIONS

The Gemmy ColorMotion Icicle Light String features a built-in color-changing controller to display a dazzling, coordinated light show. As per specifications, a remote control is included for managing the light patterns and effects.



Image: A full view of the Gemmy Christmas ColorMotion Icicle Light String, showcasing its 24 multicolor icicle bulbs in various vibrant hues. The white wiring connects the bulbs, which are designed to create a dynamic light display.

Using the Remote Control

Refer to the remote control's specific buttons for changing light patterns, adjusting speed, or turning the lights on/off. Point the remote directly at the light string's controller for optimal response.

MAINTENANCE

Cleaning

Before cleaning, always unplug the light string from the power source. Wipe the bulbs and wiring with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

Storage

When not in use, store the light string in a cool, dry place, away from direct sunlight and extreme temperatures. Coil the string neatly to prevent tangling and damage to the wiring or bulbs.

Fuse Replacement

If the entire light string fails to illuminate, check the fuse located in the plug. To replace, slide open the fuse compartment cover, carefully remove the old fuse, and insert a new fuse of the same type and rating (typically 3 Amp, 125 Volt). Close the cover securely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet. Blown fuse in the plug. Loose connection.	Check the power outlet with another device. Replace the fuse in the plug (refer to Maintenance section). Ensure all connections, including end-to-end connections, are secure.
Lights are dim or flickering.	Voltage drop due to too many connected sets. Loose connection.	Reduce the number of connected sets. Ensure total wattage does not exceed limits. Check all connections for tightness.
Remote control not working.	Remote battery dead. Obstruction between remote and controller. Controller malfunction.	Replace remote battery (if applicable). Ensure clear line of sight to the controller. Contact customer support if the issue persists.

SPECIFICATIONS

Feature	Detail
Model Number	119761
Brand	Gemmy
Color	Multicolor
Light Source Type	LED
Number of LEDs/Bulbs	24 Icicle Bulbs
Lighted Length	23 feet (7.01 meters)
Total Length	24.5 feet (7.47 meters)
Power Source	Electric (Plug-in)
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor
Special Feature	Color Changing, ColorMotion
Control Method	Remote Control
Material	Plastic, Polyethylene
Item Weight	2.2 Pounds (1 kg)
Connectability	Connect up to 18 LightShow sets
Water Resistance Level	Water Resistant
UPC	191245197614

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Gemmy Christmas ColorMotion Icicle Light String, please contact Gemmy customer service directly. Refer to the product packaging or the official Gemmy website for contact details.

You can visit the official Gemmy store for more information: [Gemmy Industries Store](#)

