

GUESS GW0343L2

GUESS Women's Quartz Digital Watch GW0343L2 User Manual

Model: GW0343L2

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your GUESS Women's Quartz Digital Watch, Model GW0343L2. This digital timepiece features a classic square stainless steel case, a mother-of-pearl dial, and a self-adjustable gold-tone stainless steel mesh strap. Please read this manual thoroughly to ensure proper use and care of your watch.

SETUP

1. Initial Power On

Your watch comes with a pre-installed Lithium Metal battery. It should be ready for use upon removal from packaging. If the display is blank, gently press any button to activate it.

2. Adjusting the Mesh Strap

The gold-tone stainless steel mesh strap is designed for self-adjustment to ensure a comfortable fit. To adjust:

1. Locate the clasp on the strap.
2. Using a small, flat tool (such as a small screwdriver or a paperclip), gently lift the locking plate on the clasp.
3. Slide the clasp along the mesh strap to your desired length.
4. Press the locking plate back down firmly until it clicks into place, securing the clasp.





Image: Detail of the self-adjustable mesh strap clasp.

OPERATING INSTRUCTIONS

Your digital watch features two buttons on the side for operation. The exact functions may vary slightly, but generally, one button is for mode selection and the other for setting adjustments.



Image: Side view of the watch with control buttons.

1. Time Display

The watch typically displays the time (hours, minutes, seconds) and day of the week. Some models may also show the date.





Image: Front view of the digital display.

2. Setting Time and Date

1. **Enter Setting Mode:** Press and hold the 'Mode' button (usually the bottom right button) until the digits on the display begin to flash.
2. **Adjust Values:** Use the 'Adjust' button (usually the top right button) to change the flashing value (e.g., hours, minutes, year, month, day).
3. **Navigate Settings:** Press the 'Mode' button briefly to move to the next setting item.
4. **Exit Setting Mode:** Once all settings are adjusted, press the 'Mode' button again until the digits stop flashing, or wait for a few seconds for the watch to automatically exit setting mode.



Image: Angled view of the digital display.

MAINTENANCE

1. Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

2. Water Resistance

Your GUESS watch is water resistant to 50 meters (165 feet). This means it is suitable for short periods of recreational swimming. However, it is **not** suitable for diving, snorkeling, or prolonged water activities. Avoid

pressing buttons while the watch is wet or submerged to prevent water intrusion.

3. Battery Replacement

The watch uses one Lithium Metal battery. When the display becomes dim or stops functioning, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery.
Time is incorrect.	Time was not set correctly or was reset.	Refer to the 'Setting Time and Date' section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing and holding buttons for a few seconds. If unresponsive, replace battery.
Condensation inside the crystal.	Exposure to extreme temperature changes or water intrusion.	Take the watch to a qualified technician immediately to prevent damage.

SPECIFICATIONS

- **Model Number:** GW0343L2
- **Movement:** Quartz Digital
- **Case Material:** Stainless Steel
- **Case Size:** 34.5 MM
- **Crystal:** Mineral Glass
- **Strap Material:** Gold-tone Stainless Steel Mesh
- **Clasp Type:** Hook Slide Clasp, Self-adjustable
- **Dial:** Mother of Pearl
- **Water Resistance:** 50 meters (165 feet) - Suitable for short periods of recreational swimming, not for diving or snorkeling.
- **Battery:** 1 Lithium Metal battery (included)
- **Manufacturer:** GUESS

WARRANTY AND SUPPORT

Your GUESS watch is covered by a manufacturer's warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region. Please refer to the warranty card included with your purchase for specific details.

For technical support, service, or warranty claims, please contact GUESS customer service or visit their official website. Keep your proof of purchase for any warranty-related inquiries.

Online Resources: For additional information and support, visit the official GUESS Watches website.

