



Manuals.plus /

› FVBADE /

› FVBADE 78S Pandora Box Retro Arcade Game Console User Manual

FVBADE 78S

FVBADE 78S Pandora Box Retro Arcade Game Console User Manual

Model: 78S

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FVBADE 78S Pandora Box Retro Arcade Game Console. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Image 1.1: FVBADE 78S Pandora Box Retro Arcade Game Console.

This image shows the two separate arcade-style controllers, each with a joystick and multiple buttons, positioned below a television screen displaying a fighting game. The screen indicates "32000 HD Games, Pandora's 78S".

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- FVBADE 78S Main Console Unit (integrated into one of the controllers)
- Second Player Controller Unit
- HDMI Cable
- VGA Cable (if applicable)
- USB Cable (for connecting controllers or external devices)
- Power Adapter
- User Manual (this document)

3. SETUP INSTRUCTIONS

Follow these steps to set up your FVBADE 78S arcade game console:

3.1 Connecting the Controllers

The FVBADE 78S features two separate controller units. Connect the second player controller to the main console unit using the provided data cable. The cable length is approximately 1.5 meters (4.9 feet), allowing for comfortable spacing between players.

3.2 Connecting to a Display Device

The console supports various display outputs. Choose the appropriate cable for your device:

- **HDMI Output:** Connect the HDMI cable from the console's HDMI port to your TV, PC monitor, or projector. This is the recommended connection for high-definition display.
- **VGA Output:** Connect the VGA cable from the console's VGA port to a compatible PC monitor or projector.
- **USB Output:** The USB port can be used to connect to a PC, PlayStation, or Xbox as an external joystick, if the games support it.



Image 3.2.1: Connection Diagram.

This diagram illustrates how to connect the FVBADE 78S console to various display devices such as a projector, monitor, or television using HDMI, VGA, or USB connections. It also shows the location of the volume control and other ports.

3.3 Power Connection

Connect the power adapter to the console's power input port, then plug the adapter into a standard electrical outlet. The console will typically power on automatically or can be switched on using the power switch located on the main unit.

4. OPERATING INSTRUCTIONS

4.1 System Overview

The FVBADE 78S utilizes an 8-core operating system for faster performance and a smoother gaming experience. It comes pre-loaded with approximately 32,000 games.



Image 4.1.1: 8-Core System Architecture.

This image visually represents the 8-core CPU and 32GB RAM, highlighting the advanced processing capabilities of the FVBADE 78S system for enhanced performance.

4.2 Navigating the Game Menu

Upon startup, you will be presented with the main game selection interface. Use the joystick and buttons to navigate:

- **Joystick:** Move up, down, left, and right to browse through game lists and menu options.
- **Action Buttons:** Typically 'A' or 'B' to select, and another button to go back. Refer to the on-screen prompts.

Pandora Treasure 3D System

 
- ✓ 3D Games
- ✓ Save/Load Game
- ✓ Hide/Pause Games
- ✓ Delete Game
- ✓ Search Game
- ✓ Favorite List
- ✓ Recently List
- ✓ Enhance HD
- ✓ Game Category



1980*1080 Output



One Key
Switch Language

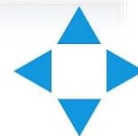

Customize Buttons

Image 4.2.1: Game Menu Interface.

This image shows the main menu of the Pandora Treasure 3D System, highlighting features such as Recent games, Search, 3D Games, Cheats, 3P/4P, Fighting, Action, Hot, Shooting, Sports, Puzzle, and Stories categories. It also indicates 1980*1080 HD Output, One Key Switch Language, and Customize Buttons.

4.3 Game Management Features

The FVBADE 78S offers several features to manage your extensive game library:

- **Save/Load Game:** Allows you to save your progress in compatible games and load them later.
- **Hide/Pause Games:** Temporarily hide games from the list or pause gameplay.
- **Delete Game:** Remove unwanted games from the system.
- **Search Game:** Quickly find specific games by name.
- **Favorite List:** Mark your preferred games for quick access.
- **Recently Played List:** Access games you've played recently.
- **Game Category:** Browse games by genre (e.g., Shooting, Fighting, Action, Puzzle, Sports).

Game Category

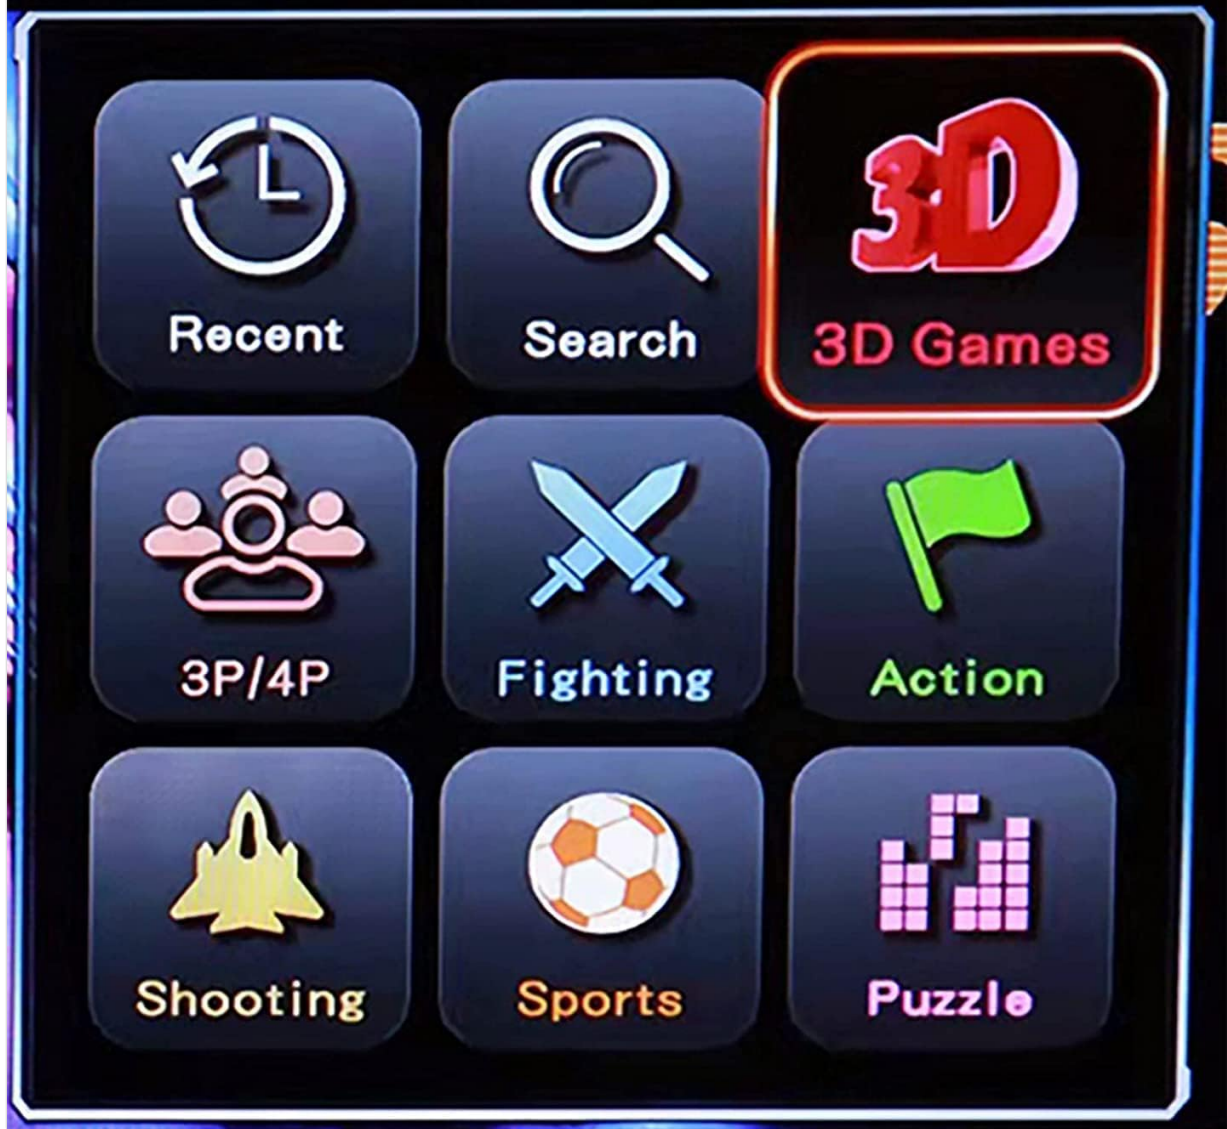 


Image 4.3.1: Game Category Menu.

This image displays the game category selection screen, showing icons for Recent, Search, 3D Games, 3P/4P, Fighting, Action, Shooting, Sports, and Puzzle game types.

4.4 In-Game Options (Pause Menu)

During gameplay, you can typically access a pause menu to manage your game state. This menu often includes options such as:

- **Continue:** Resume gameplay.
- **Save State:** Save the current game progress.
- **Load State:** Load a previously saved game state.
- **Exit:** Return to the main game menu.

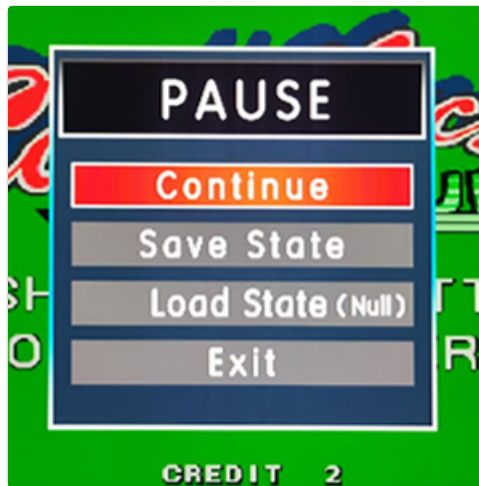 


Image 4.4.1: Pause Menu.

This image shows an in-game pause menu with options for "Continue", "Save State", "Load State (Null)", and "Exit".

4.5 System Settings

Access the system settings to customize various aspects of your console. Options may include:

- **Credit Setting:** Adjust coin/credit settings for arcade-style play.
- **Exit Game Mode:** Configure how to exit games (e.g., return to menu).
- **Pause Menu:** Enable or disable the in-game pause menu.
- **Auto Exit:** Set a timer for automatic game exit.
- **Select Game Mode:** Choose between free play or coin-based play.
- **Quality Optimization:** Adjust display quality settings.
- **Scanning Line:** Enable or disable scanline effects for a retro feel.
- **Timer Mode:** Configure game timer settings.
- **Game Time:** Set the duration for games in timer mode.
- **Gamepad Setting:** Customize button mappings for controllers.

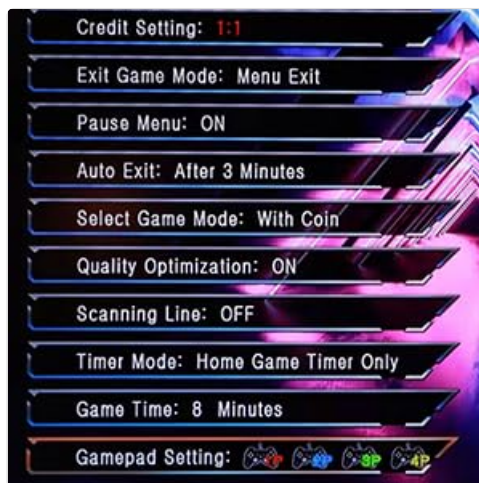 


Image 4.5.1: System Settings Menu.

This image displays a system settings menu with options such as Credit Setting, Exit Game Mode, Pause Menu, Auto Exit, Select Game Mode, Quality Optimization, Scanning Line, Timer Mode, Game Time, and Gamepad Setting.

4.6 Controller Layout and Customization

The console features an 8-way joystick and multiple action buttons. The button layout can often be customized within the system settings (refer to Gamepad Setting in Section 4.5).

Customized Buttons

8 Way Joystick; Custom Button

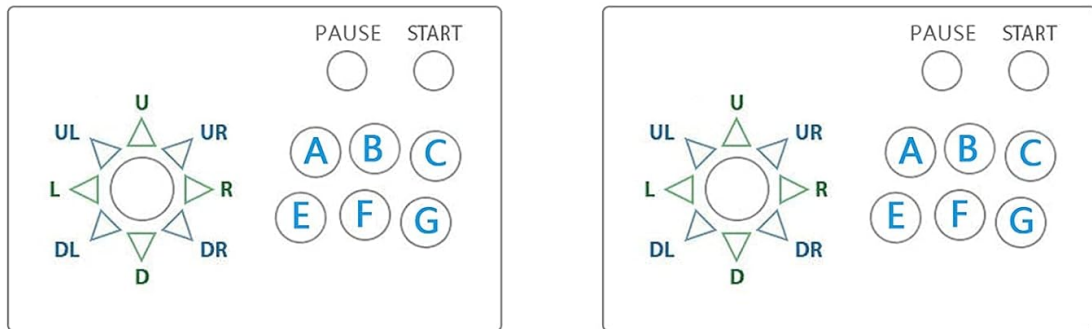 


Image 4.6.1: Controller Button Layout.

This image presents two diagrams illustrating the button layout for the arcade controllers, showing an 8-way joystick and customizable action buttons (A, B, C, E, F, G), along with Pause and Start buttons.

5. MAINTENANCE

To ensure the longevity and optimal performance of your FVBADE 78S console, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the console and controllers. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure all cables are connected securely and are not kinked or strained.
- **Avoid Liquids:** Keep liquids away from the console and controllers to prevent electrical damage.

6. TROUBLESHOOTING

If you encounter issues with your FVBADE 78S console, refer to the following common problems and solutions:

6.1 No Power / Console Not Turning On

- **Check Power Connection:** Ensure the power adapter is securely plugged into both the console and a working electrical outlet.
- **Power Switch:** Verify that the power switch on the main console unit is in the "ON" position.

- **Adapter Functionality:** If possible, test the power adapter with another compatible device or try a different outlet.

6.2 No Display / Blue or Green Screen

- **Check HDMI/VGA Cable:** Ensure the display cable (HDMI or VGA) is firmly connected to both the console and the display device. Try re-seating the cable.
- **Input Source:** Confirm that your TV, monitor, or projector is set to the correct input source (e.g., HDMI 1, VGA).
- **Test Different Display:** If possible, try connecting the console to a different display device to rule out an issue with your primary screen.
- **Restart Console:** Power cycle the console by turning it off, unplugging it for a few seconds, and then plugging it back in and turning it on.

6.3 Games Not Playing Correctly / Freezing

- **Restart Game:** Exit the game and restart it.
- **System Restart:** Perform a full system restart.
- **Check for Updates:** While not explicitly mentioned, some systems may offer firmware updates that resolve game compatibility issues. Consult the manufacturer's website if available.
- **Game Specific Issues:** Some games may have known performance quirks.

6.4 Controller Issues (Loose Joystick/Buttons)

- **Check Connections:** Ensure the data cable connecting the two controllers is secure.
- **System Settings:** Verify controller settings in the system menu (Section 4.5).
- **Physical Inspection:** Inspect joysticks and buttons for any visible damage or debris.

If these steps do not resolve your issue, please contact FVBADE customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model	78S
Brand	FVBADE
Product Dimensions	27"L x 11"W x 5"H (approximate for one controller unit)
Item Weight	3.77 Kilograms (8.28 pounds)
Controller Type	Button Control, Joystick (8-way)
Hardware Interface	HDMI, VGA, USB
System	78S (8-core operation)
Resolution	1280x720 HD (enhanced)
Number of Games	Approximately 32,000
Player Support	1-4 Players (via USB expansion for 3rd/4th player, if games support)
UPC	739224777282

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact FVBADE directly through their official channels. Keep your proof of purchase for any warranty claims.