

[Manuals.plus](#) /

› [Gardtech](#) /

› Gardtech 6-Inch Mini Chainsaw Instruction Manual

Gardtech GT-MINI CHAINSAW

Gardtech 6-Inch Mini Chainsaw Instruction Manual

Model: GT-MINI CHAINSAW

Brand: Gardtech

1. INTRODUCTION

Thank you for choosing the Gardtech 6-Inch Mini Chainsaw. This cordless, portable electric chainsaw is designed for light-duty cutting tasks such as pruning branches, cutting small logs, and general garden work. Its lightweight and ergonomic design make it suitable for various users, including DIY enthusiasts and gardeners.

Package Contents:

- Gardtech 6-Inch Mini Chainsaw Unit
- 2 x 24V 2000mAh Rechargeable Lithium-Ion Batteries
- Battery Charger
- 4 x High-Quality Guide Chains (one pre-installed)
- Work Gloves
- Safety Goggles
- Screwdriver/Wrench for Chain Adjustment
- Hard Carry Case
- Instruction Manual



Figure 1: Gardtech 6-Inch Mini Chainsaw and included accessories.

2. SAFETY INSTRUCTIONS

Always wear appropriate personal protective equipment (PPE) including safety goggles and work gloves when operating the chainsaw. Ensure the work area is clear of obstructions and bystanders. Keep hands and body parts away from the chain when the tool is in operation. Do not operate the chainsaw in wet conditions or near flammable liquids/gases. Always remove the battery before performing any maintenance, cleaning, or when the tool is not in use.

Key Safety Features:

- **Dual Switch:** Requires pressing a safety button before engaging the trigger to prevent accidental starts.
- **Protective Baffle:** Designed to prevent wood chips from splashing towards the user.



Figure 2: Key features including the dual switch and auto-oiling device.

3. SETUP

3.1. Battery Charging

The chainsaw comes with two 24V 2000mAh rechargeable lithium-ion batteries. Before first use, fully charge both batteries.

1. Connect the charger to a power outlet.
2. Plug the charger cable into the battery.
3. The charger will display a red light indicating charging is in progress.
4. Once fully charged, the light will turn green.
5. Disconnect the battery from the charger.

Video 1: This video demonstrates how to adjust the chain and also shows the battery charging process.

3.2. Chain Installation and Adjustment

The chainsaw typically comes with one chain pre-installed. If you need to install or adjust a chain:

1. Ensure the battery is removed for safety.
2. Unscrew the nut on the side cover and remove the cover.
3. Carefully place the chain around the guide bar, ensuring the serrations are facing the correct cutting direction (refer to diagram in manual or product images for correct orientation).
4. Align the chain with the sprocket on the motor unit.
5. Re-attach the side cover, ensuring the guide pin aligns with the guide bar.
6. Tighten the nut slightly, but not fully.
7. Use the provided screwdriver/wrench to adjust the chain tension. The chain should be snug but still able to be pulled slightly away from the guide bar. It should not sag or be overly tight.
8. Once tension is correct, fully tighten the nut on the side cover.



Figure 3: Correct chain steering and installation direction.

Video 2: Detailed instructions on how to adjust the chain of the Gardtech mini chainsaw.

4. OPERATING INSTRUCTIONS

4.1. Lubrication

Before each use, ensure the chain is adequately lubricated. The chainsaw features an auto-oiling device. Fill the oil reservoir with appropriate bar and chain oil (sewing machine oil or 3-in-1 oil is not recommended, use dedicated chain oil). Press the clear soft glue next to the lid to prime the oil flow. The oil will automatically guide into the chain during operation.



Figure 4: Auto-oiling device for continuous chain lubrication.

4.2. Starting the Chainsaw

1. Insert a fully charged battery into the chainsaw handle until it clicks into place.
2. Grip the handle firmly with one hand.
3. Press the safety button located near the trigger.
4. While holding the safety button, press the trigger to start the chainsaw. Release the trigger to stop.

4.3. Cutting Techniques

Always maintain a firm grip on the chainsaw. For optimal performance and safety, allow the chainsaw to reach full speed


before engaging the chain with the material. Cut branches from the top down to avoid pinching the chain. For larger branches (up to 6 inches), make multiple shallow cuts if necessary. Be aware of kickback and maintain a stable stance.



Figure 5: Efficient cutting performance on wood.



Figure 6: Demonstrating the chainsaw in use for cutting tasks.

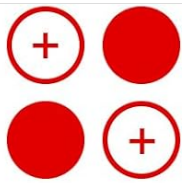

WIDE USAGE

IDEAL FOR CUTTING A WIDE VARIETY OF WOOD

FAST



Figure 7: Versatile use and one-hand operation.

Video 3: Overview of the Gardtech mini chainsaw's features and cutting capabilities.

Video 4: Demonstration of the Gardtech mini chainsaw in action for various cutting tasks.

5. MAINTENANCE

5.1. Cleaning

After each use, remove the battery and clean the chainsaw. Use a brush or compressed air to remove sawdust, wood chips, and debris from the chain, guide bar, and motor housing. Wipe down the exterior with a damp cloth.

5.2. Chain Sharpening and Replacement

Regularly check the sharpness of the chain. A dull chain will reduce cutting efficiency and increase strain on the motor. Sharpen the chain as needed using appropriate tools or replace it with a new one from the provided spares. Refer to the chain installation section for replacement steps.

5.3. Battery Care

Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods. Recharge them periodically if not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or not inserted correctly; Safety button not pressed; Faulty trigger.	Ensure battery is fully charged and properly inserted. Press safety button firmly before trigger. Contact customer support if trigger is faulty.
Poor cutting performance	Dull chain; Incorrect chain tension; Insufficient lubrication.	Sharpen or replace chain. Adjust chain tension. Ensure oil reservoir is full and auto-oiling is functioning.
Chain gets stuck	Chain too tight; Wood pinching the chain.	Loosen chain tension slightly. Adjust cutting angle to prevent pinching.
Battery drains quickly	Battery not fully charged; Old/worn battery; Overworking the chainsaw.	Ensure battery is fully charged before use. Consider replacing old batteries. Avoid forcing the chainsaw through thick material.

7. SPECIFICATIONS

- **Brand:** Gardtech
- **Model:** GT-MINI CHAINSAW
- **Power Source:** Battery Powered
- **Horsepower:** 880 Watts
- **Item Weight:** 2.6 Pounds
- **Product Dimensions:** 4.1"L x 4.7"W x 15.7"H
- **Chain Length:** 6 Inches
- **Battery Type:** 24V 2000mAh Lithium-Ion (2 included)
- **Chain Speed:** Up to 19.2 FT/S
- **UPC:** 798220662268

NEW ADVANCED TECHNOLOGY



Figure 8: Battery specifications and running time.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in your product packaging or visit the official Gardtech website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question