

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN RC311S Replacement Remote Control User Manual

PERFASCIN RC311S

PERFASCIN RC311S Replacement Remote Control User Manual

Model: RC311S

INTRODUCTION

This manual provides instructions for the PERFASCIN RC311S replacement remote control. This remote is designed to function as a direct replacement for various Zonda, Panavox, Premier, Noblex, and TCL TV models, requiring no programming or pairing. Please read this manual carefully to ensure proper use and longevity of your remote control.



Figure 1: Front view of the PERFASCIN RC311S Replacement Remote Control.

SETUP

Battery Installation

The RC311S remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Battery compartment with cover removed, showing AAA battery slots.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.

OPERATION

The PERFASCIN RC311S is an infrared (IR) remote control. It operates by sending infrared signals to your television. Ensure there are no obstructions between the remote control and the TV's IR receiver.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **TV/Source:** Switches between input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the volume level.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Netflix/YouTube Buttons:** Direct access to streaming applications (if supported by your TV model).

Compatible TV Models

This remote control is compatible with a range of Zonda, Panavox, Premier, Noblex, and TCL TV models, including but not limited to:

- PLE-43S09UHD, PLE-50S08UHD, PLE-32S08HD
- PLE-50D1200F, PLE-43D1202UD, PLE-55S08UHD
- PLE-55S09UHD, PLE-50D1200F, PLE-55D1202
- PLE-32S1HD, PLE-32D1202, PLE-65S08UHD
- PLE-65D1800, PLE-32S08HD, PLE-40S08FHD
- PLE-40D1202, PLE-43S08FHD, PLE-43D1202, PLE-43D1202UD

If your specific TV model is not listed, please refer to the product listing or contact customer support for compatibility verification.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's performance degrades or stops working.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's IR receiver.
 - Point the remote directly at the TV.
- **Limited functionality:**
 - Verify that your TV model is listed as compatible. While this remote is a direct replacement, some advanced functions may vary slightly depending on the original remote's capabilities and your TV's specific features.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

Brand	PERFASCIN
Model Number	RC311S
Product Dimensions	7 x 2 x 0.6 inches
Item Weight	3.84 ounces
Batteries Required	2 AAA batteries (not included)
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television (Zonda, Panavox, Premier, Noblex, TCL)

WARRANTY INFORMATION

As a replacement part, specific warranty terms may vary. Please refer to the original purchase documentation or contact the seller, DeFascin Inc, for detailed warranty information regarding this product. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding product compatibility, please contact the seller directly. You may also refer to the product listing on Amazon for additional information or contact options.

Seller: DeFascin Inc

For general inquiries, you can often find contact information on the seller's Amazon storefront or through your order history.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question