

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UrbanX](#) /

› [UrbanX TWS530 Wireless Earbuds User Manual](#)

UrbanX TWS530

UrbanX TWS530 Wireless Earbuds User Manual

Model: TWS530

INTRODUCTION

Thank you for choosing the UrbanX TWS530 Wireless Earbuds. This manual provides detailed instructions to help you set up, operate, and maintain your earbuds for an optimal audio experience. Please read this manual thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

- UrbanX TWS530 Wireless Earbuds (Left and Right)
- Portable Charging Case
- USB Charging Cable
- User Manual
- Eartips (various sizes, typically S/M/L)

PRODUCT OVERVIEW

Familiarize yourself with the components of your UrbanX TWS530 Wireless Earbuds.



Figure 1: Earbuds in Charging Case. This image displays the UrbanX TWS530 wireless earbuds securely placed within their open charging case. The case features a digital display indicating the battery level.

Invisible To The Ear

Just pick it up, boot up, connect and say goodbye to tedious



Figure 2: Compact Design. The earbuds are shown in their charging case, highlighting their compact and discreet design, often referred to as "invisible to the ear" for comfortable wear.



Figure 3: Earbuds and Charging Case Components. This image illustrates the charging case with its integrated wrist strap, alongside the two individual earbuds (Left and Right) removed from the case.



Figure 4: Product Packaging. This image shows the UrbanX TWS530 earbuds within their charging case, presented alongside the product's retail packaging.

CHARGING THE EARBUDS AND CASE

For optimal performance, fully charge the earbuds and charging case before first use.

Charging the Earbuds:

1. Place the earbuds into their respective slots in the charging case.
2. Close the charging case lid. The earbuds will automatically begin charging.
3. The digital display on the case will show the charging status and battery level.

Charging the Charging Case:

1. Connect the provided USB charging cable to the charging port on the case.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.

3. The digital display on the case will indicate the charging progress.
4. Once fully charged, the display will show "100" or a full battery icon.

The charging case has a 2000mAh battery, capable of recharging the earbuds multiple times and can also serve as a power bank for your smartphone in emergencies.

SETUP: PAIRING INSTRUCTIONS

Initial Pairing (First Use):

1. **Step 1: Power On.** Open the charging case, and the earbuds will automatically power on and enter pairing mode. You will hear a voice prompt indicating they are ready to pair.
2. **Step 2: Activate Bluetooth.** On your mobile device (smartphone, tablet, laptop), go to the Bluetooth settings and ensure Bluetooth is enabled.
3. **Step 3: Select Device.** In the list of available Bluetooth devices, search for "TWS530" or "UrbanX TWS530" and select it to connect.
4. **Step 4: Confirmation.** Once connected, you will hear a voice prompt confirming successful pairing. The earbuds are now ready for use.

Automatic Reconnection:

After initial pairing, the earbuds will automatically connect to the last paired device when removed from the charging case, provided the device's Bluetooth is active and within range.

Mono Mode:

Either earbud can be used independently in mono mode. Simply take one earbud out of the case, and it will connect to your device. The other earbud can remain in the case or be used later to switch to stereo mode.

OPERATING INSTRUCTIONS: TOUCH CONTROLS

The UrbanX TWS530 earbuds feature intuitive touch controls on each earbud. Refer to the following table for common functions:

Function	Action
Play/Pause Music	Single tap on either earbud
Next Track	Double tap on the Right earbud
Previous Track	Double tap on the Left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds
Activate Voice Assistant	Triple tap on either earbud
Volume Up	Press and hold the Right earbud
Volume Down	Press and hold the Left earbud

Note: Specific touch control functions may vary slightly depending on your connected device and operating system.

WEARING THE EARBUDS

For the best audio quality and comfort, ensure a proper fit:

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert each earbud into your ear canal.
3. Rotate the earbud slightly until it feels secure and comfortable.
4. Experiment with different eartip sizes (if provided) to find the best seal for your ears. A good seal enhances bass response and noise isolation.

Maintenance and Care

Proper care will extend the lifespan of your UrbanX TWS530 earbuds:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX7 waterproof, meaning they can withstand sweat and rain. However, they are not designed for swimming or prolonged submersion. Ensure the charging port is dry before charging.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or direct sunlight for extended periods.
- **Avoid Impact:** Do not drop or subject the earbuds or charging case to strong impacts.

Troubleshooting

If you encounter issues with your earbuds, try the following solutions:

- **Earbuds not pairing with device:**
 - Ensure both earbuds are charged.
 - Turn off and then turn on Bluetooth on your device.
 - Delete "TWS530" from your device's Bluetooth list and attempt to pair again.
 - Place earbuds back in the case, close the lid, wait a few seconds, then open to re-initiate pairing mode.
- **Only one earbud is working:**
 - Ensure both earbuds are charged.
 - Place both earbuds back into the charging case, close the lid, and then open it again. This often forces them to re-sync.
 - Try resetting the earbuds (refer to specific reset instructions if available, or try forgetting the device and re-pairing).
- **Earbuds not charging:**
 - Ensure the charging case itself is charged.
 - Check that the charging contacts on both the earbuds and the case are clean and free of debris.
 - Verify the USB charging cable is securely connected to both the case and the power source.
- **Low volume or poor sound quality:**
 - Adjust the volume on both your device and using the earbud touch controls.
 - Ensure the eartips provide a good seal in your ear. Try different sizes.
 - Clean any earwax or debris from the earbud nozzles.
 - Ensure there are no obstructions between your device and the earbuds.

Specifications

Feature	Detail
---------	--------

Feature	Detail
Model Name	UrbanX TWS530
Connectivity Technology	Wireless (Bluetooth 5.0)
Wireless Communication Technology	Bluetooth
Water Resistance Level	IPX7
Control Method	Touch
Charging Case Battery Capacity	2000mAh
Playtime (Earbuds)	Up to 60 hours with charging case (total)
Item Weight	1 Ounce (earbuds)
Product Dimensions	2 x 3 x 2 inches
Special Features	Lightweight, Microphone Included, Sweatproof

WARRANTY AND SUPPORT

UrbanX products are designed for reliability and performance. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact UrbanX customer support.

If you experience any issues or have questions regarding your UrbanX TWS530 Wireless Earbuds, please contact our customer support team for assistance. Contact information can typically be found on the product packaging or the official UrbanX website.