

[Manuals.plus](#) /

> [SHINTYOOL](#) /

> SHINTYOOL Cordless 2-in-1 Leaf Blower and Vacuum (Model SH6601) Instruction Manual

SHINTYOOL SH6601

SHINTYOOL Cordless 2-in-1 Leaf Blower and Vacuum (Model SH6601) Instruction Manual

Your guide to safe and efficient operation.

1. PRODUCT OVERVIEW

The SHINTYOOL Cordless 2-in-1 Leaf Blower and Vacuum is a versatile tool designed for various cleaning and inflation tasks. It operates on a 21V lithium battery, offering portability and convenience for outdoor and indoor use.

Included Components:

- Cordless 2-in-1 Blower & Vacuum Unit
- 21V Lithium Battery
- Battery Charger
- 3 Inflatable Nozzles
- 1 Extension Tube
- 2 Standard Nozzles (for blowing/vacuuming)
- 1 Reusable Collection Bag
- 2 Connectors
- 1 Hose
- Instruction Manual



Image: The SHINTYOOL Cordless Leaf Blower unit with all included accessories, including the battery, charger, various nozzles, hose, and collection bag.

What Will You Get

- 1 * Cordless 2-in-1 Blower & Vacuum
- 1 * 21 Volt Lithium Battery
- 3 * Inflatable Nozzles
- 1 * Battery Charger
- 1 * Extension Tube
- 2 * Nozzle
- 1 * Dust Bag
- 2 * Connector
- 1 * Hose



Image: A visual representation detailing each component included in the SHINTYOOL Cordless Blower and Vacuum package.

2. SAFETY INSTRUCTIONS

Always read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Personal Safety:** Always wear eye protection. Wear hearing protection if operating for extended periods. Do not operate in wet conditions.
- **Electrical Safety:** Use only the specified battery and charger. Do not charge the battery for more than 6 hours to prevent damage. Do not expose the battery or charger to water.
- **Product Use and Care:** Keep all body parts away from moving parts. Do not point the blower nozzle at people or animals. Ensure all attachments are securely fastened before operation.
- **Battery Care:** Store the leaf blower with a fully charged battery when not in use to maintain capacity. Fully charge the battery before its first use. Avoid overnight charging.

3. SETUP AND ASSEMBLY

3.1 Battery Charging

1. Connect the charger to a standard 110V power outlet.
2. Insert the 21V Lithium Battery into the charger.
3. Allow the battery to charge until the indicator light shows a full charge. Do not charge for more than 6 hours.
4. Disconnect the charger from the power outlet and remove the battery once fully charged.

3.2 Battery Installation

1. Align the charged battery with the battery slot on the main blower unit.
2. Slide the battery firmly into place until it clicks, ensuring a secure connection.

3.3 Attaching Nozzles and Tubes (Blower Mode)

1. Select the desired nozzle (e.g., standard nozzle or extension tube).
2. Attach the nozzle or extension tube to the air outlet of the blower unit by twisting or pushing until it is securely fitted.

3.4 Converting to Vacuum Mode

1. Ensure the unit is turned off and the battery is removed for safety.
2. Attach the hose to the air inlet of the blower unit.
3. Securely attach the collection bag to the air outlet.
4. Attach the desired vacuum nozzle to the end of the hose.

3.5 Attaching Inflatable Nozzles (Inflator/Deflator Mode)

1. For inflation, attach one of the three inflatable nozzles to the air outlet.
2. For deflation, attach one of the three inflatable nozzles to the air inlet.

4. OPERATING INSTRUCTIONS

4.1 General Operation

1. Ensure the battery is fully charged and correctly installed.
2. Select the appropriate mode (blower, vacuum, or inflator/deflator) and attach the necessary accessories.
3. To start the unit, press and hold the trigger.
4. To engage the trigger lock for continuous operation, press the trigger and then push the lock button (indicated by a padlock icon) forward. Release the trigger.
5. To stop the unit, release the trigger. If the trigger lock is engaged, press the trigger again to disengage the lock, then release.

Trigger Lock



Image: A detailed view of the blower's handle, highlighting the trigger (1) and the trigger lock button (2) for continuous operation.

4.2 Blower Function

Use the blower function to clear leaves, dust, small trash, and debris from various surfaces such as patios, driveways, cars, and computer hosts. The powerful airflow (up to 130 MPH) makes quick work of light to moderate debris.



Image: Demonstrates the SHINTYOOL blower in use for car cleaning and general outdoor debris removal.

4.3 Vacuum Function

When configured for vacuuming, the unit can effectively pick up dust, pet hair, crumbled food, and other small particles. This is ideal for cleaning car interiors, hard-to-reach corners, and small indoor areas.



Car Vacuuming

Portable Cordless 2-in-1 Jobsite Blower
2-in-1 design not only helps you to clean the small leaves, but also can clean the corner and gap which is hard to clean

SHINTYOOOL 2-in-1 PERFORMANCE

Cordless Leaf Blower Allows You To Clean Up
Anywhere Wanted



Image: The SHINTYOOOL unit being used as a vacuum cleaner to remove debris from a car seat.

4.4 Inflator/Deflator Function

The included inflatable nozzles allow the unit to inflate or deflate various items such as dinghies, airbeds, rafts, and other inflatable devices. Attach the nozzle to the air outlet for inflation or the air inlet for deflation.



Image: The SHINTYOOL blower equipped with an inflatable nozzle, demonstrating its use for inflating an air mattress.

5. MAINTENANCE

5.1 Cleaning

- Always ensure the unit is turned off and the battery is removed before cleaning.
- Wipe the exterior of the unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Empty the collection bag regularly when using the vacuum function. Clean the bag as needed.
- Inspect nozzles and tubes for blockages and clear any debris.

5.2 Storage

- Store the unit in a dry, cool place, away from direct sunlight and moisture.
- Ensure the battery is fully charged before storing for extended periods to prolong its lifespan.
- Keep the unit and all accessories out of reach of children.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	Battery not charged or improperly installed.	Ensure battery is fully charged and securely inserted.
Low blowing/vacuuming power	Battery low. Nozzle/tube/hose blockage. Collection bag full.	Recharge battery. Clear any blockages. Empty collection bag.
Battery not charging	Charger not connected properly. Faulty charger or battery.	Check charger connection. Contact customer support if issue persists.
Unit overheats	Prolonged continuous use. Blocked air vents.	Allow unit to cool down. Ensure air vents are clear.

7. SPECIFICATIONS

- **Brand:** SHINTYOOL
- **Model:** SH6601
- **Power Source:** Battery Powered
- **Voltage:** 21 Volts
- **Battery Type:** Lithium Ion (1 included)
- **Form Factor:** Handheld
- **Special Features:** Inflate, Interchangeable Nozzle Connection, Vacuum, Rechargeable, Work Continually
- **Item Weight:** 2.7 Pounds (approximately 1.22 kg)
- **Material:** Plastic
- **Product Dimensions:** 12"L x 6"W x 7"H (approximately 30.5cm L x 15.2cm W x 17.8cm H)
- **Speed:** Up to 130 Miles per Hour (approximately 209 km/h)



Image: The SHINTYOOL Cordless Leaf Blower unit, illustrating its compact design and components.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

SHINTYOOL provides coverage for non-human damage. If you encounter any issues with your product that are not due to misuse, please contact customer support for assistance. The company is committed to providing a full refund or replacement for eligible items.

8.2 Customer Support

For any questions, concerns, or technical assistance, please refer to the contact information provided in your product packaging or visit the official SHINTYOOL website. Please have your model number (SH6601) and purchase details ready when contacting support.