

[manuals.plus](#) /› [Finger Dance](#) /› [Finger Dance Folding Piano Keyboard 88 Keys User Manual](#)**Finger Dance bf5767d0-f2c3-49a3-9a8a-78382913f0e8**

Finger Dance Folding Piano Keyboard 88 Keys User Manual

Model: bf5767d0-f2c3-49a3-9a8a-78382913f0e8

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Finger Dance Folding Piano Keyboard. Please read this manual thoroughly before using the product to ensure proper function and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 88-Key Folding Piano Keyboard
- Power Adapter
- Headphones
- Sustain Pedal
- Music Stand
- Carrying Bag
- Dustproof Cloth
- Note Stickers
- Book Clip



Image 1: Finger Dance 88-Key Folding Piano Keyboard and Included Accessories

3. PRODUCT FEATURES

- **88 Semi-Weighted Keys:** Provides a touch-sensitive playing experience.
- **Foldable Design:** Allows for compact storage and portability.
- **Bluetooth MIDI Connectivity:** Enables wireless connection to external devices for recording and app integration.
- **Built-in Speakers:** For direct audio output.
- **128 Tones & 128 Rhythms:** Offers a variety of sound options.
- **21 Demo Songs:** For listening and learning.
- **Functions:** Record, Playback, Sustain, Transpose, Metronome, Drum Kit, Dual Voice.
- **Long Battery Life:** Up to 8-12 hours of play after a full charge.

PRODUCT DETAIL



88 Keys Folding Piano x1



Power Adapter x1



Headphone x1



Note Sticker x1



Sustain Pedal x1



Book Clip x1



Carrying Bag x1



Dustproof Cloth x1



Music Stand x1

Image 2: Semi-Weighted Key Touch Sensitivity

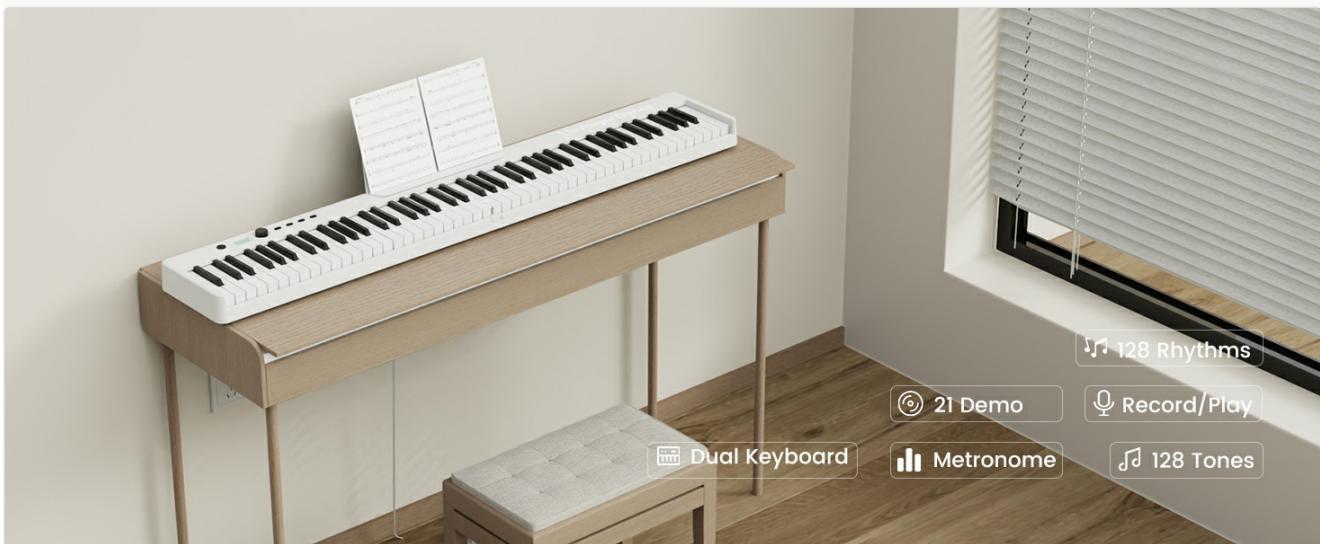


Image 3: User Interacting with Piano Functions

4. SETUP

4.1 Unfolding the Keyboard

1. Place the folded keyboard on a flat, stable surface.
2. Locate the folding mechanism.
3. Press the release button or mechanism to unlock the two halves.
4. Gently unfold the keyboard until it lies flat and locks into place. Ensure it is fully extended and stable before use.



Image 4: Folding Mechanism of the Finger Dance Piano Keyboard

4.2 Power Connection

1. Connect the power adapter to the DC IN port on the keyboard.
2. Plug the adapter into a standard electrical outlet.
3. The keyboard can also operate on its internal battery. Ensure the battery is charged for portable use.

4.3 Accessory Connection

- **Sustain Pedal:** Connect the sustain pedal to the "SUS" port.
- **Headphones:** Plug headphones into the "Headphone" (ﷺ) port for private practice.
- **Music Stand:** Insert the music stand into the designated slots on the keyboard.



Image 5: Input and Output Ports (Sustain, MP3, Microphone, Headphone, USB/MIDI)

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power button to turn the keyboard on or off.

5.2 Volume Adjustment

Use the Volume control buttons or knob to adjust the output volume.

5.3 Tone Selection

Press the "Tone" button, then use the data wheel or +/- buttons to select from 128 available tones.

5.4 Rhythm Selection

Press the "Rhythm" button, then use the data wheel or +/- buttons to select from 128 available rhythms.

5.5 Metronome

Press the "Metronome" button to activate or deactivate the metronome. Adjust tempo using the data wheel or dedicated buttons.

5.6 Record and Playback

- **Record:** Press the "Record" button to begin recording your performance.
- **Playback:** Press the "Play" button to listen to your recorded performance.

5.7 Bluetooth MIDI Connection

1. Ensure the keyboard is powered on.
2. Activate Bluetooth on your external device (e.g., smartphone, tablet, computer).
3. Search for available Bluetooth MIDI devices and select "Finger Dance Piano" (or similar name).
4. Once connected, you can use the keyboard with compatible music applications (e.g., GarageBand, Simply Piano, Flowkey).



Image 6: Bluetooth MIDI Connectivity with External Devices

6. MAINTENANCE

- **Cleaning:** Use the provided dustproof cloth or a soft, dry cloth to clean the keyboard surface. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, fold the keyboard and store it in the carrying bag to protect it from dust and damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the keyboard regularly, even if not in use for extended periods.
- **Key Care:** Avoid applying excessive force to the keys. Keep liquids away from the keyboard to prevent internal damage.

AVAILABLE COLORS



Image 7: Close-up of Key Surface Texture

7. TROUBLESHOOTING

No Sound:

Check if the keyboard is powered on. Ensure the volume is not set to minimum. If headphones are connected, disconnect them to check internal speakers. Verify external speaker connections if applicable.

Keys Not Responding or Inconsistent Sound:

Ensure the keyboard is fully unfolded and locked. Check for any debris between keys. If using Bluetooth MIDI, ensure a stable connection and minimal latency in your application settings.

Bluetooth MIDI Connection Issues:

Ensure Bluetooth is enabled on both the keyboard and your device. Try restarting both devices. Ensure no other devices are interfering with the Bluetooth signal. Some applications may experience slight latency with wireless MIDI.

Keyboard Not Charging:

Verify the power adapter is correctly connected to the keyboard and a working power outlet. Check the power adapter for any visible damage.

Volume Resets on Power Cycle:

This is a known characteristic of some digital pianos. Adjust the volume after each power-on.

8. SPECIFICATIONS

Feature	Detail
Brand	Finger Dance
Model Name	Folding Piano Keyboard
Model Number	bf5767d0-f2c3-49a3-9a8a-78382913f0e8
Number of Keys	88
Key Type	Semi-Weighted, Touch Sensitive
Connectivity Technology	Bluetooth MIDI, USB
Power Source	Battery Powered (1 Lithium Ion battery included)

Headphones Jack	3.5mm Jack
Product Dimensions (Unfolded)	49.88"W x 8.23"D x 1.57"H
Item Weight	8.8 pounds (4 Kilograms)
Color	White
Skill Level	Beginner



Image 8: Dimensions of the Finger Dance Folding Piano Keyboard

9. WARRANTY AND SUPPORT

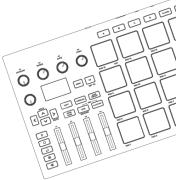
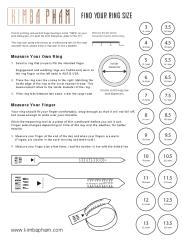
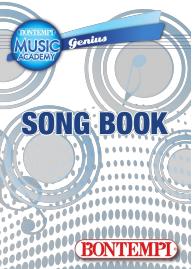
The Finger Dance Folding Piano Keyboard comes with a **365-day warranty**. For technical support, warranty claims, or any product-related inquiries, please contact Finger Dance customer service. Contact information can typically be found on the product packaging or the official Finger Dance website.

For additional assistance, you may refer to the official Finger Dance store on Amazon [Finger Dance Store](#)

© 2023 Finger Dance. All rights reserved.

Related Documents - [bf5767d0-f2c3-49a3-9a8a-78382913f0e8](#)

	<p>Finger Dance Electronic Piano Function Specification</p> <p>This document provides a comprehensive function specification for the Finger Dance Electronic Piano, detailing its panel functions, interface, and various operational modes including demo, recording, metronome, and Bluetooth connectivity.</p>
--	---

 <p>EMP-16 MIDI PAD USER MANUAL V1.01</p>	<p>EMP-16 MIDI Pad User Manual V1.01</p> <p>User manual for the EMP-16 MIDI Pad, a MIDI controller with 16 velocity-sensitive pads, OLED display, and Bluetooth connectivity. This guide covers setup, functions, and maintenance.</p>
	<p>Kimba Pham Ring Sizer Guide and International Size Chart</p> <p>A comprehensive guide from Kimba Pham on how to accurately measure your ring size using printable tools and an international size conversion chart.</p>
	<p>NYCDA Pittsburgh 2024: 30th Anniversary Dance Convention & Competition</p> <p>Join the New York City Dance Alliance (NYCDA) for its 30th-anniversary celebration in Pittsburgh, PA, February 16-18, 2024. Experience workshops, competitions, faculty, and scholarships designed for dancers' professional growth.</p>
	<p>N-GEAR Dance Mat User Manual: How to Play and Safety Instructions</p> <p>Comprehensive user manual for the N-GEAR Dance Mat, detailing how to play in dance and piano modes, along with important maintenance and safety precautions. Includes instructions in English, French, German, Dutch, Spanish, and Italian.</p>
	<p>Bontempi Song Book: Learn Your Favorite Tunes</p> <p>Discover a world of music with the Bontempi Song Book. This comprehensive guide provides easy-to-follow instructions and chord diagrams for playing popular songs on your Bontempi keyboard, featuring classics and children's tunes in multiple languages.</p>