

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Grundig](#) /

› [GRUNDIG VCP 5030 Cordless Stick Vacuum Cleaner with Mopping Function - Instruction Manual](#)

Grundig VCP 5030

GRUNDIG VCP 5030 Cordless Stick Vacuum Cleaner with Mopping Function - Instruction Manual

1. INTRODUCTION

Thank you for choosing the GRUNDIG VCP 5030 Cordless Stick Vacuum Cleaner. This versatile 3-in-1 appliance is designed for efficient cleaning, functioning as a stick vacuum, a handheld vacuum, and featuring an integrated mopping function. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance of your device.

Please read these instructions carefully before using the appliance and keep them for future reference.

2. SAFETY INSTRUCTIONS

General Safety:

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- This appliance is intended for domestic use only. Do not use it for commercial or industrial purposes.
- Do not use the appliance to vacuum water or other liquids, hot ashes, large sharp objects, or flammable substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust container and filters properly installed.
- Always disconnect the appliance from the charger before cleaning or performing maintenance.

Battery Safety:

- The appliance is equipped with a 25.2V Li-ion battery. Use only the charger supplied with the appliance.
- Do not expose the battery to high temperatures or direct sunlight.
- If the battery is damaged or leaking, avoid contact with skin and eyes. Seek medical attention if contact occurs.
- Do not attempt to replace the battery yourself. Contact authorized service personnel.

3. PRODUCT OVERVIEW

The GRUNDIG VCP 5030 is a versatile cleaning tool. Familiarize yourself with its components:

- **Main Unit:** Contains the motor, dust container, and battery.
- **Extension Tube:** Connects the main unit to the floor brush for stick vacuum mode.
- **Electric Turbo Brush:** Main floor cleaning head with rotating brush and LED lights.
- **Mopping Attachment:** Integrated water tank and microfiber cloth for wet cleaning.
- **Crevice Tool:** For narrow spaces and corners.
- **2-in-1 Upholstery/Furniture Nozzle:** For cleaning delicate surfaces and fabrics.
- **Charging Station:** For convenient storage and charging, with accessory holders.





Figure 3.1: The GRUNDIG VCP 5030 Cordless Stick Vacuum Cleaner shown with its charging station and accessories.



Figure 3.2: Close-up view of the main unit, highlighting the dust container and control panel.

4. SETUP

4.1 Assembly:

1. Insert the extension tube into the main unit until it clicks into place.
2. Attach the electric turbo brush to the other end of the extension tube, ensuring it locks securely.
3. For handheld use, detach the extension tube and attach desired accessories (crevice tool, 2-in-1 nozzle) directly to the main unit.







Figure 4.1: The vacuum cleaner fully assembled in stick mode, ready for use.



Figure 4.2: The main unit configured as a handheld vacuum, ideal for smaller tasks.

4.2 Initial Charging:

1. Place the vacuum cleaner on its charging station.
2. Connect the charger to a power outlet.
3. The LED charge indicator will illuminate, showing the charging status. A full charge takes approximately 4 to 6 hours.
4. Ensure the appliance is fully charged before first use to maximize battery life.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Levels:

- Press the power button to turn the vacuum cleaner on. It will start at the default suction level.
- Press the suction level button to cycle through the 3 available power levels (Low, Medium, High) to suit your cleaning needs.
- Press the power button again to turn the appliance off.

5.2 Using the Stick Vacuum:

- For floor cleaning, use the appliance in stick mode with the electric turbo brush.
- The 4 integrated LED lights on the brush head illuminate dust and debris under furniture for thorough cleaning.



Figure 5.1: The electric turbo brush in action, showing the LED lights illuminating the floor surface.



Figure 5.2: The vacuum cleaner effectively cleaning a carpeted surface.

5.3 Using the Mopping Function:

1. Fill the integrated water tank of the mopping attachment with clean water.
2. Attach the microfiber cloth to the mopping attachment.
3. Securely attach the mopping attachment to the electric turbo brush using the magnetic connectors.
4. You can now vacuum and mop simultaneously.



Figure 5.3: Detailed view of the electric turbo brush with the mopping attachment connected.

5.4 Battery Runtime:

- The 25.2V Li-ion battery provides up to 45 minutes of continuous operation on a full charge, depending on the selected power level and accessories used.
- The LED charge indicator will show the remaining battery life and signal when recharging is needed.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

6.1 Emptying the Dust Container:

1. The dust container has a capacity of 700 ml. Empty it regularly to maintain suction power.
2. Press the hygienic emptying button to release the bottom flap of the dust container and empty its contents into a waste bin.

6.2 Cleaning Filters:

- The appliance uses a fabric filter. Remove the filter from the dust container.
- Tap the filter gently to remove loose dust. If heavily soiled, rinse it under running water.
- Allow the filter to air dry completely for up to 48 hours before reinserting it. Do not use the appliance with a wet filter.

6.3 Cleaning the Electric Turbo Brush:

- Periodically check the brush roll for tangled hair or debris.
- Use scissors to cut and remove any tangled hair from the brush roll.

6.4 Cleaning the Mopping Attachment:

- After each use, empty any remaining water from the water tank.
- Remove and wash the microfiber cloth. It can be hand-washed or machine-washed according to its care instructions.

7. TROUBLESHOOTING

If you encounter issues with your GRUNDIG VCP 5030, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is discharged.	Charge the battery fully.
Low suction power.	Dust container is full. Filter is clogged. Nozzle/tube is blocked.	Empty the dust container. Clean or replace the filter. Check and clear any blockages.
Mopping function not effective.	Water tank is empty. Microfiber cloth is dry or dirty.	Refill the water tank. Moisten or clean the microfiber cloth.
Brush roll not rotating.	Hair or debris tangled in brush.	Clean the brush roll, removing any obstructions.

8. SPECIFICATIONS

Brand	Grundig
Model Number	VCP 5030 (GMS3620)
Battery Type	25.2V Li-ion
Dust Capacity	700 ml
Power	40.06 Watts
Runtime	Up to 45 minutes
Charging Time	4-6 hours
Noise Level	81 dB

Dimensions (L x W x H)	26 x 22 x 110 cm
Weight	5.96 kg
Filter Type	Fabric
Special Features	3-in-1 functionality, Mopping function, LED lights, 3 suction levels

9. WARRANTY AND SUPPORT

The GRUNDIG VCP 5030 Cordless Stick Vacuum Cleaner typically comes with a **3-year warranty**. Please refer to your purchase documentation for specific warranty terms and conditions.

For technical support, spare parts, or warranty claims, please contact your retailer or the official Grundig customer service in your region. Keep your proof of purchase for any warranty-related inquiries.