

[Manuals.plus](#) /

› [Ygdigital](#) /

› Ygdigital 11.5" LED Digital Wall Clock Model GH0717L Instruction Manual

Ygdigital GH0717L

Ygdigital 11.5" LED Digital Wall Clock

Model: GH0717L - Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Ygdigital 11.5" LED Digital Wall Clock (Model GH0717L). Please read this manual thoroughly before using the product to ensure proper function and longevity. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Ygdigital 11.5" LED Digital Wall Clock
- 1 x Remote Control
- 1 x CR2032 Coin-cell Backup Battery (pre-installed or separate)
- 1 x USB Power Adapter
- 1 x DC Power Cord (USB to DC barrel plug)
- Mounting Hardware (e.g., wall hooks, screws)
- Instruction Manual (this document)



Image: The complete package contents, including the digital clock, remote control, power adapter, USB cable, and mounting accessories.

3. PRODUCT OVERVIEW

The Ygdigital LED Digital Wall Clock features a large display for time, date, day, and temperature, along with an alarm function and remote control for convenient adjustments.

Digital Clock Large Display

TIME (12/24H)

ALARM (One)



Image: Front display of the clock showing time, date, day, and temperature.

Back Panel Features



Image: Back panel of the clock indicating button locations, power port, and battery compartment.

- **Light Sensor:** Automatically adjusts display brightness.
- **Wall Hanging Slots:** For mounting the clock on a wall.
- **Control Buttons:** SNOOZE, DOWN, UP, ALARM, SET for manual adjustments.
- **Alarm Buzzer:** Sound output for the alarm.
- **Desktop Stands:** Fold-out stands for tabletop placement.
- **CR2032 Coin-cell Backup Battery Compartment:** Holds the battery for time memory during power outages.
- **DC Power Cord Port:** Connects to the USB power adapter.

4. SETUP

4.1 Power Connection

1. Connect the DC power cord to the DC Power Cord Port on the back of the clock.
2. Plug the USB end of the power cord into the provided USB power adapter.
3. Plug the USB power adapter into a standard electrical outlet. The clock display will illuminate.

4.2 Backup Battery Installation

The clock uses a CR2032 coin-cell battery to maintain time settings during power interruptions. This battery is typically pre-installed. If not, or if replacement is needed:

1. Locate the CR2032 battery compartment on the back of the clock.
2. Open the compartment cover.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Close the compartment cover securely.

4.3 Mounting Options

The clock can be placed on a desktop or mounted on a wall.

- **Desktop Placement:** Extend the desktop stands on the back of the clock to stand it upright on a flat surface.
- **Wall Mounting:** Use the wall hanging slots on the back of the clock with the provided mounting hardware (screws/hooks) to secure it to a wall. Ensure the clock is level and securely fastened.



Two Ways of Placement

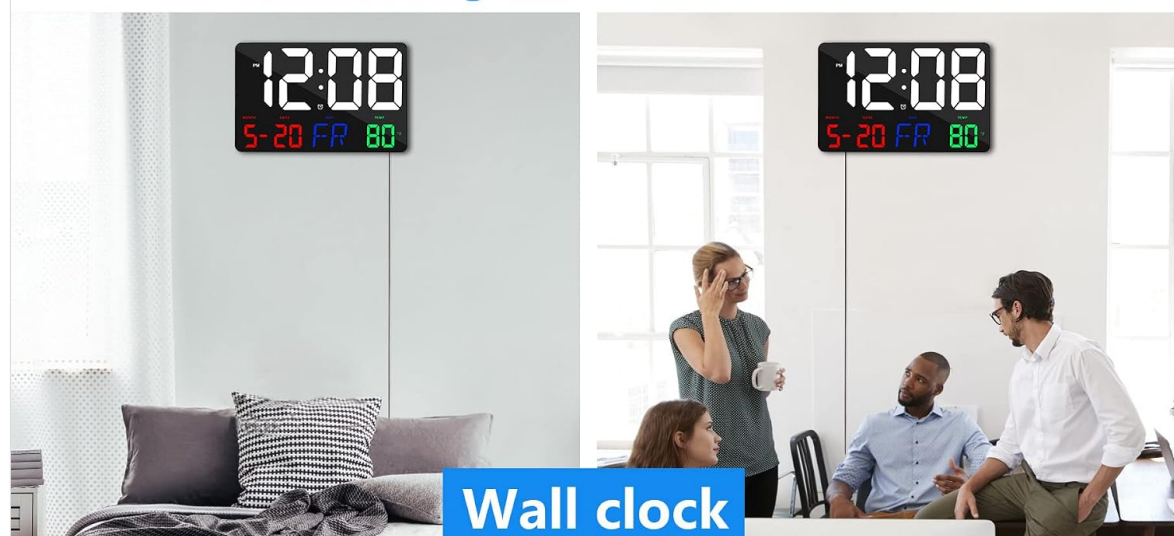


Image: Examples of desk and wall placement for the clock.

5. OPERATION

The clock can be operated using the buttons on the back or the included remote control.



Image: Using the remote control to operate the clock.

5.1 Setting Time and Date

Use the remote control for easier adjustment.

1. Press the 'SET' button on the remote or the back of the clock. The year display will flash.
2. Use the 'UP' or 'DOWN' buttons to adjust the year. Press 'SET' to confirm.
3. Repeat this process for Month, Date, Hour, and Minute.
4. After setting the minutes, the clock will return to normal display.

5.2 12/24 Hour Format

To switch between 12-hour and 24-hour time formats:

- Press the '12/24H' button on the remote control.
- The display will switch between 12-hour format (with 'AM'/'PM' indicator) and 24-hour format.

5.3 Setting the Alarm

1. Press the 'ALARM' button on the remote or the back of the clock. The alarm hour will flash.
2. Use the 'UP' or 'DOWN' buttons to adjust the alarm hour. Press 'ALARM' to confirm.
3. Use the 'UP' or 'DOWN' buttons to adjust the alarm minute. Press 'ALARM' to confirm.
4. To activate or deactivate the alarm, press the 'ALARM ON/OFF' button on the remote. An alarm icon will appear/disappear on the display.

5.4 Snooze Function

When the alarm sounds, press the 'SNOOZE' button on the remote or the top of the clock to temporarily silence the alarm. The alarm will sound again after approximately 5 minutes.

5.5 Brightness Adjustment

The clock offers both automatic and manual brightness control.

- **Automatic Brightness:** The built-in light sensor (on the back of the clock) will automatically adjust the display brightness based on ambient light conditions.
- **Manual Brightness:** Press the 'BRIGHTNESS' button (often represented by a sun icon) on the remote control to cycle through different brightness levels (e.g., L1, L2, L3, L4, Auto).



Image: Visual representation of different brightness levels.

5.6 Temperature Unit Selection

To switch between Celsius (°C) and Fahrenheit (°F) temperature units:

- Press the 'TEMP' button (often represented by a thermometer icon) on the remote control.
- The temperature display will switch between °C and °F.

6. MAINTENANCE

6.1 Cleaning

To clean the clock, gently wipe the display and casing with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

6.2 Backup Battery Replacement

If the clock loses time settings during a power outage, the CR2032 backup battery may need replacement. Follow the steps in Section 4.2 to replace the battery.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off	No power connection	Ensure the power adapter is securely plugged into an outlet and the DC cord is connected to the clock.
Clock loses time after power outage	Backup battery is dead or missing	Replace the CR2032 backup battery (see Section 6.2).
Remote control not working	Remote battery is dead or obstructed signal	Replace the remote control battery. Ensure there are no obstructions between the remote and the clock. Point the remote directly at the clock.
Display too dim/bright	Brightness setting needs adjustment	Press the 'BRIGHTNESS' button on the remote to cycle through manual brightness levels or select 'Auto'.
Alarm does not sound	Alarm is not activated	Ensure the alarm is set and activated (alarm icon visible on display).
Incorrect temperature reading	Sensor interference or unit setting	Ensure the clock is not near heat sources or direct sunlight. Verify the correct temperature unit (°C/°F) is selected.

8. SPECIFICATIONS

- **Brand:** Ygdigital
- **Model Number:** GH0717L
- **Display Type:** Digital LED
- **Product Dimensions:** Approximately 9.84" (W) x 6.26" (H) x 1.10" (D)
- **Power Source:** Corded Electric (USB power adapter)
- **Backup Battery:** 1 x CR2032 (included)
- **Mounting Type:** Wall Mount, Desktop Stand
- **Features:** Time (12/24H), Date, Day, Temperature (°C/°F), Alarm, Snooze, Adjustable Brightness (Manual/Auto), Remote Control
- **Item Weight:** Approximately 1 Pound



Image: The Ygdigital 11.5" LED Digital Wall Clock with remote control.

9. WARRANTY INFORMATION

This product comes with a limited warranty. For specific details regarding warranty coverage and terms, please refer to the product packaging or contact customer support.

10. CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Ygdigital customer support through the retailer's platform or the official brand website for assistance.