



Manuals.plus /

› **ARLIME** /

› ARLIME Electric 1500W Oil Filled Radiator Heater Instruction Manual

ARLIME 1500W Oil Filled Radiator Heater

ARLIME Electric 1500W Oil Filled Radiator Heater Instruction Manual

Model: 1500W Oil Filled Radiator Heater

Brand: ARLIME

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an overheat protection system and a tip-over safety switch.

2. PRODUCT OVERVIEW

The ARLIME Electric 1500W Oil Filled Radiator Heater is designed to provide efficient and quiet radiant heat for indoor spaces. Key features include:

- **Powerful Heating:** Up to 1500 Watts of heat output.
- **Adjustable Heat Settings:** Three power levels (600W, 900W, 1500W) for customized warmth.
- **Adjustable Thermostat:** Maintain your desired room temperature.
- **Safety Features:** Built-in Overheat Protection and Tip-Over Protection for enhanced safety.
- **Portability:** Equipped with 4 rolling wheels and an easy-carrying handle for effortless movement.
- **Quiet Operation:** Oil-filled design ensures noiseless heating.
- **Cord Storage:** Convenient bracket for power cord storage.



An ARLIME oil-filled radiator heater with callouts pointing to its key features: an easy-carrying handle, adjustable thermostat with 3 heat settings, a power cord storage rack, and 4 rolling wheels.

3. SETUP


3.1 Unpacking

- Carefully remove the heater from its packaging.
- Check for any damage that may have occurred during shipping. If the heater appears damaged, do not operate it and contact customer service.
- Retain the packaging for off-season storage.

3.2 Placement

- Place the heater on a firm, level surface.
- Ensure the heater is at least 3 feet (0.9 meters) away from walls, furniture, curtains, and other combustible materials.

- Do not place the heater in areas where it could be easily knocked over or where the power cord could be a tripping hazard.
- This heater is for indoor use only.

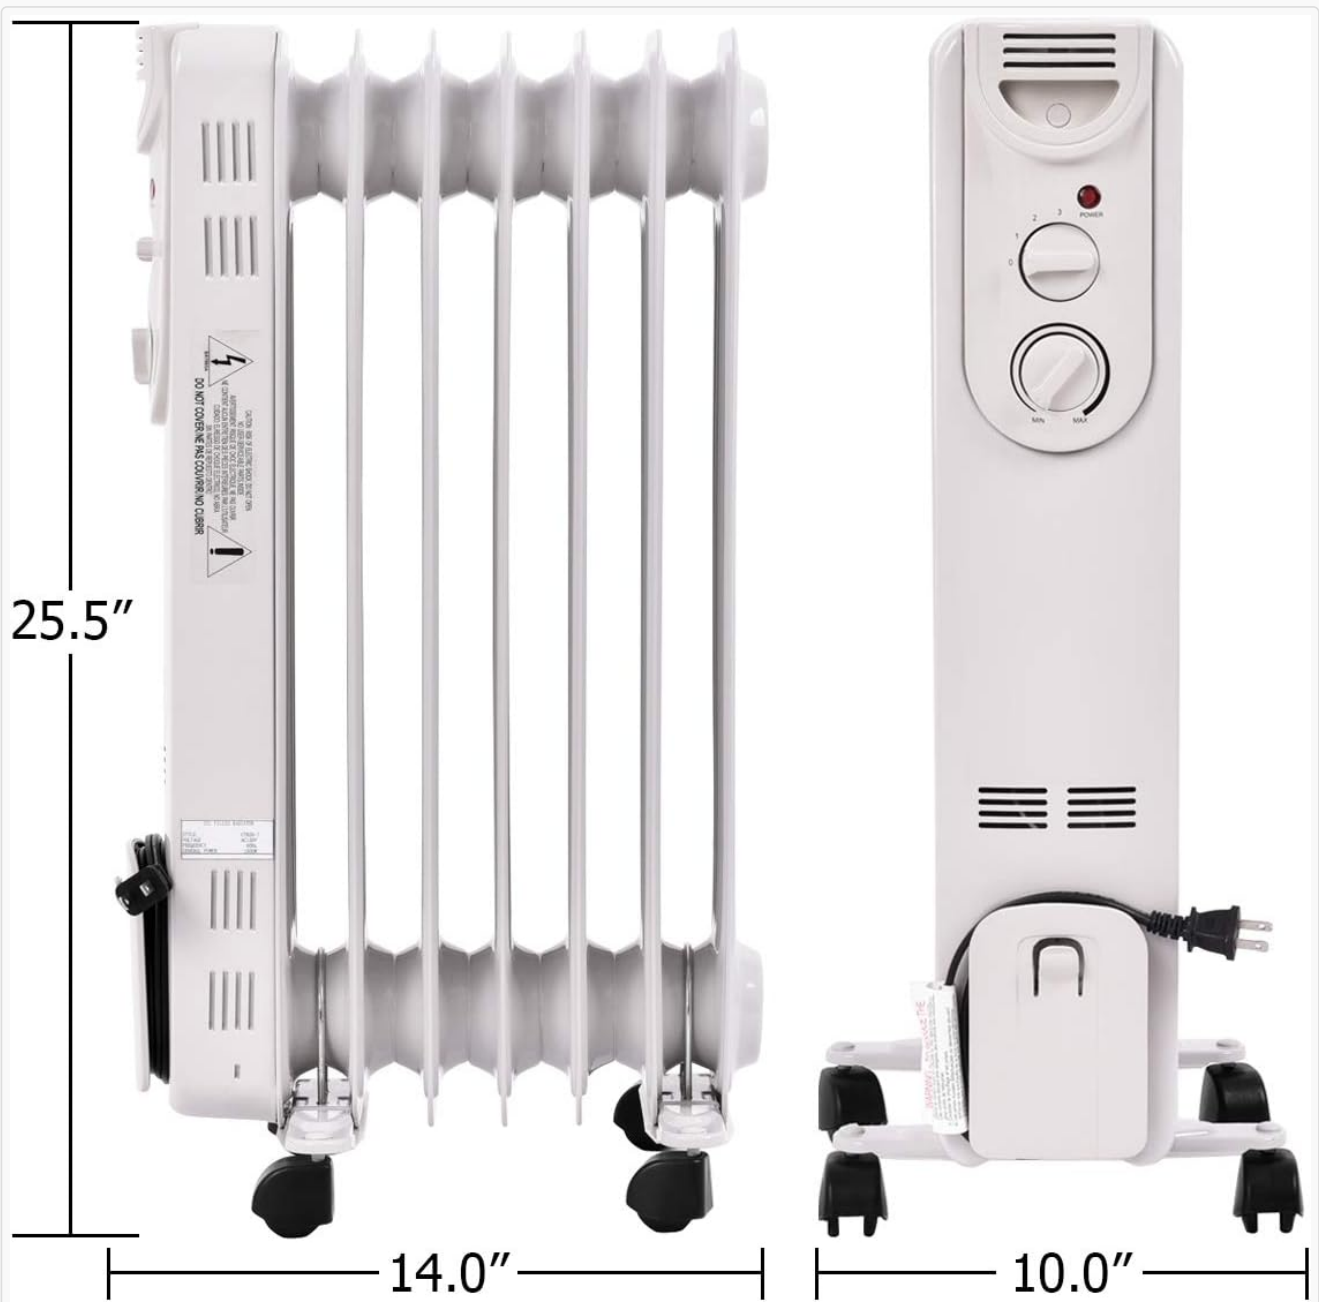

A diagram showing the dimensions of the ARLIME oil-filled radiator heater: 25.5 inches in height, 14.0 inches in width (fins), and 10.0 inches in depth (base).

4. OPERATING INSTRUCTIONS

4.1 Power Connection

- Ensure the heater is turned off (both power and thermostat knobs set to minimum/off).
- Plug the power cord directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.

4.2 Adjusting Heat Settings

The heater offers three heat settings:

- **Setting 1 (Low):** 600 Watts
- **Setting 2 (Medium):** 900 Watts

- **Setting 3 (High):** 1500 Watts

Turn the power knob to select your desired heat output. The power indicator light will illuminate when the heater is on.



An ARLIME oil-filled radiator heater next to a sleeping baby, illustrating its three adjustable heat settings: Low (600 watts), Medium (900 watts), and High (1500 watts).

4.3 Using the Adjustable Thermostat

- Once a heat setting is selected, turn the thermostat knob clockwise to the MAX position.
- When the room reaches your desired temperature, slowly turn the thermostat knob counter-clockwise until the heater turns off.
- The heater will now cycle on and off automatically to maintain the set temperature.

4.4 Product Demonstration Video

Your browser does not support the video tag.

An official product video showcasing the ARLIME Electric 1500W Oil Filled Radiator Heater. The video demonstrates its portability with universal casters, adjustable thermostat and three heat settings (600W/900W/1500W), oil-filled thermal slots for efficient heating, and safety features like overheat and tip-over protection. It also highlights the convenient cord storage bracket.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water or liquid enters the interior of the heater.
- Do not attempt to clean the internal components.

5.2 Storage

- Unplug the heater and allow it to cool.
- Wrap the power cord around the integrated cord storage bracket.
- Store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

6. TROUBLESHOOTING

If your heater is not operating correctly, please check the following:

- **Heater not turning on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the power knob is set to a heat setting (1, 2, or 3).
 - Verify the thermostat knob is set to a higher temperature than the current room temperature.
 - Confirm that the circuit breaker has not tripped.
- **Heater not producing heat:**
 - The thermostat may be set too low. Increase the thermostat setting.
 - The room temperature may already be at or above the thermostat setting.
- **Heater turns off unexpectedly:**
 - The built-in **Overheat Protection** may have activated. Unplug the heater, allow it to cool for 30 minutes, then plug it back in. Ensure there are no obstructions blocking the air vents.
 - The **Tip-Over Protection** switch may have activated. Ensure the heater is on a flat, stable surface. If it was tipped, place it upright, and it should resume operation.

| Advanced Design for Double Protection



Tip-over Protection



Overheat Protection

A diagram showing the heater's safety features: Tip-over Protection, where the heater automatically shuts off if tilted beyond 45 degrees, and Overheat Protection, where it turns off if internal temperature exceeds a safe limit (e.g., 95°F).

If the problem persists after checking these points, please contact customer support.

7. SPECIFICATIONS

| Feature | Specification |
|-------------------------|----------------------------------|
| Brand | ARLIME |
| Model | 1500W Oil Filled Radiator Heater |
| Special Feature | Noiseless, Portable |
| Form Factor | Pedestal |
| Indoor/Outdoor Usage | Indoor |
| Recommended Uses | Home |
| Mounting Type | Floor Mount |
| Room Type | Bedroom, Home Office, Study Room |
| Heating Coverage | Up to 250 square feet |
| Burner Type | Radiant |
| Heat Output | 1500 Watts |
| Fuel Type | Electric |
| Number of Heat Settings | 3 (600W, 900W, 1500W) |

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact ARLIME customer service directly. Please have your product model and purchase date available when contacting support.