

STEAMONE EUKID190B

STEAMONE Vertical Garment Steamer User Manual

Model: EUKID190B

1. INTRODUCTION

Thank you for choosing the STEAMONE Vertical Garment Steamer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the steamer from the power outlet when filling or emptying the water tank, and when not in use.
- Keep the steam head away from your body, other people, and pets during operation. Steam is hot and can cause burns.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

The STEAMONE EUKID190B is a powerful and efficient vertical garment steamer designed for quick and effective wrinkle removal and fabric sanitization.



Figure 3.1: Full view of the STEAMONE Vertical Garment Steamer.



Figure 3.2: Close-up of the steamer's base unit, housing the water tank and heating element.

Key Features:

- **Powerful Performance:** 1900W heating element for rapid steam generation.
- **High Steam Output:** Delivers 40g/min of continuous steam.
- **Quick Heat-up:** Ready to use in just 60 seconds.
- **Large Water Tank:** 1.8-liter capacity provides up to 45 minutes of continuous steaming.
- **Enhanced Safety:** Hose with triple heat protection to prevent burns.
- **Durable Design:** Features an aluminum boiler for extended lifespan.

- **Integrated Anti-Calc System:** For easy maintenance and longevity.
- **Versatile Hangers:** Includes one adult hanger and one multi-functional, double-sided child hanger.

4. SETUP

Follow these steps to set up your STEAMONE Vertical Garment Steamer for first use.

4.1 Assembly

1. Carefully unpack all components from the box.
2. Insert the telescopic pole into the designated slot on the base unit. Secure it firmly.
3. Attach the steam head and hose assembly to the top of the telescopic pole.
4. Place the included hangers onto the pole as desired.

4.2 Filling the Water Tank



PUISSANCE
1900W



DÉBIT DE VAPEUR
40g/min



TEMPS DE CHAUFFE
60 secondes



AUTONOMIE
45 min

Figure 4.1: Detachable water tank and included hangers.

1. Ensure the steamer is unplugged from the power outlet.
2. Remove the 1.8-liter water tank from the base unit.
3. Open the tank cap and fill the tank with distilled or demineralized water. Do not exceed the maximum fill line.
4. Close the tank cap securely and place the water tank back into the base unit until it clicks into place.

5. OPERATING INSTRUCTIONS

Once assembled and filled, your STEAMONE steamer is ready for use.

5.1 Powering On and Heating Up



Figure 5.1: Power button and indicators on the steamer base.

1. Plug the power cord into a suitable electrical outlet.

2. Press the power button on the base unit. The indicator light will illuminate, signifying that the steamer is heating up.
3. Wait approximately 60 seconds for the steamer to reach operating temperature. Steam will begin to emit from the steam head.

5.2 Steaming Technique



Figure 5.2: Visual guide for effective steaming techniques.

1. Hang the garment on the integrated hanger or a suitable clothes rack.
2. Hold the steam head with the soleplate flat against the fabric.
3. Gently pull the garment taut with your free hand to smooth out wrinkles.
4. Move the steam head slowly from top to bottom over the fabric.
5. For stubborn wrinkles, pass the steam head over the area multiple times.
6. Do not place the steam head facing upwards, always keep it directed downwards.



Figure 5.3: Demonstration of wrinkle removal on fabric.

GUIDE D'UTILISATION



Tirez le vêtement vers vous pour le steamer correctement



Veillez toujours à ce que la semelle soit bien à plat sur le tissu



Déplacez toujours la tête de diffusion du haut vers le bas



Ne placez pas la tête de diffusion vers le bas

Figure 5.4: Comparison of a wrinkled shirt before and after steaming.

5.3 Suitable Fabric Types and Applications

The STEAMONE steamer is safe and effective for a wide range of fabrics and household items.



Figure 5.5: Suitable fabric types including Denim, Silk, Wool, Lace, Flocked, Tulle, Muslin, Cotton, Sequin, and Linen.



Figure 5.6: Applications for household items such as Sofa, Cushion, Bedding, Plush toys, Dishcloths, Covers, Carpets, Napkins, Curtains, and Tablecloths.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your steamer.

6.1 Descaling (Anti-Calc System)

Your STEAMONE steamer features an integrated anti-calc system to reduce mineral buildup. However, periodic descaling is still recommended, especially in areas with hard water.

1. Unplug the steamer and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Consult the specific descaling instructions provided in the full product manual or on the manufacturer's website for detailed steps on how to activate or clean the anti-calc system.

4. Rinse the water tank thoroughly after descaling.

6.2 Cleaning the Steamer

- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the steam head regularly to remove any lint or residue.
- Ensure all parts are dry before storing the appliance.

7. TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Steamer not heated sufficiently; Mineral buildup.	Refill water tank; Allow 60 seconds for heat-up; Perform descaling.
Water leaking from steam head	Overfilled water tank; Steamer not fully heated; Condensation in hose.	Do not overfill; Wait for full heat-up; Hold steam head upright to drain condensation.
Appliance not turning on	Not plugged in; Power outlet issue; Faulty power cord.	Check power connection; Test outlet with another device; Contact customer support if cord is damaged.

If the problem persists after attempting these solutions, please contact STEAMONE customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	STEAMONE
Model Number	EUKID190B
Color	Black
Product Dimensions	36.5 x 30 x 47.8 cm
Water Tank Capacity	1.8 Liters
Power	1900 Watts
Voltage	230 Volts
Material	Aluminum
Item Weight	7.54 Kilograms

9. WARRANTY AND SUPPORT

STEAMONE products are designed and manufactured to the highest quality standards.

9.1 Warranty Information

All STEAMONE products come with a **24-month warranty** from the date of purchase, covering manufacturing defects. This warranty includes replacement parts.

9.2 Spare Parts Availability

Spare parts for your STEAMONE steamer are available for **7 years** from the date of purchase, supporting repair and extending product life.

9.3 Customer Support

For further assistance, technical support, or warranty claims, please visit the official STEAMONE brand store or contact their customer service directly.

[Visit the Official STEAMONE Store](#)

© 2024 STEAMONE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question