

[Manuals.plus](#) /

› [Tikom](#) /

› Tikom Robot Vacuum and Mop G8000 User Manual

Tikom G8000

Tikom G8000 Robot Vacuum and Mop User Manual

Model: G8000

INTRODUCTION

Thank you for choosing the Tikom G8000 Robot Vacuum and Mop. This 2-in-1 device is designed to provide efficient and convenient cleaning for your home, combining powerful vacuuming with effective mopping capabilities. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1: Tikom G8000 Robot Vacuum and Mop

PACKAGE CONTENTS

Ensure all items are present and in good condition upon unboxing.



Figure 2: Contents of the Tikom G8000 package

- Tikom G8000 Robot Vacuum Cleaner and Mop
- Charging Station
- Power Adapter
- Remote Controller
- Water Tank
- HEPA Filter and Sponge
- Mopping Cloth Holder
- Spare Mopping Cloth
- Side Brushes (x4)
- Cleaning Brush
- Boundary Strip
- Adhesive Tapes (x2)

- User Manual (this document)

SETUP

1. Charging Station Placement

Place the charging station against a wall in an open, uncluttered area. Ensure there is at least 1 meter (3 feet) of clear space to the front and 0.5 meters (1.5 feet) to each side of the charging station for optimal robot navigation.



Figure 3: Robot returning to self-charging dock.

2. Initial Charge

Before first use, fully charge the robot vacuum. Place the robot on the charging station, ensuring the charging contacts align. The indicator lights on the robot will show charging status. A full charge takes approximately 4-5 hours.

3. Install Side Brushes

Snap the side brushes onto the posts on the bottom of the robot until they click into place.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button on the robot or the remote control to turn the device on or off.

2. Cleaning Modes

The G8000 offers 5 cleaning modes:

- **Smart Clean (Zig-Zag Path):** The robot cleans in an efficient zig-zag pattern, covering the entire area. This is the default and most efficient mode.

Gyroscope Smart Navigation -Zig-zag Path



Figure 4: Gyroscope Smart Navigation (Zig-Zag Path)

- **Edge Clean:** The robot cleans along walls and furniture edges.



Figure 5: Edge Cleaning Mode

- **Spot Clean:** The robot intensely cleans a specific area in a spiral pattern.



Figure 6: Spot Cleaning Mode

- **Random Clean:** The robot cleans randomly, suitable for small, simple spaces.
- **Manual Clean:** Control the robot's movement manually using the remote control or app.



Figure 7: Manual Control via Remote

3. Mopping Function

To use the mopping function, fill the water tank with clean water and attach the mopping cloth holder with a clean mopping cloth. Insert the water tank into the robot. The robot will automatically switch to mopping mode when the water tank is installed. Adjust water output levels (Low, Middle, High) via the app or remote.

Robot Vacuum and Mopping 2 in 1



Figure 8: 2-in-1 Sweeping and Mopping Function with water level options.

Note: Remove the mop holder before cleaning carpets to prevent wetting. The robot can automatically increase suction on carpets (Carpet Boost).

4. App & Voice Control

Download the Tikom app to control the robot from your smartphone. The robot is also compatible with Amazon Alexa and Google Home for voice commands.

Control Your G8000 Robot Vacuum

Make it easy to start a cleaning session whenever you want, wherever you are

"Alexa, turn on Tikom Robot"



works with
amazon alexa



works with
Google Assistant



Figure 9: Control your G8000 Robot Vacuum via App, Remote, or Voice.

5. Boundary Strips

Use the included boundary strips to set "No-Go" areas for the robot, preventing it from entering specific rooms or areas.



Figure 10: Using Boundary Strips to define cleaning areas.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Tikom G8000.

1. Emptying the Dustbin

Empty the dustbin after each cleaning cycle or when full. The dustbin is easily accessible from the top of the robot.

2. Cleaning Filters

Clean the HEPA filter and sponge regularly (weekly recommended). Tap off loose debris and rinse with water if necessary. Ensure filters are completely dry before re-installing.

3. Cleaning Side Brushes

Check side brushes for tangled hair or debris and clean them as needed. Replace worn brushes to maintain cleaning efficiency.

4. Cleaning Mopping Cloth

Remove and wash the mopping cloth after each mopping session. Air dry completely before re-use.

5. Cleaning Sensors and Charging Contacts

Wipe the anti-drop sensors, anti-collision sensors, and charging contacts on the robot and charging station with a clean, dry cloth periodically to ensure proper function.



Figure 11: Key features including Anti-drop Sensor, Anti-collision Sensor, Dust Bin, and Carpet Boost.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power switch off.	Charge the robot; Turn on the power switch.
Robot gets stuck frequently.	Obstacles (cables, rugs, furniture); Dirty sensors.	Clear obstacles; Use boundary strips; Clean sensors.
Poor cleaning performance.	Full dustbin; Clogged filters; Worn brushes.	Empty dustbin; Clean/replace filters; Clean/replace brushes.

Problem	Possible Cause	Solution
Robot does not return to charging station.	Charging station obstructed; Robot too far from station.	Ensure clear path to station; Manually place robot on station.
Mopping function not working.	Empty water tank; Mopping cloth not installed correctly.	Fill water tank; Re-install mopping cloth holder.

SPECIFICATIONS

Feature	Detail
Brand	Tikom
Model Name	G8000
Suction Power	2700 Pa
Battery Life	120 minutes
Dustbin Capacity	450 Milliliters
Water Tank Capacity	250 Milliliters
Navigation Type	Gyroscope Smart Navigation
Control Method	App, Voice (Alexa, Google Home), Remote Control
Product Dimensions	12.6"L x 12.6"W x 3"H
Item Weight	5.28 pounds

WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your Tikom G8000, please refer to the official Tikom website or contact customer service directly. Contact details are typically found on the product packaging or the official brand store.

Visit the Tikom Store: [Tikom Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question