



[Manuals.plus](#) /

> [Volowoo](#) /

> Volowoo Digital Keypad Safe Box 0799710992865 User Manual

## Volowoo 0799710992865

# Volowoo Digital Keypad Safe Box User Manual

Model: 0799710992865

---

## INTRODUCTION

---

Thank you for choosing the Volowoo Digital Keypad Safe Box. This safe is designed to provide secure storage for your valuables, documents, and personal items. Please read this manual carefully before operating the safe to ensure proper use and to maximize its security features. Keep this manual for future reference.



*Image: Front view of the Volowoo Digital Keypad Safe Box, showing the digital keypad and emergency key access.*

## **PACKAGE CONTENTS**

---

Please check the package contents to ensure all items are present:

- 1 x Digital Keypad Safe
- 2 x Screws (for mounting)
- 1 x User Manual
- 4 x AA 1.5V Batteries (for initial testing)
- 2 x Emergency Keys



Image: The Volowoo safe box displayed with its accompanying accessories, including mounting screws, user manual, AA batteries, and emergency keys.

## SPECIFICATIONS

Feature	Detail
Material	Iron
Color	Light Gray
External Dimensions (L x W x H)	17 x 23 x 17 cm (6.69 x 9.06 x 6.69 inches)
Weight	2.5 kg (5.51 lbs)
Internal Capacity	0.17 Cubic Feet
Lock Type	Digital Keypad, Emergency Key
Power Supply	4 x AA 1.5V Batteries
Fireproof	No
Mounting Type	Freestanding (can be secured with screws)



Image: The Volowoo safe box with its external dimensions (width, height, depth) clearly indicated.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the inside of the safe door.
2. Open the battery cover.
3. Insert 4 x AA 1.5V batteries, ensuring correct polarity (+/-).
4. Close the battery cover. The safe will emit a beep, indicating successful installation.

**Note: The included batteries are for testing purposes. For prolonged use, replace them with new, high-quality batteries.**



*Image: The safe door is open, revealing the interior and the location of the battery compartment on the inside panel.*

## **2. Setting Your Personal Code**

The safe comes with a factory default code (usually 159). It is highly recommended to change this immediately.

1. With the safe door open, press the red reset button located on the inside of the door, near the hinge. You will hear a beep.
2. Within 5 seconds, enter your desired 3-8 digit code on the keypad.
3. Press the 'E' button to confirm. The safe will beep twice, indicating the new code is set.
4. Test the new code with the door open to ensure it works correctly before closing the safe.

## **3. Mounting the Safe (Optional)**

For added security, the safe can be mounted to a wall or floor using the provided screws.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes inside the safe.
3. Drill pilot holes in the wall or floor.
4. Align the safe and secure it using the provided screws.

## OPERATING INSTRUCTIONS

### Opening the Safe with Your Code

1. Enter your 3-8 digit personal code on the keypad.
2. Press the 'E' button. The green light will illuminate, and you will hear a beep.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

### Closing and Locking the Safe

1. Close the safe door.
2. Turn the knob counter-clockwise to lock the safe.

### Using the Emergency Key

In case of forgotten code or dead batteries, the emergency key can be used to open the safe.

1. Locate the emergency keyhole, usually hidden behind a small cover on the keypad panel.
2. Remove the cover.
3. Insert the emergency key and turn it counter-clockwise.
4. While holding the key turned, turn the knob clockwise to open the safe door.
5. Keep emergency keys in a secure location, separate from the safe.



*Image: The Volowoo safe box with an emergency key inserted into the hidden keyhole on the digital keypad panel.*

### Changing Your Code (with door closed)

This method allows you to change the code without opening the safe, useful for quick updates.

1. Enter your current 3-8 digit code.
2. Press the 'E' button. The green light will illuminate.
3. While the green light is on, press the '\*\*' button.
4. Enter your new 3-8 digit code.
5. Press the 'E' button to confirm. The safe will beep twice.
6. Test the new code immediately to ensure it works.

## MAINTENANCE

---

- **Battery Replacement:** Replace batteries annually or when the low battery indicator (if present) illuminates. Always use 4 new AA 1.5V batteries.
- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Key Storage:** Store emergency keys in a secure location away from the safe and not inside it.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; batteries are low or dead.	Re-enter code carefully. Replace batteries. Use emergency key to open.
Keypad does not respond.	Batteries are completely dead or incorrectly installed.	Check battery polarity. Replace all batteries. Use emergency key.
Safe beeps continuously after entering code.	Code is correct, but knob not turned within 5 seconds.	Enter code and turn knob promptly.
Cannot set new code.	Reset button not pressed correctly; new code too short/long.	Ensure reset button is fully pressed. New code must be 3-8 digits.

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided at your point of purchase or visit the official Volowoo website. Please have your model number (0799710992865) ready when contacting support.