

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WOLFANG](#) /

› [WOLFANG GB2200 Rechargeable Selfie Stick User Manual](#)

## WOLFANG GB2200

# WOLFANG GB2200 Rechargeable Selfie Stick User Manual

Model: GB2200

## INTRODUCTION

Thank you for choosing the WOLFANG GB2200 Rechargeable Selfie Stick. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use to ensure optimal performance and longevity.

## PRODUCT FEATURES

- **Integrated 2600mAh Power Bank:** Allows charging of your action camera during recording, providing extended usage time.
- **Lightweight and Portable Design:** Weighs approximately 200g and collapses to 24cm, making it easy to carry.
- **Adjustable Length:** Extends from 24cm to 61.5cm without the need for twisting or locking mechanisms.
- **Universal Compatibility:** Equipped with a Micro-USB camera interface and a Type-C direct charging port for the stick itself. Compatible with various action cameras; a USB to Type-C adapter may be required for some camera models.
- **1/4 Inch Nut Screw Hole:** For connecting to tripods or other accessories (tripod not included).
- **Silicone Non-Slip Grip:** Provides a secure and comfortable hold.

## PACKAGE CONTENTS

The WOLFANG GB2200 Rechargeable Selfie Stick package includes:

- WOLFANG GB2200 Selfie Stick
- User Manual
- Mounting screw



Image: Contents of the WOLFANG GB2200 package, including the selfie stick, user manual, and mounting screw.

## SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Initial Charge:** Before first use, fully charge the selfie stick. Connect a USB-C cable (not included) to the Type-C charging port on the stick and plug it into a power source. The battery indicator lights will show charging status.



Image: The WOLFANG GB2200 selfie stick connected to a wall charger via its Type-C port, with blue indicator lights showing charging status.

3. **Attach Action Camera:** Mount your action camera to the 180° adjustable screw at the top of the selfie stick. Ensure it is securely fastened.



Image: The WOLFANG GB2200 selfie stick with an action camera attached to its top mount, ready for use.

## OPERATING INSTRUCTIONS

### Extending and Retracting the Stick

To adjust the length of the selfie stick, simply pull the top section upwards to extend it or push it downwards to retract it. The stick can be set to any length between 24cm and 61.5cm without needing to twist or lock.

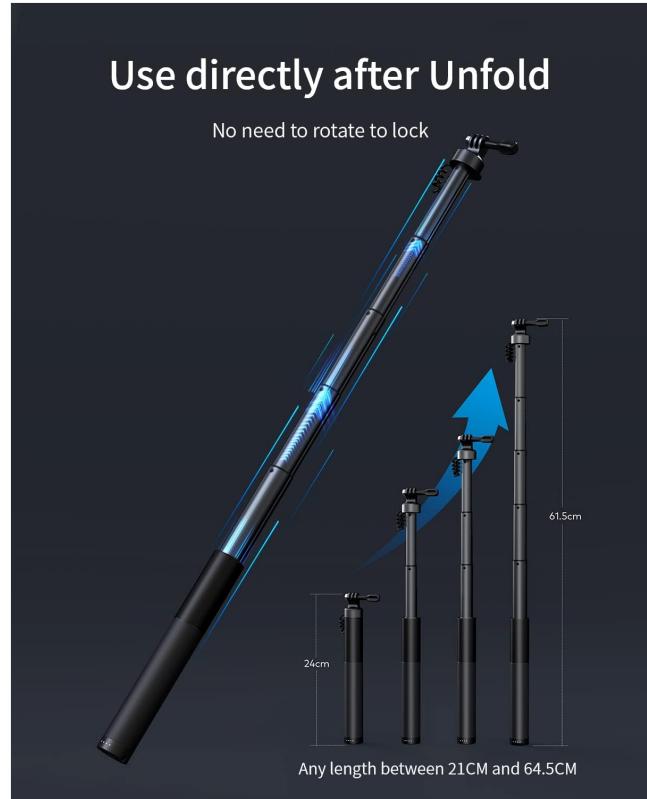


Image: A visual representation of the WOLFANG GB2200 selfie stick extending and retracting, illustrating its adjustable length from 24cm to 61.5cm.

### Charging an Action Camera

The GB2200 features a built-in 2600mAh power bank to charge your action camera. Connect the coiled Micro-USB cable from the selfie stick to your action camera's charging port. If your camera uses a Type-C port, an additional USB to Type-C adapter (not included) will be required.

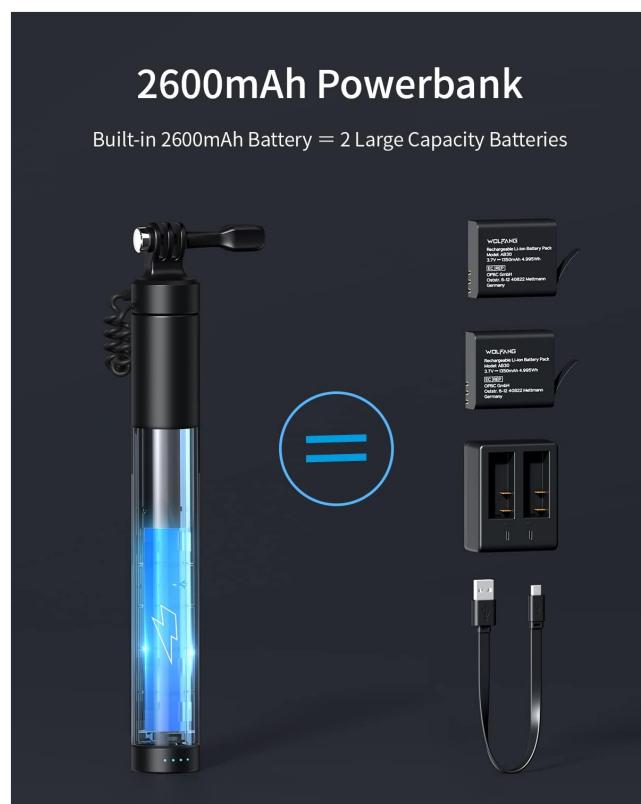


Image: An illustration demonstrating the WOLFANG GB2200 selfie stick's internal power bank charging an action camera via its integrated cable.

## Battery Indicator

The blue LED lights at the base of the selfie stick indicate the remaining battery power. These lights will illuminate when the stick is charging or when it is actively charging a connected device.

## MAINTENANCE

- Cleaning:** Wipe the selfie stick with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Selfie stick not charging.	Charging cable not connected properly or faulty; power source issue.	Ensure the Type-C cable is securely connected to both the stick and the power adapter. Try a different cable or power source.
Action camera not charging from the stick.	Selfie stick battery is low; camera cable not connected properly; camera incompatible or requires adapter.	Charge the selfie stick fully. Ensure the Micro-USB cable is firmly connected to the camera. Verify if your camera requires a USB to Type-C adapter.
Selfie stick feels loose when extended.	Normal operation for non-locking design.	The design allows for free adjustment without locking. Ensure a firm grip during use.

## SPECIFICATIONS

- Model:** GB2200
- Battery Capacity:** 2600mAh (Lithium Ion)
- Folded Length:** 24 cm (approximately 9.45 inches)
- Extended Length:** 61.5 cm (approximately 24.2 inches)
- Item Weight:** 200 grams (approximately 7.1 ounces)
- Product Dimensions:** 23.62 x 2.76 x 1.18 inches (packaged)
- Charging Port (for stick):** Type-C
- Output Port (for camera):** Micro-USB (coiled cable)
- Compatible Devices:** Action Cameras
- Manufacturer:** WOLFANG
- UPC:** 794775731060

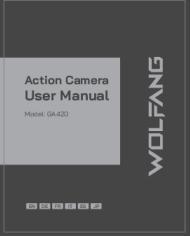
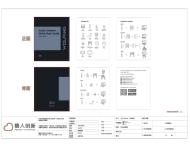
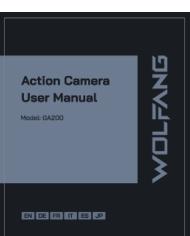
## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official WOLFANG website or contact their

customer service directly. Contact details are typically provided on the product packaging or the official brand store.

**Manufacturer:** WOLFANG  
**Support Email:** [support@wolfang.co](mailto:support@wolfang.co)

## Related Documents - GB2200

	<p><b><a href="#">WOLFANG GA120 Action Camera User Manual</a></b></p> <p>Comprehensive user manual for the WOLFANG GA120 action camera, detailing setup, operation, video and photo modes, and support resources. Learn to install, charge, and use your device effectively.</p>
	<p><b><a href="#">WOLFANG GA420 Action Camera Accessories Quick Start Guide</a></b></p> <p>Quick start guide for WOLFANG GA420 action camera accessories, detailing assembly and mounting options with clear visual instructions for various accessories.</p>
	<p><b><a href="#">WOLFANG GA420 Action Camera User Manual</a></b></p> <p>Comprehensive user manual for the WOLFANG GA420 action camera, covering installation, specifications, operation modes, settings, and connectivity options.</p>
	<p><b><a href="#">WOLFANG GA100 Action Camera Quick Start Guide</a></b></p> <p>Concise guide for setting up and using the WOLFANG GA100 action camera, including package contents and installation instructions for various mounts. Provides support information and app download links.</p>
	<p><b><a href="#">WOLFANG GA200 Action Camera Q&amp;A</a></b></p> <p>Frequently asked questions and answers for the Wolfgang GA200 action camera, covering app connection, underwater use, remote control, memory card formatting, video quality, and package contents.</p>
	<p><b><a href="#">WOLFANG GA200 Action Camera User Manual   Setup, Operation, and Support</a></b></p> <p>Get started with your WOLFANG GA200 action camera. This comprehensive user manual covers setup, installation, charging, button functions, and important safety guidelines. Find support and app information.</p>