

WOLFANG GB2100

WOLFANG GB2100 Action Camera Selfie Stick User Manual

Model: GB2100

INTRODUCTION

Thank you for choosing the WOLFANG GB2100 Action Camera Selfie Stick. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use to ensure optimal performance and longevity.

WHAT'S IN THE BOX

- 1 x WOLFANG GB2100 Selfie Stick

SETUP

1. Attaching Your Action Camera

The WOLFANG GB2100 selfie stick features a standard mount compatible with most action cameras, including WOLFANG, GoPro, DJI, Victure, Apeman, and Surfola. Align your camera's mounting bracket with the selfie stick's mount and secure it using the provided screw (typically included with your action camera or its accessories). Ensure the connection is firm to prevent camera movement during use.

2. Adjusting Length

The selfie stick features a five-stage telescopic design. To extend, gently pull each section outwards. To retract, push each section inwards. The stick can be adjusted from a compact 20.8 cm (8.2 inches) to an extended 71 cm (27.7 inches).



Image: The selfie stick extended to various lengths, demonstrating its telescopic adjustment.

3. Locking the Length

For stable usage, rotate each joint clockwise after extending to securely lock it in place. To unlock and retract, rotate counter-clockwise.

4. Adjusting Shooting Angle

The head of the selfie stick allows for 180° rotation. Loosen the screw on the camera mount, adjust the camera to your desired angle (up or down), and then tighten the screw firmly to secure the position.

OPERATING INSTRUCTIONS

1. Holding the Selfie Stick

The grip is designed to be non-slip and sweat-proof for comfortable handling. Utilize the included wrist strap for added security, especially during active use, to prevent accidental drops.

2. Portability

Weighing only 130g and folding to 20.8 cm, the selfie stick is designed for easy transport. It can fit into most backpacks or pockets.



Image: Comparison of the selfie stick's size and weight with a smartphone, highlighting its portability.

3. Usage Scenarios

This selfie stick is suitable for various activities, including:

- Individual vlogging and photography
- Group photos and videos
- Outdoor adventures and sports
- Travel documentation



Image: A person using the selfie stick for individual photography.



Image: The selfie stick positioned for group photography.



Image: Illustrating use during outdoor entertainment like skiing.



Image: Demonstrating the selfie stick's use in extreme sports.

4. Tripod Compatibility (Tripod Not Included)

The base of the selfie stick may feature a standard 1/4-inch screw hole, allowing it to be mounted onto a compatible tripod for stationary shots. Please note that a tripod is not included with this product.



Image: The selfie stick shown with an optional tripod and camera, highlighting its compatibility.

MAINTENANCE

1. Cleaning

Wipe the selfie stick with a soft, dry cloth after each use to remove dust, dirt, or moisture. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive cleaners.

2. Storage

Store the selfie stick in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully retracted before storage to protect the telescopic mechanism.

3. Water Exposure

This product is **not water resistant**. Avoid submerging it in water or exposing it to heavy rain. If it gets wet, dry it thoroughly as soon as possible.

TROUBLESHOOTING

1. Selfie Stick Not Extending/Retracting Smoothly

- Check for any debris or foreign objects in the telescopic joints.
- Ensure joints are not overtightened if they were previously locked.

2. Camera Mount Feels Loose

- Ensure the screw connecting the camera to the mount is fully tightened.
- Verify that the camera's mounting bracket is not damaged.

3. Stick Does Not Lock Securely

- Ensure each section is fully extended before rotating to lock.
- Rotate each joint firmly clockwise until secure. Do not overtighten.

SPECIFICATIONS

Brand	WOLFANG
Model Name	GB2100
Compatible Devices	Action Cameras (WOLFANG, GoPro, DJI, Victure, Apeman, Surfola, etc.)
Folded Length	20.8 cm (8.2 inches)
Extended Length	71 cm (27.7 inches)
Item Weight	130 g
Color	Black
Water Resistance Level	Not Water Resistant
UPC	794775731053

WARRANTY INFORMATION

The WOLFANG GB2100 Selfie Stick comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official WOLFANG website or contact their

customer service department. You can find more information and contact details at the [WOLFANG Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09KY17B1P>

More documents and user manuals: <https://manuals.plus/>