

## SOGO SS-14480

# Sogo SS-14480 High-Power Hand Blender Set Instruction Manual

Model: SS-14480 | Brand: SOGO

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can cause damage to the appliance and injury to the user.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or other liquids. Always unplug the appliance from the power supply before cleaning, assembling, or disassembling parts.
- **Blade Safety:** Blades are very sharp. Handle with extreme care, especially when assembling, disassembling, and cleaning.
- **Children and Vulnerable Persons:** This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- **Usage Environment:** Use the appliance only for its intended household purpose. Do not use outdoors. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Overheating Protection:** To prevent overheating, do not operate the appliance continuously for more than 1 minute. Allow it to cool down for at least 10 minutes before resuming use.
- **Attachments:** Only use attachments supplied or recommended by the manufacturer.

## PRODUCT OVERVIEW AND COMPONENTS

---

The Sogo SS-14480 Hand Blender Set is a versatile kitchen tool designed for blending, chopping, whisking, and mashing. It features a powerful 1500W motor and comes with several attachments to assist with various food preparation tasks.



Image: The Sogo SS-14480 Hand Blender Set, displaying the main motor unit, blending shaft, whisk attachment, chopper attachment with bowl and blade, potato masher, and measuring cup.

### Main Components:

- **Motor Unit:** The main body housing the 1500W motor, speed control dial, and Normal/Turbo buttons.
- **Blending Shaft:** An extra-long stainless steel shaft with 4 gold titanium blades for efficient blending.
- **Whisk Attachment:** For beating eggs, whipping cream, and mixing light batters.
- **Chopper Attachment:** Includes a 650ml BPA-free bowl and gold titanium blades for chopping vegetables, nuts, and herbs.
- **Potato Masher:** Designed for mashing cooked potatoes and other soft vegetables.
- **Measuring Cup:** An 800ml BPA-free plastic cup with measurement markings.



Image: Close-up of the Sogo SS-14480 hand blender motor unit with the blending shaft attached, highlighting its sleek design.



Image: Detail of the speed control dial on the top of the hand blender motor unit, showing settings from 1 to 23.



Image: Close-up of the 4 gold titanium blades at the end of the blending shaft, designed for efficient processing.

## SETUP AND ASSEMBLY

---

Before first use, wash all parts that will come into contact with food. Ensure the appliance is unplugged before assembling or disassembling any parts.

1. **Attaching the Blending Shaft:** Align the blending shaft with the motor unit and twist until it locks securely into place.
2. **Attaching the Whisk:** Insert the whisk into the whisk gear box, then attach the gear box to the motor unit by twisting until it locks.
3. **Attaching the Chopper:** Place the chopper blade onto the central pin in the chopper bowl. Add ingredients, then place the chopper lid on the bowl. Align the motor unit with the lid and twist to lock.
4. **Attaching the Potato Masher:** Align the potato masher attachment with the motor unit and twist until it locks securely into place.

Your browser does not support the video tag.

Video: This video demonstrates the easy assembly and disassembly of the Sogo SS-14480 hand blender attachments, including the blending shaft, whisk, chopper, and potato masher.

## OPERATING INSTRUCTIONS

---

Always ensure the appliance is securely assembled and plugged into a suitable power outlet before operation.

### 1. Blending

1. Attach the blending shaft to the motor unit.
2. Place the ingredients into the measuring cup or a suitable container.
3. Immerse the blending shaft into the ingredients.
4. Select your desired speed using the variable speed dial on top of the motor unit (settings 1-23).
5. Press the Normal button for continuous blending or the Turbo button for maximum power.
6. Blend until the desired consistency is achieved.

### 2. Chopping

1. Place the chopper blade into the chopper bowl.
2. Add pre-cut ingredients to the chopper bowl. Do not overfill.
3. Secure the chopper lid and attach the motor unit.
4. Press the Normal or Turbo button in short pulses until ingredients are chopped to your preference.

### 3. Whisking

1. Attach the whisk to the whisk gear box, then attach the gear box to the motor unit.
2. Place ingredients (e.g., eggs, cream) into the measuring cup or a deep bowl.
3. Immerse the whisk into the ingredients.
4. Select a suitable speed and press the Normal button to begin whisking. Use the Turbo button for faster results.

### 4. Mashing

1. Attach the potato masher to the motor unit.
2. Place cooked, soft vegetables (e.g., potatoes) into a deep bowl.
3. Immerse the masher into the vegetables.
4. Press the Normal button and move the masher up and down until the desired consistency is achieved.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Sogo Hand Blender Set.

- **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or any other liquid.
- **Attachments:** The blending shaft, whisk, chopper bowl, chopper blades, potato masher, and measuring cup are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.
- **Sharp Blades:** Exercise extreme caution when handling the chopper blades and blending shaft blades as they are very sharp.
- **Storage:** Store the appliance and its attachments in a dry place, away from direct sunlight and out of reach of children. The included hanger can be used to store various accessories.

## TROUBLESHOOTING

---

If you encounter any issues with your hand blender, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached to attachment.	Check power connection; try a different outlet; ensure motor unit is securely locked onto the attachment.
Motor stops during operation.	Overheating due to continuous use; ingredients too hard or too much.	Unplug and let cool for 10 minutes; reduce ingredient quantity or cut harder ingredients into smaller pieces.
Poor blending/chopping results.	Insufficient liquid; ingredients too large; dull blades.	Add more liquid; cut ingredients smaller; ensure blades are clean and sharp (if applicable, contact support for replacement).
Unusual noise or vibration.	Attachment not properly secured; foreign object in blades.	Check all attachments are locked in place; unplug and carefully inspect blades for obstructions.

## SPECIFICATIONS

Detailed technical specifications for the Sogo SS-14480 Hand Blender Set.

Feature	Specification
Model	SS-14480
Brand	SOGO
Power	1500 Watts
Voltage	220-240 Volts
Frequency	50-60 Hz
Number of Speeds	23 Variable Speeds + Turbo
Material	Stainless Steel (blending shaft, blades)
Blade Material	Gold Titanium Coated Stainless Steel
Measuring Cup Capacity	800 ml (BPA-free plastic)
Chopper Bowl Capacity	650 ml (BPA-free plastic)
Product Dimensions (D x W x H)	7f. x 7an. x 46al. centimeters (approx. 7 x 7 x 46 cm)
Dishwasher Safe Parts	Yes (all attachments except motor unit)
Country of Origin	Spain (Manufacturer: Sogo)



Image: Product label for the Sogo SS-14480 Hand Blender Set, showing model number, power, voltage, and manufacturer details.

## WARRANTY AND SUPPORT

---

Your Sogo SS-14480 Hand Blender Set comes with a **3-year full warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product is free from defects in material and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your appliance, please contact Sogo customer service. Keep your proof of purchase for warranty validation.

- **Manufacturer:** Sanyuan Appliances S.L.
- **Address:** C/Barcas 2, 2 - 46002 Valencia, Spain
- **Online Support:** Refer to the official SOGO website for contact details and support resources.