

[Manuals.plus](#) /

› [NEIKO](#) /

› NEIKO 52906A Digital Door Lock User Manual

NEIKO 52906A

NEIKO 52906A Digital Door Lock User Manual

Model: 52906A | Brand: NEIKO

1. PRODUCT OVERVIEW

The NEIKO 52906A Digital Door Lock offers a convenient keyless entry solution for homes and offices. This electronic keypad deadbolt with handleset provides enhanced security and ease of access, eliminating the need for traditional keys. It supports up to 50 unique user codes, allowing flexible access management for family, guests, or employees. The lock features an auto-locking function and is designed for easy DIY installation on most standard residential doors.



Image 1.1: Complete NEIKO 52906A Digital Door Lock assembly, including the handleset, keypad deadbolt, and interior unit.

2. PRODUCT FEATURES

- **Auto Locking Feature:** Configurable auto-lock duration from 20 to 900 seconds for enhanced security.
- **Easy DIY Installation:** Designed for quick installation with a screwdriver, no locksmith or complex wiring required. Includes template and all necessary hardware.
- **Secure Keyless Entry:** Offers keypad access with the option for 2 standard keys as backup. Battery-operated for functionality during power outages.
- **Durable Construction:** Built with zinc alloy internals, stainless steel forend, and strike plates. Features a backlight touch keypad for visibility at night.
- **50 User Codes:** Supports creation and deletion of up to 50 unique access codes for various users.

3. PACKAGE CONTENTS

Verify that all components are present in your package before beginning installation.

- Exterior Keypad Assembly
- Interior Unit Assembly
- Handset (Exterior and Interior portions)
- Deadbolt Latch
- Strike Plate and Reinforcement Plate
- Mounting Screws and Hardware
- 2 Standard Keys
- Installation Template



Image 3.1: Overview of all components included in the NEIKO 52906A Digital Door Lock package.

4. SETUP AND INSTALLATION

The NEIKO 52906A Digital Door Lock is designed for straightforward installation. Please refer to the detailed

"Instructions for Use (IFU)" PDF document provided with your product or available for download from the product page for complete step-by-step instructions and diagrams.

4.1 Before You Begin

- Ensure your door is compatible with standard residential door lock designs.
- Gather necessary tools: Phillips head screwdriver.
- Prepare 4 AA batteries (not included).
- Identify the door's handing (right-hand or left-hand) as the lock works with both.

4.2 Basic Installation Steps (Summary)

1. Remove existing lock hardware from the door.
2. Install the deadbolt latch into the door edge.
3. Mount the exterior keypad assembly, ensuring the cable passes through the door.
4. Connect the cable to the interior unit assembly.
5. Secure the interior unit to the door using the provided screws.
6. Install the handleset components.
7. Insert 4 AA batteries into the interior unit's battery compartment.
8. Perform the door handing identification process (refer to IFU for specific steps).



Image 4.1: Exploded view showing the internal and external components of the lock during assembly.

5. OPERATING INSTRUCTIONS

Once installed, the NEIKO 52906A Digital Door Lock provides secure and convenient access. For detailed programming instructions, including setting master codes, user codes, and auto-lock settings, please refer to the "Instructions for Use (IFU)" PDF document.

5.1 Unlocking the Door

- Enter your 4-8 digit user code on the keypad.
- The lock will beep and the deadbolt will retract.
- Turn the handleset to open the door.

5.2 Locking the Door

- **Manual Locking:** Press the 'C' button on the keypad. The deadbolt will extend.
- **Auto-Locking:** If enabled, the lock will automatically engage the deadbolt after the set delay (20-900 seconds) once the door is closed.

5.3 Programming Codes

The lock allows for a master code and up to 50 user codes. The master code is used to program other settings and codes. User codes are for daily entry.

Important: Always refer to the IFU for the precise sequence of button presses for programming, as incorrect steps can lead to programming errors.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your digital door lock.

- **Battery Replacement:** The lock requires 4 AA batteries. Replace them promptly when the low battery indicator appears (refer to IFU for indicator details) or if the lock's operation becomes sluggish. Always use new, high-quality alkaline batteries.
- **Cleaning:** Wipe the keypad and handleset surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.
- **Lubrication:** Periodically check the deadbolt latch for smooth operation. If needed, apply a small amount of graphite lubricant to the latch mechanism. Do not lubricate the keypad or electronic parts.

7. TROUBLESHOOTING

If you encounter issues with your NEIKO 52906A Digital Door Lock, try the following troubleshooting steps. For more complex issues, consult the full "Instructions for Use (IFU)" PDF.

Problem	Possible Cause	Solution
Lock does not respond to keypad entry.	Dead batteries; incorrect code entered; keypad malfunction.	Replace batteries. Re-enter code carefully. Use backup key. If issue persists, perform factory reset (see IFU).
Lock/unlock mechanism is sluggish or jammed.	Low batteries; misalignment during installation; debris in latch.	Replace batteries. Check installation for proper alignment. Clear any obstructions around the latch.
Cannot program new user codes.	Incorrect programming sequence; master code not set or forgotten.	Refer to IFU for correct programming steps. Ensure master code is correctly entered. Perform factory reset if necessary (all codes will be erased).
Auto-lock feature not working.	Feature disabled; incorrect setting.	Verify auto-lock setting in programming mode (refer to IFU). Ensure door closes fully.

8. SPECIFICATIONS

Specification	Detail
Model Name	52906A
Lock Type	Keypad Deadbolt with Handleset

Specification	Detail
Material	Stainless Steel, Zinc Alloy
Finish Type	Brushed
Color	Silver
Dimensions (L x W x H)	14 x 8.5 x 3.25 inches
Item Weight	4.22 pounds
Power Source	4 AA Batteries (not included)
User Codes Supported	Up to 50
Code Length	4-8 digits



Image 8.1: Keypad and interior unit dimensions for the NEIKO 52906A Digital Door Lock.

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official NEIKO website. You may also contact NEIKO customer service directly for assistance with your 52906A Digital Door Lock.

For additional resources and products, visit the [NEIKO Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question