

[Manuals.plus](#) /

› [Gosasa](#) /

› Gosasa Model 1818 Digital Analog Military Sports Watch Instruction Manual

Gosasa 1818

Gosasa Model 1818 Digital Analog Military Sports Watch Instruction Manual

Model: 1818 | Brand: Gosasa

1. PRODUCT OVERVIEW

The Gosasa Model 1818 is a multi-functional digital analog watch designed for sports and outdoor activities. It features a dual time zone display, date and week display, alarm, stopwatch, LED backlight, and is water-resistant. This manual provides detailed instructions for setting up and operating your watch.



Figure 1: Front view of the Gosasa Model 1818 watch, showcasing its digital and analog displays.



PRODUCT PARAMETER



Basic Information

BRAND: SKMEI

MODEL: 1818

WEIGHT: 72g

MOV' T: DIGITAL

CRYSTAL: RESIN

CASE: ABS+PU

BAND: PU

BUCKLE: STAINLESS STEEL

W / P : 50M

FUNCTION: 2time, Chrono, Alarm, Date, Week, LED Light, 12/24 hour clock.



Case width: 54mm



Case thickness: 20mm



Band Width: 22mm



Watch length: 265m

Figure 2: Diagram illustrating the main components of the watch, including the watch case, dial, band, mirror, clasp, and back cover.

2. SETUP AND INITIAL CONFIGURATION

2.1 Button Functions

- **LIGHT:** Activates the LED backlight.
- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
- **RESET:** Used for resetting values during setting or stopwatch functions.
- **START:** Used for starting/stopping functions or adjusting values during setting.

2.2 Setting Digital Time and Date

1. In Time Mode, press the **MODE** button three times to enter setting mode. The seconds will flash.
2. Press **RESET** to cycle through the settings: Seconds → Hours → Minutes → Month → Date → Day of Week.

3. Use the **START** button to adjust the flashing value.
4. Press **MODE** to exit setting mode.

2.3 Setting Analog Time

Pull out the crown (the knob on the right side of the watch case) and rotate it to adjust the analog hands to the correct time. Push the crown back in to finalize the setting.

2.4 12/24 Hour Format

In Time Mode, press the **START** button to toggle between 12-hour and 24-hour display formats.

3. OPERATING MODES

3.1 Alarm Mode

1. From Time Mode, press **MODE** once to enter Alarm Mode.
2. Press **RESET** to select the hour or minute setting.
3. Use **START** to adjust the flashing hour or minute.
4. Press **MODE** to confirm and exit alarm setting.
5. To activate/deactivate the alarm, press **START** and **RESET** simultaneously in Alarm Mode. An alarm icon will appear/disappear.

3.2 Stopwatch Mode

1. From Time Mode, press **MODE** twice to enter Stopwatch Mode.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. Press **MODE** to return to Time Mode.

3.3 Dual Time Mode

1. From Time Mode, press **MODE** four times to enter Dual Time Mode.
2. Press **RESET** to select the hour or minute setting.
3. Use **START** to adjust the flashing hour or minute for the second time zone.
4. Press **MODE** to confirm and exit dual time setting.

3.4 LED Backlight

Press the **LIGHT** button to illuminate the digital display for a few seconds.

4. MAINTENANCE AND CARE

4.1 Water Resistance

This watch is rated 5ATM (50 meters / 164 feet) water resistant. This means it is suitable for swimming in shallow water, showering, and washing hands. **Do not press any buttons while the watch is submerged in water. Avoid exposure to hot water or steam, as this can compromise the water resistance seals.**

4.2 Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the watch case or band.

4.3 Battery Replacement

When the display becomes dim or functions stop working, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. TROUBLESHOOTING

- **Watch not functioning:** Check if the battery needs replacement. Ensure no buttons are stuck.
- **Incorrect time display:** Re-set both analog and digital times following the instructions in Section 2.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model). If submerged, remove from water and allow to dry before attempting to use buttons.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and repair to prevent further damage.

6. SPECIFICATIONS



Watch Case



Watch Dial



Watch Band



Watch mirror



Watch Clasp



Back cover

Figure 3: Detailed product parameters and dimensions for the Gosasa Model 1818 watch.

Feature	Detail
Brand	Gosasa
Model Number	1818
Display Type	Analog-Digital
Movement Type	Quartz
Case Material	Resin
Band Material	Resin (PU)
Crystal Material	Resin
Case Diameter	54 mm
Case Thickness	20 mm
Band Width	22 mm

Feature	Detail
Water Resistance Depth	50 Meters (5ATM)
Functions	2 Time Zones, Chronograph, Alarm, Date, Week, LED Light, 12/24 Hour Clock
Weight	72g

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a seller warranty. For specific details regarding the warranty period and coverage, please refer to your purchase documentation or contact the seller directly. A 30-day return and exchange policy is typically offered for this product.

7.2 Customer Support

For any questions, technical assistance, or support inquiries regarding your Gosasa watch, please contact the seller through the platform where the purchase was made. Ensure you have your model number (1818) and purchase details available when contacting support.

8. PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the features and design of the Gosasa watch, including its water resistance and various display modes.