

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WONDERFOLD](#) /

› [WONDERFOLD W4 Elite Stroller Wagon \(4 Seater\) - User Manual](#)

## WONDERFOLD W4ELT-GRY

# WONDERFOLD W4 Elite Stroller Wagon (4 Seater) User Manual

Model: W4ELT-GRY | Brand: WONDERFOLD

## INTRODUCTION

Welcome to the user manual for your WONDERFOLD W4 Elite Stroller Wagon. This guide provides essential information for safe and effective use, maintenance, and troubleshooting of your product. Please read thoroughly before assembly and operation.

## SAFETY INFORMATION

### **WARNING: Failure to follow these instructions could result in serious injury or death.**

- Always ensure all harnesses are securely fastened when children are in the wagon.
- Do not exceed the maximum weight recommendation of 136 kg (300 lbs) for the wagon or 99 lbs per bench seat.
- Always engage the brakes when the wagon is stationary.
- Supervise children at all times when they are in or around the wagon.
- Avoid placing hot liquids or heavy items in the parent console or side pockets to prevent tipping.
- Ensure the wagon is fully unfolded and locked before placing children inside.
- Keep hands and fingers clear of moving parts during folding and unfolding.

## WHAT'S IN THE BOX

- Two bench seats
- Removable canopy with adjustable canopy fabric
- Canopy poles
- Pull strap
- Removable rear basket

## SETUP

### Unfolding the Wagon

1. Place the folded wagon on a flat, stable surface.
2. Release the folding latch.
3. Pull the frame upwards until it fully extends and locks into place. Ensure all locking mechanisms are engaged.



Image showing the WONDERFOLD W4 Elite Stroller Wagon in both folded and unfolded states.

### Attaching Seats

1. Align the seat clips with the designated attachment points inside the wagon.
2. Press firmly until the seats click securely into place.
3. Fasten the five-point harnesses for each child.

### Installing the Canopy

1. Insert the canopy poles into the designated slots on the wagon frame.
2. Secure the canopy fabric over the poles. The canopy is adjustable for optimal UV protection.

## Attaching the Rear Basket

1. Hook the rear basket onto the designated attachment points at the back of the wagon.

## OPERATING YOUR STROLLER WAGON

### Pushing and Pulling

The adjustable push handle allows for comfortable maneuvering. An optional pull strap is included for easier navigation on soft terrain.

### Engaging Brakes

To engage the brakes, press down firmly on the foot brake lever located near the rear wheels. Ensure both wheels are locked before leaving the wagon unattended.

### Adjusting the Canopy

The canopy can be slid along the poles to adjust its position or removed entirely for open-air use.

### Utilizing the Front Zipper Door

The front zipper door provides easy access for children to enter and exit the wagon independently. It also facilitates loading and unloading items.

### Utility Mode

For increased storage space, the bench seats can be removed, transforming the stroller wagon into a deep carriage basket suitable for carrying gear, groceries, or other items.



**Quick  
and Easy  
to Fold & Unfold**

Image showing the WONDERFOLD W4 Elite Stroller Wagon in utility mode with seats removed, demonstrating ample storage space for various items.

## MAINTENANCE

### Cleaning

The fabric components can be spot cleaned with mild soap and water. Allow to air dry completely. Regularly wipe down the frame with a damp cloth.

### Wheel Care

Periodically check wheels for debris and ensure they spin freely. Lubricate axles if necessary.

### Storage

Store the wagon in a dry, cool place away from direct sunlight to prevent fabric fading and material degradation.

## TROUBLESHOOTING

### Wagon Does Not Fold/Unfold Smoothly

- Ensure all seats and accessories are removed.
- Check for any obstructions in the folding mechanism.
- Apply a silicone-based lubricant to moving joints if stiffness persists.

### Wheels Squeak or Stick

- Clean any dirt or debris from the wheel axles.
- Apply a small amount of lubricant to the wheel bearings.

### Harnesses Are Difficult to Adjust

- Ensure straps are not twisted.
- Refer to the setup section for proper harness adjustment.

## SPECIFICATIONS



## Utility Mode

Remove Seats & Fill with Goodies

Diagram illustrating the dimensions of the WONDERFOLD W4 Elite Stroller Wagon.

Feature	Detail
Brand	WONDERFOLD
Model Number	W4ELT-GRY
Color	Charcoal Gray
Material	Faux Leather, Fabric
Frame Material	Aluminum
Age Range Description	Kid
Harness Type	5 Point
Seating Capacity	4
Item Weight	55 Pounds

Feature	Detail
Maximum Weight Recommendation	136 Kilograms (300 lbs)
Stroller Seat Weight	99 Pounds (per bench seat)
Basket Weight Capacity Maximum	198 Pounds
Folded Size	42x29x18.5 inches
Item Dimensions L x W x H	24" L x 34" W x 15" H
Front Wheel Diameter	8 Inches
Back Wheel Diameter	9.5 Inches
Specification Met	ASTM F833-15, EN1888

## WARRANTY AND SUPPORT

For warranty information, product registration, or additional support, please visit the official WONDERFOLD website or contact their customer service. Keep your proof of purchase for warranty claims.

Visit the WONDERFOLD Store: [WONDERFOLD Store on Amazon](#)