

Magic Mixies 14651

Magic Mixies 14651 Cauldron Toy Instruction Manual

Model: 14651

[Contents](#) [Setup](#) [Introduction](#) [Safety Information](#) [Package](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

Welcome to the magical world of Magic Mixies! This instruction manual provides detailed guidance on how to set up, operate, and maintain your Magic Mixies 14651 Cauldron Toy. Follow these steps to create your own magical creature and experience interactive play.

2. SAFETY INFORMATION

WARNING:

- For external use only.
- Avoid contact with eyes.
- Keep away from fire or direct heat sources.
- Adult supervision is recommended during play.

3. PACKAGE CONTENTS

Ensure all the following items are included in your Magic Mixies Cauldron package:

- 1 x Cauldron Playset
- 1 x Lithium Battery
- 1 x Vegetable Glycerin
- 1 x Spell Book
- 1 x Electronic Figure (Magic Mixie)
- 1 x USB Charging Cable
- 1 x Instruction Manual

- 1 x Molded Fizz 'Fizz Flower'
- 1 x Molded Fizz 'Glimmer Star'
- 3 x LR44 Batteries
- 1 x Refill Bottle (VIAL)
- 2 x Dissolvable Paper
- 1 x Fizz Powder 'Sound Dust'
- 1 x Dissolvable Soap
- 1 x Parent/Supervisor Letter
- 4 x Accessories



Image: All components included with the Magic Mixies Cauldron, including the cauldron, spell book, wand, and various potion ingredients.

4. SETUP

4.1. Battery Installation and Charging

The Magic Mixies Cauldron requires a Lithium battery (included) and the Magic Mixie figure requires 3 LR44 batteries (included). Ensure all batteries are correctly installed according to the instructions in the spell book or on the device itself. Before first use, it is recommended to fully charge the cauldron using the provided USB charging cable. Connect the USB cable to the cauldron and a compatible USB power source. Charging typically takes approximately one hour.

4.2. Initial Preparation

Place the cauldron on a stable, flat surface. Ensure you have all the magical ingredients and the spell book ready for use.

5. OPERATION: CREATING YOUR MAGIC MIXIE

Follow the steps in the spell book and the instructions below to magically create your Magic Mixie. The process involves adding ingredients, stirring, and tapping the cauldron with your magic wand. The creation process consists of 7 cycles.

1. **Prepare the Potion:** Begin by adding the "potion" (water from the refill bottle) into the cauldron. The cauldron will detect the water and initiate the magical process.
2. **Add Sound Dust:** Add the 'Sound Dust' fizz powder to give your Mixie its voice. Stir the potion with your magic wand until you hear a tapping sound.
3. **Add Magic Feather:** Drop the magic feather into the cauldron to give your Mixie wings. Stir until you hear the tapping sound.
4. **Add Fizz Flower:** Stir in the 'Fizz Flower' to add color to your Mixie. Continue stirring until the tapping sound is heard.
5. **Name Your Mixie:** Write your Mixie's name on the Naming Scroll (dissolvable paper) and add it to the potion. Stir until the tapping sound is heard.
6. **Perform the Spell:** Use the magic wand to tap the rim of the cauldron three times when you hear the "Tap! Tap! Tap!" prompt.
7. **The Reveal:** Observe as real mist rises from the cauldron, revealing your Magic Mixie.



Image: Visual guide on the product packaging illustrating the steps to create a Magic Mixie, including reading the spell, adding ingredients, tapping the wand, and the mist reveal.

For additional visual instructions, scan the QR code on the product packaging or visit uqr.to/qsr0.

5.1. Interacting with Your Magic Mixie

Your Magic Mixie is interactive and responds to your touch and the magic wand. It can perform spells, grant wishes, and make enchanting sounds.

- **Spell Mode:** Tap the gem on your Mixie's head once with the wand. The gem will turn purple, indicating spell mode.
- **Wish Mode:** Tap the gem twice with the wand. The gem will turn green if your wish is granted.
- **Enchantment Mode:** Hold the wand to the gem for a few seconds to activate enchantment mode, which allows interaction with the cauldron.
- **Recharging Energy:** Your Mixie's magical energy can be refilled by nurturing it (petting) or allowing it to rest.



Image: A child holding the Magic Mixie, demonstrating its interactive nature.

5.2. Recharging and Repeating the Magic

The cauldron can be used repeatedly to reveal other items or to simply enjoy the mist and spell-casting experience.

- **Mist Refill:** The cauldron's mist feature can be refilled using the provided vegetable glycerin. The mist will work approximately 5 times before needing a refill.
- **Repeating Revelations:** To reveal new items, place them in the small pink box located at the bottom of the cauldron. Reset the cauldron using the reset key, then add the potion (water) and follow the 7 creation cycles as before. Note that adding ingredients is optional for subsequent reveals; only the water and wand taps are essential.
- **Spell Mode (without reveal):** The cauldron also features a "spell" mode for continuous play without mist or a reveal. In this mode, you can add potion, ingredients, stir, and tap the wand for extended magical play.

6. MAINTENANCE

- **Cleaning:** Wipe the cauldron and accessories with a dry or slightly damp cloth. Do not immerse the electronic components in water.
- **Storage:** Store the Magic Mixies Cauldron and its components in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries from the Magic Mixie figure if it will not be used for an extended period.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Cauldron makes no sound or does not start.	Ensure the cauldron is charged. The sounds and process begin only after the "potion" (water) is poured into the cauldron and detected by its receptors.
Mist is not appearing or is weak.	Check if the vegetable glycerin for mist generation needs refilling. Ensure the cauldron is fully charged.
Magic Mixie is not responding.	Check the LR44 batteries in the Magic Mixie figure. Ensure the wand is tapping the gem correctly and firmly.
Creation process stops prematurely.	Ensure you are tapping the cauldron rim three times with the wand when prompted by the "Tap! Tap! Tap!" sound. Do not be too gentle with the taps.

8. SPECIFICATIONS

Feature	Detail
Brand	Magic Mixies
Model Number	14651
UPC	630996146514
Material	Polypropylene
Dimensions	20.5 x 24.4 x 21.7 cm
Item Weight	1.1 Kilograms
Color	Pink
Power Source Type	Battery
Battery Type (Cauldron)	1 x Lithium Battery (rechargeable via USB)
Battery Type (Mixie Figure)	3 x LR44 Batteries
Recommended Age Range	Child (Minimum 5 years, Maximum 105 years)
Educational Objective	Imagination development, instruction following, fine motor skills enhancement

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Magic Mixies website. Keep your purchase receipt as proof of purchase.

For further assistance, you may also contact the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question