

Techwood TRO-5065

Techwood TRO-5065 Stand Mixer, Mincer, and Blender Instruction Manual

Model: TRO-5065

[Instructions](#) [Components](#) [Setup](#) [Operation](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

INTRODUCTION

Thank you for choosing the Techwood TRO-5065 Stand Mixer, Mincer, and Blender. This versatile kitchen appliance is designed to simplify your cooking and baking tasks with its powerful 1000W motor and multiple functions. Please read this manual carefully before first use to ensure safe and efficient operation, and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving parts during operation to prevent injury and damage to the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Always ensure the safety lock is engaged before operating the appliance.

- Exercise caution when handling sharp blades, especially during assembly, disassembly, and cleaning.

PRODUCT OVERVIEW AND COMPONENTS

The Techwood TRO-5065 is a multi-functional kitchen machine. Familiarize yourself with its main parts:



Image: The Techwood TRO-5065 multi-functional kitchen machine, showcasing its main unit, stainless steel mixing bowl, glass blender, and meat mincer attachment.

- **Motor Unit:** The main body housing the 1000W motor and control dial.
- **Stainless Steel Mixing Bowl:** 5-liter capacity bowl for mixing and kneading.
- **Dough Hook:** For kneading heavy doughs like bread and pizza.
- **Whisk:** For whipping cream, egg whites, and light batters.
- **Flat Beater:** For mixing cakes, cookies, and mashed potatoes.
- **Splash Guard:** Prevents ingredients from splashing out of the bowl during operation.
- **Glass Blender:** 1.5-liter capacity for blending liquids, smoothies, and sauces.

- **Mincer Attachment:** For grinding meat and making sausages.
- **Speed Control Dial:** Adjusts the mixing speed (6 speeds).
- **Release Button:** To lift the motor head for attachment changes.

SETUP AND ASSEMBLY

Before First Use:

1. Unpack all components and remove any packaging materials.
2. Clean all detachable parts (mixing bowl, attachments, blender jug, mincer parts) with warm soapy water. Rinse thoroughly and dry completely.
3. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
4. Place the appliance on a stable, flat, and dry surface.

Assembling the Stand Mixer:

1. Ensure the appliance is unplugged.
2. Press the release button to lift the motor head.
3. Place the stainless steel mixing bowl onto the base, turning it clockwise until it locks into position.
4. Select the desired attachment (dough hook, whisk, or flat beater) and insert it into the attachment shaft, pushing upwards and turning slightly until it clicks into place.
5. Lower the motor head by pressing the release button again until it locks securely.
6. Attach the splash guard by aligning it with the bowl and turning it until it fits snugly.

Assembling the Blender:

1. Ensure the appliance is unplugged.
2. Place the blender jug onto the designated blender port on top of the motor unit. Turn clockwise to secure.
3. Ensure the lid is properly sealed on the blender jug before operation.

Assembling the Mincer:

1. Ensure the appliance is unplugged.
2. Assemble the mincer components (screw, blade, cutting plate, locking ring) according to the diagram in the full manual.
3. Insert the assembled mincer into the front port of the motor unit. Turn clockwise to secure.
4. Place the feeding tray on top of the mincer.

OPERATING INSTRUCTIONS



Image: The Techwood TRO-5065 in a kitchen setting, ready for use in baking, with a woman holding a cake nearby.

Using the Stand Mixer:

1. Ensure the stand mixer is correctly assembled with the desired attachment and bowl.
2. Add ingredients to the mixing bowl.
3. Plug the appliance into a power outlet.
4. Turn the speed control dial to the desired speed (1-6). Start with a low speed and gradually increase to prevent splashing.
5. Allow the mixer to operate until ingredients are thoroughly combined or processed.
6. Once finished, turn the speed dial to "0" (off) and unplug the appliance.
7. Press the release button to lift the motor head and remove the attachment and bowl.

Using the Blender:

1. Ensure the blender jug is securely attached to the motor unit.
2. Add ingredients to the blender jug. Do not exceed the MAX fill line.
3. Securely place the lid on the blender jug.
4. Plug the appliance into a power outlet.
5. Turn the speed control dial to the desired speed. For best results, use higher speeds for blending.
6. Operate in short bursts for optimal control, or continuously until desired consistency is achieved.
7. Once finished, turn the speed dial to "0" (off) and unplug the appliance.
8. Carefully remove the blender jug.

Using the Mincer:

1. Ensure the mincer attachment is correctly assembled and securely attached to the front port.
2. Cut meat into small pieces (approx. 2-3 cm) that fit into the feeding tube. Remove bones, gristle, and excessive fat.
3. Place a bowl under the mincer outlet to collect the ground meat.
4. Plug the appliance into a power outlet.

- 5. Turn the speed control dial to a medium speed.
- 6. Feed the meat into the tube using the food pusher. Never use your fingers or other utensils to push food into the mincer.
- 7. Once finished, turn the speed dial to "0" (off) and unplug the appliance.
- 8. Disassemble the mincer for cleaning immediately.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Techwood TRO-5065.

General Cleaning:

- Always unplug the appliance before cleaning.
- Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
- Wash the stainless steel mixing bowl, dough hook, whisk, flat beater, splash guard, blender jug, and all mincer parts in warm soapy water. Rinse thoroughly and dry immediately.
- For stubborn food residue, soak parts in warm soapy water before cleaning.
- Be extremely careful when handling the blender blades and mincer blade as they are very sharp.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.
- Ensure all parts are completely dry before reassembling or storing the appliance.

Storage:

Store the appliance and its accessories in a dry, clean place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power outlet faulty; motor head not locked; speed dial not set.	Check power connection; try another outlet; ensure motor head is locked; turn speed dial to a setting other than "0".
Motor stops during operation.	Overload protection activated; ingredients too dense.	Turn off and unplug. Reduce load or cut ingredients into smaller pieces. Let cool for 15-20 minutes before restarting.
Loud noise or vibration.	Appliance not on a stable surface; attachment not properly secured; too much load.	Place on a flat, stable surface; ensure all attachments are locked; reduce ingredient quantity.
Blender leaks.	Lid not properly sealed; jug not secured to base.	Ensure lid is tightly closed; check that the blender jug is locked onto the motor unit.
Mincer not grinding effectively.	Blade or cutting plate incorrectly assembled; meat too tough or contains gristle/bones.	Check mincer assembly; ensure meat is properly prepared (no bones/gristle); do not overload.

TECHNICAL SPECIFICATIONS



Image: The Techwood TRO-5065 appliance with its approximate dimensions indicated: 16cm width, 14cm depth, and 22cm height.

- **Model:** TRO-5065
- **Power:** 1000 W
- **Voltage:** 220-240V~ 50/60Hz
- **Mixing Bowl Capacity:** 5 Liters (Stainless Steel)
- **Blender Capacity:** 1.5 Liters (Glass)
- **Number of Speeds:** 6
- **Overall Dimensions (L x W x H):** 57.8 x 28.8 x 35.5 cm
- **Weight:** 8.2 Kilograms

- **Safety Feature:** Safety lock, Automatic stop function

WARRANTY AND CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact your retailer or the Techwood customer service department. Please have your model number (TRO-5065) and purchase date ready.

Spare Parts Availability: Spare parts for this appliance are available for 5 years from the date of purchase.

For more information, you may visit the official Techwood store: [Techwood Store on Amazon.fr](#)

© 2023 Techwood. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question