

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HADEN](#) /

› [Haden 12-Cup Programmable Drip Coffee Maker Instruction Manual](#)

HADEN CORECOFFEE

Haden 12-Cup Programmable Drip Coffee Maker

Model: **CORECOFFEE** | Brand: **HADEN**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.

- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT OVERVIEW

The Haden 12-Cup Programmable Drip Coffee Maker is designed for ease of use and consistent coffee brewing. It features a 12-cup capacity, programmable settings, and a reusable filter.



Figure 1: Front view of the Haden 12-Cup Programmable Drip Coffee Maker, showcasing its black and chrome design with the digital display and control buttons.

Key Features:

- **12-Cup Capacity:** Ideal for households or offices.
- **Programmable Clock:** Allows scheduling brew time in advance.
- **Brew Strength Setting:** Customize coffee strength to personal preference.
- **30-Second Anti-Drip Function:** Pauses brewing to prevent drips when carafe is removed.
- **Auto Shut-Off:** Automatically deactivates after 120 minutes for safety and energy saving.
- **Reusable Washable Filter:** For convenient cleaning and maintenance.
- **Keep Warm Function:** Maintains coffee temperature for extended periods.
- **Non-slip Rubberized Feet:** Provides stability on countertops.



Figure 2: Visual representation of the coffee maker's main features, including its 12-cup capacity, brew strength selection, stable non-slip feet, and 120-minute auto shut-off.



Pause dispensing with the 30-second anti-drip function.



Keep-warm function for extended periods, ensuring it stays fresh and hot.



Removable filter for convenient cleaning and maintenance.



Convenient programmable clock and delay-brew allows you to schedule brewing time in advance.

Figure 3: Close-up views illustrating the 30-second anti-drip function, the keep-warm feature, the removable filter basket for easy cleaning, and the programmable clock for delayed brewing.

BEFORE FIRST USE

Before using your Haden Coffee Maker for the first time, it is recommended to clean all removable parts and run a brewing cycle with only water.

1. Wash the carafe, carafe lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the coffee maker with a soft, damp cloth.
3. Fill the water reservoir with fresh, cold water up to the 12-cup mark.
4. Place the empty reusable filter basket into its holder and close the top lid.
5. Place the empty carafe with its lid on the warming plate.
6. Plug the coffee maker into a standard electrical outlet.
7. Press the 'ON/OFF' button to start a brewing cycle with only water. This will clean the internal components.
8. Once the cycle is complete, discard the water from the carafe and allow the appliance to cool.

SETUP

Follow these steps to set up your coffee maker for daily use.

1. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
2. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water. Use the water level markings on the side of the reservoir or the carafe for accurate measurement. Do not exceed the 'MAX' fill line.
3. **Add Coffee Grounds:** Place the reusable filter basket into its holder. Add the desired amount of ground coffee into the filter. A general guideline is one tablespoon of coffee grounds per cup, but adjust to your taste.
4. **Close Lid:** Close the top lid securely.
5. **Position Carafe:** Place the empty glass carafe with its lid firmly on the warming plate. Ensure it is correctly seated to activate the anti-drip mechanism.
6. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet. The digital clock will display '12:00' or the current time if previously set.

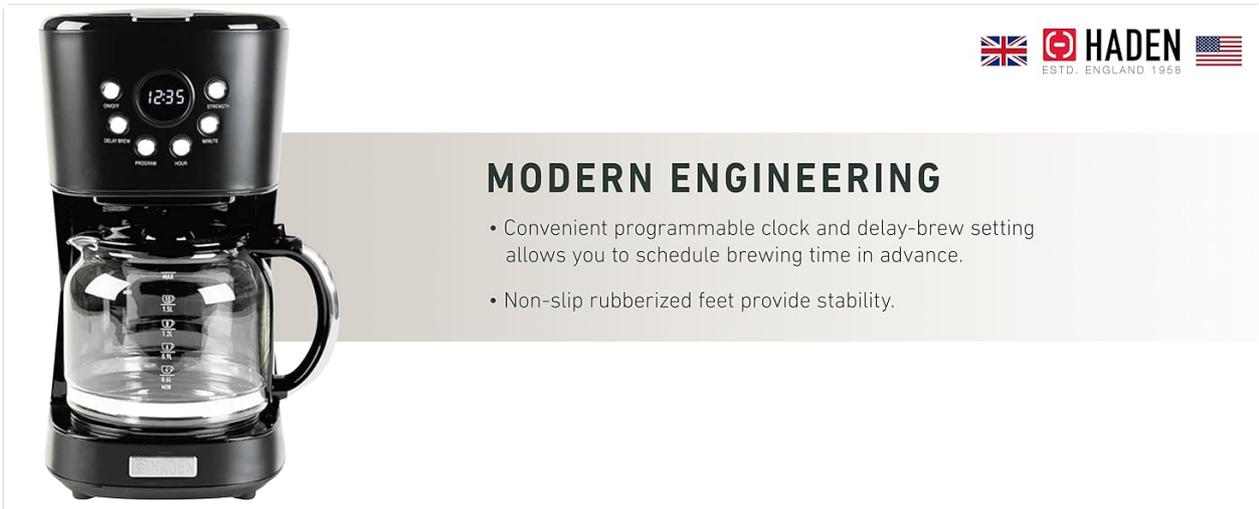


Figure 4: The coffee maker showcasing its modern engineering, including the programmable clock and non-slip feet, essential for proper setup.

OPERATING INSTRUCTIONS

Setting the Clock:

1. Plug in the coffee maker. The display will flash '12:00'.
2. Press the 'HOUR' button to set the hour. Hold to advance quickly. Note the 'PM' indicator for afternoon hours.
3. Press the 'MINUTE' button to set the minutes. Hold to advance quickly.
4. The clock is set automatically after a few seconds of inactivity.

Brewing Coffee Immediately:

1. Ensure the coffee maker is set up as described in the 'Setup' section.
2. Press the 'STRENGTH' button repeatedly to select your desired brew strength (e.g., Regular, Bold). The

selected strength will be indicated on the display.

3. Press the 'ON/OFF' button. The indicator light will illuminate, and brewing will begin.
4. The brewing process will complete automatically. The coffee maker will then switch to the 'Keep Warm' mode.
5. The appliance will automatically shut off after 120 minutes of inactivity.



Figure 5: Close-up of the control panel, highlighting the 'STRENGTH' button for customizing brew intensity.

Using the Delay Brew Function:

The Delay Brew function allows you to program the coffee maker to start brewing at a later time.

1. Ensure the coffee maker is set up with water and coffee grounds.
2. Set the current time using the 'HOUR' and 'MINUTE' buttons if not already set.
3. Press the 'PROGRAM' button. The display will flash, indicating it's ready to set the delayed start time.
4. Use the 'HOUR' and 'MINUTE' buttons to set the desired start time for brewing.
5. Press the 'DELAY BREW' button. The indicator light for 'DELAY BREW' will illuminate, confirming the setting.
6. The coffee maker will automatically start brewing at the programmed time.

Anti-Drip Function:

The 30-second anti-drip function allows you to temporarily remove the carafe during brewing to pour a cup of coffee without making a mess. The brewing will pause and resume once the carafe is returned to the warming plate within 30 seconds.

SAFETY & KEEP WARM FUNCTION

- Pause dispensing your beverage without making a mess with the 30-second anti-drip function.
- Keep your coffee warm for extended periods, ensuring it stays fresh and hot until you're ready to enjoy it.



Figure 6: The carafe and warming plate, illustrating the anti-drip feature and the keep-warm function that maintains coffee temperature.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning:

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the reusable filter basket and discard any used coffee grounds. Wash the filter basket and carafe in warm, soapy water. Rinse thoroughly.
3. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Dry all parts thoroughly before reassembling or storing.



CLASSIC STYLE MEETS CONTEMPORARY LIVING

- Compact, sleek, and vintage design fits perfectly on any countertop, table or kitchen space.
- Simplify maintenance with the easy-to-clean carafe funnel, ensuring hassle-free cleanup.

Figure 7: The removable filter basket, demonstrating the ease of access for cleaning and maintenance.

Descaling (Every 2-4 Weeks, or as needed):

Mineral deposits from water can build up in your coffee maker, affecting performance and coffee taste. Descaling helps remove these deposits.

1. Fill the water reservoir with a mixture of white vinegar and water (1 part vinegar to 2 parts water). For severe buildup, use a 1:1 ratio.

2. Place the empty carafe on the warming plate.
3. Press the 'ON/OFF' button to start a brewing cycle.
4. After about half of the mixture has brewed through, press the 'ON/OFF' button to turn off the coffee maker and let it soak for at least 15 minutes to allow the vinegar to work on the deposits.
5. Press the 'ON/OFF' button again to complete the brewing cycle.
6. Discard the vinegar solution from the carafe.
7. Run 2-3 full brewing cycles with fresh, cold water only to rinse out any remaining vinegar taste or odor.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Coffee maker not plugged in; 'ON/OFF' button not pressed; Carafe not properly seated.	Fill water reservoir; Plug in appliance; Press 'ON/OFF' button; Ensure carafe is correctly placed on warming plate.
Coffee tastes weak.	Not enough coffee grounds; Brew strength set to 'Regular'; Water-to-coffee ratio incorrect.	Add more coffee grounds; Select 'Bold' brew strength; Adjust coffee-to-water ratio to taste.
Coffee overflows from filter basket.	Too many coffee grounds; Filter basket clogged; Fine grind coffee used.	Reduce coffee grounds; Clean filter basket; Use a medium grind coffee.
Coffee maker leaks.	Water reservoir overfilled; Carafe not properly seated; Mineral buildup.	Do not exceed 'MAX' fill line; Ensure carafe is correctly placed; Descale the coffee maker.
Programmable brew does not start.	Delay brew not activated; Incorrect time set.	Ensure 'DELAY BREW' indicator light is on; Verify current time and programmed brew time are correct.

SPECIFICATIONS

Feature	Detail
Brand	HADEN
Model Name	HADEN 12-Cup Countertop Coffee Machine for Home with Glass Coffee Carafe
Item Model Number	CORECOFFEE
Color	Black and Chrome
Product Dimensions	9"D x 7.25"W x 13.5"H
Item Weight	4 pounds

Feature	Detail
Coffee Maker Type	Drip Coffee Machine
Capacity	12 Cups
Special Feature	Auto Shut-Off, Programmable, Brew Strength Setting, Anti-Drip
Included Components	Carafe, Reusable Filter
Operation Mode	Fully Automatic
UPC	017342750982
Date First Available	January 13, 2022



Figure 8: Dimensions of the Haden 12-Cup Programmable Drip Coffee Maker.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official HADEN website or contact their

customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Official HADEN Website: [HADEN Store on Amazon](#)

© 2023 HADEN. All rights reserved.

Related Documents - CORECOFFEE

 <p>HADEN ESTD. ENGLAND 1988</p> <p>INSTRUCTION MANUAL</p> <p>PRODUCT CODE: HC0301-01030 DORCHESTER DRIP COFFEE MACHINE</p>	<p>Haden Dorchester Drip Coffee Machine Instruction Manual</p> <p>Comprehensive instruction manual for the Haden Dorchester Drip Coffee Machine, covering setup, operation, safety, cleaning, and maintenance. Includes technical specifications and contact information.</p>
 <p>HADEN ESTD. ENGLAND 1988 BY ANTHROPOLOGIE</p> <p>INSTRUCTION MANUAL</p> <p>PRODUCT CODE: HC03030-01030 BISTRO DRIP COFFEE MAKER</p>	<p>Haden Bistro Drip Coffee Maker Instruction Manual</p> <p>Complete instruction manual for the Haden Bistro Drip Coffee Maker (Model HC03030-US) by Anthropologie. Learn how to set up, use, clean, and maintain your coffee maker.</p>
 <p>HADEN ESTD. ENGLAND 1988</p> <p>INSTRUCTION MANUAL</p> <p>PRODUCT CODE: HC02001-01020 DORCHESTER DRIP COFFEE MACHINE</p>	<p>Haden Dorchester Drip Coffee Machine Instruction Manual</p> <p>Comprehensive instruction manual for the Haden Dorchester Drip Coffee Machine (Model HC02001-US), covering setup, operation, cleaning, maintenance, technical specifications, and warranty information.</p>
 <p>HADEN ESTD. ENGLAND 1988</p> <p>INSTRUCTION MANUAL</p> <p>PRODUCT CODE: HC02010-01020 STARBECK DRIP COFFEE MACHINE</p>	<p>Haden Starbeck Drip Coffee Machine Instruction Manual</p> <p>User manual and instructions for the Haden Starbeck Drip Coffee Machine (Model HC02010-US), covering setup, operation, cleaning, and warranty information.</p>

 <p>INSTRUCTION MANUAL</p>  <p>MODEL NUMBER: HC03020-US DIGITAL DRIP COFFEE MACHINE</p>	<p>Haden HC03020-US Digital Drip Coffee Machine: Instruction Manual</p> <p>Comprehensive instruction manual for the Haden HC03020-US Digital Drip Coffee Machine. Learn how to set up, use, clean, and maintain your coffee maker for optimal performance and delicious coffee.</p>
 <p>INSTRUCTION MANUAL</p>  <p>PRODUCT CODE: HC02010-US STARBECK DRIP COFFEE MACHINE</p>	<p>Haden Starbeck Drip Coffee Machine Instruction Manual & Warranty</p> <p>Official instruction manual and warranty information for the Haden Starbeck Drip Coffee Machine (Model HC02010-US). Learn how to set up, use, clean, and maintain your coffee maker.</p>