

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Canon](#) /
- › [Canon PowerShot SX70 HS Digital Camera User Manual](#)

Canon SX70 HS

Canon PowerShot SX70 HS Digital Camera User Manual

1. INTRODUCTION

The Canon PowerShot SX70 HS is a versatile point-and-shoot digital camera designed for high-resolution imaging and extensive zoom capabilities. It features a 20.3MP CMOS sensor paired with a DIGIC 8 image processor, enabling still photography at up to 10 frames per second and UHD 4K video recording, including 4K time-lapse movies. Its wide-ranging 65x optical zoom lens covers a focal length equivalent to 21-1365mm, making it suitable for various shooting scenarios from wide-angle landscapes to super-telephoto subjects. The camera also incorporates five-stop effective image stabilization to minimize camera shake, a 2.36m-dot OLED electronic viewfinder for clear eye-level shooting, and built-in Wi-Fi and Bluetooth for seamless wireless control and sharing.

2. CAMERA COMPONENTS

Familiarize yourself with the main components of your PowerShot SX70 HS camera.



Figure 2.1: Front-side view of the Canon PowerShot SX70 HS Digital Camera, showing the lens and grip.



Figure 2.2: The back of the Canon PowerShot SX70 HS Digital Camera, displaying the control buttons and the closed LCD screen.



Figure 2.3: The back of the Canon PowerShot SX70 HS Digital Camera with its vari-angle LCD screen articulated outwards, showing its flexibility.



Figure 2.4: An overhead view of the Canon PowerShot SX70 HS Digital Camera, showing the mode dial, shutter button, and hot shoe.

3. SETUP

3.1. Charging the Battery

The camera uses a Canon LP-E12 Lithium-Ion Battery Pack (7.2V, 875mAh). Use the Canon Battery Charger LC-E12 to charge the battery. Insert the battery into the charger and plug the charger into a power outlet. The charging indicator will show the charging status.

3.2. Inserting a Memory Card

The PowerShot SX70 HS supports SD memory cards. Open the memory card slot cover, insert the SD card (e.g., SanDisk SecureDigital 64GB Extreme PRO) with the label facing the correct direction until it clicks into place, then close the cover.

3.3. Initial Settings

Upon first power-on or after a battery change, you may be prompted to set the date, time, and time zone. Follow the on-screen instructions to configure these settings for accurate photo and video metadata.

4. OPERATING THE CAMERA

4.1. Basic Photography

To take a photo, turn the camera on using the power button. Select your desired shooting mode using the mode dial (e.g., Auto for automatic settings). Frame your shot using the electronic viewfinder or the vari-angle LCD screen.

Press the shutter button halfway to focus, then press fully to capture the image.

4.2. Using the Zoom Lens

The camera features a powerful 65x optical zoom lens. Use the zoom lever around the shutter button to zoom in or out. The 5-stop effective image stabilization helps maintain sharpness even at extended zoom ranges or in low light conditions.

4.3. Video Recording

To record video, switch the mode dial to video mode or press the dedicated movie record button. The camera supports UHD 4K video recording and 4K time-lapse movies. Ensure sufficient memory card space and battery life for extended recording sessions.

4.4. Wireless Connectivity

The PowerShot SX70 HS includes built-in Wi-Fi and Bluetooth. These features allow for wireless transfer of images and videos to compatible devices (smartphones, tablets, computers) and remote control of the camera via a dedicated application. Refer to the camera's on-screen menu for pairing and connection instructions.

5. KEY FEATURES

- **20.3MP CMOS Sensor & DIGIC 8 Image Processor:** Delivers high-resolution images and fast performance.
- **65x Optical Zoom Lens:** Offers a versatile 21-1365mm (35mm equivalent) focal length range.
- **5-Stop Image Stabilization:** Minimizes camera shake for sharper handheld shots.
- **UHD 4K Video Recording & 4K Time-Lapse:** Captures high-quality video content.
- **2.36m-Dot OLED Electronic Viewfinder:** Provides clear eye-level viewing.
- **Built-In Wi-Fi and Bluetooth:** Enables wireless sharing and remote control.
- **Continuous Shooting up to 10 fps:** Ideal for capturing fast-moving subjects.

6. MAINTENANCE

6.1. Cleaning the Camera

Use a soft, lint-free cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens or sensor directly with your fingers. Do not use harsh chemicals or abrasive materials.

6.2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Use a camera bag or case to protect it from dust and physical damage. Remove the battery if storing for extended periods.

7. TROUBLESHOOTING

7.1. Camera Does Not Turn On

- Ensure the battery is fully charged and correctly inserted.
- Check if the battery contacts are clean.

7.2. Images Are Blurry

- Verify that the lens is clean and free from smudges.
- Ensure the camera is properly focused on your subject.
- Use image stabilization or a tripod in low light or at high zoom levels.

7.3. Memory Card Error

- Ensure the memory card is correctly inserted.
- Try formatting the memory card (note: this will erase all data).
- Use a different, compatible memory card.

7.4. Connectivity Issues

- Ensure Wi-Fi/Bluetooth is enabled on both the camera and the connecting device.
- Check the camera's wireless settings and ensure proper pairing.
- Move closer to the connecting device to improve signal strength.

8. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|--|
| Brand | Canon |
| Model Name | 3071C001 |
| Photo Sensor Resolution | 20.3 MP |
| Image Stabilization | Optical (5-stop effective) |
| Optical Zoom | 65x |
| Focal Length (35mm Equivalent) | 21-1365mm |
| Video Resolution | 2160p (UHD 4K) |
| Continuous Shooting Speed | 10 FPS |
| Display Type | OLED Electronic Viewfinder (2.36m-dot) |
| Connectivity Technology | Bluetooth, HDMI, Micro HDMI, Wi-Fi |
| Battery Type | Canon LP-E12 Lithium-Ion Battery Pack (7.2V, 875mAh) |
| Supported File Format | JPEG, RAW |

9. WARRANTY AND SUPPORT

9.1. Warranty Information

This product comes with a 90-day limited warranty. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For further assistance, technical support, or service inquiries, please visit the official Canon support website or contact their customer service hotline. Contact information can typically be found in the product packaging or on the Canon website.