

Canon 3453C002

Canon EOS Rebel SL3 DSLR Camera User Manual

Model: 3453C002

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Canon EOS Rebel SL3 DSLR Camera. Please read this manual thoroughly before using the camera and retain it for future reference. The Canon EOS Rebel SL3 is a versatile DSLR camera designed for both still photography and 4K video recording, featuring a 24.1MP APS-C CMOS sensor and DIGIC 8 image processor.

2. SETUP

2.1 Unpacking and Checking Contents

Before beginning, ensure all components are present. The standard package includes:

- Canon EOS Rebel SL3 DSLR Camera Body
- Canon EF-S 18-55mm f/4-5.6 IS STM Lens
- Canon LP-E17 Lithium-Ion Battery Pack
- Canon LC-E17 Charger for LP-E17 Battery Pack
- Canon RF-3 Body Cap
- Canon Eyecup EF
- EW-400D-N Neck Strap
- Lens Cap

2.2 Attaching the Lens

1. Remove the body cap from the camera and the rear lens cap from the lens.
2. Align the red or white index mark on the lens with the corresponding index mark on the camera body.

3. Turn the lens clockwise until it clicks into place.



Figure 2.2.1: Front view of the Canon EOS Rebel SL3 camera with the 18-55mm lens attached.

2.3 Inserting the Battery and Memory Card

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the LP-E17 battery pack with the electrical contacts facing inward, ensuring it locks into place.
3. Open the memory card slot cover.
4. Insert a compatible SD card (SD, SDHC, or SDXC) with the label facing the back of the camera until it clicks.
5. Close both covers securely.



Figure 2.3.1: Front view of the Canon EOS Rebel SL3 camera, showing the lens and general body shape.

2.4 Charging the Battery

Use the provided LC-E17 charger to charge the LP-E17 battery. Connect the charger to a power outlet and insert the battery. The charging indicator light will show the charging status.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

Locate the power switch on the top right of the camera body. Slide it to the "ON" position to power on the camera. Slide it to "OFF" to power off.



Figure 3.1.1: Top view of the Canon EOS Rebel SL3, highlighting the mode dial, power switch, and hot shoe.

3.2 Basic Shooting Modes

The mode dial on the top of the camera allows you to select various shooting modes:

- **Scene Intelligent Auto (A+):** Fully automatic mode for general shooting.
- **Program AE (P):** Camera sets aperture and shutter speed, user can adjust other settings.
- **Shutter-priority AE (Tv):** User sets shutter speed, camera sets aperture.
- **Aperture-priority AE (Av):** User sets aperture, camera sets shutter speed.
- **Manual Exposure (M):** User sets both aperture and shutter speed.
- **Movie Mode:** For recording video.

3.3 Using the Viewfinder and LCD Screen

The camera features an optical viewfinder and a 3.0" 1.04m-dot vari-angle touchscreen LCD. The LCD can be rotated for flexible viewing angles, useful for live view shooting and video recording.



Figure 3.3.1: Rear view of the Canon EOS Rebel SL3, displaying the LCD screen and surrounding controls.



Figure 3.3.2: Rear view of the Canon EOS Rebel SL3 with its vari-angle LCD screen extended and rotated.

3.4 Autofocus System

The camera utilizes a 9-point phase-detection AF system when using the optical viewfinder and Dual Pixel CMOS AF for live view and video recording, providing fast and accurate focusing.

3.5 Connectivity (Wi-Fi and Bluetooth)

The EOS Rebel SL3 features built-in Wi-Fi and Bluetooth for wireless image transfer to smartphones/tablets and remote

camera control via the Canon Camera Connect app.

4. MAINTENANCE

4.1 Cleaning the Camera and Lens

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens blower to remove dust, then a lens brush, and finally a lens cleaning solution with a microfiber cloth if necessary.
- Avoid touching the sensor directly. If sensor cleaning is required, consult a professional service center.

4.2 Battery Care

- Store batteries in a cool, dry place.
- Do not expose batteries to extreme temperatures.
- Charge batteries fully before extended storage and periodically during storage to maintain health.

4.3 Storage

When not in use, store the camera in a dry, dust-free environment, preferably with a desiccant to prevent mold and mildew. Attach the body cap and lens caps.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery. Reinsert the battery correctly.
Cannot take pictures.	Memory card is full, locked, or not inserted. Lens cap is on.	Insert a new/unlocked memory card. Remove lens cap.
Images are blurry.	Incorrect focus, camera shake, or dirty lens.	Ensure proper focus. Use a faster shutter speed or tripod. Clean the lens.
Wi-Fi/Bluetooth connection fails.	Incorrect settings, distance too far, or interference.	Check camera and device settings. Move closer to the device. Avoid interference.

6. SPECIFICATIONS

Feature	Detail
Model Name	Canon EOS Rebel SL3 (3453C002)
Sensor Type	24.1 MP APS-C CMOS Sensor
Image Processor	DIGIC 8
ISO Sensitivity	100-25600 (Expandable)
Video Recording	UHD 4K24p, Full HD 1080p

Feature	Detail
Autofocus System	9-point Phase-Detection (OVF), Dual Pixel CMOS AF (Live View)
LCD Screen	3.0" 1.04m-dot Vari-Angle Touchscreen LCD
Connectivity	Built-In Wi-Fi, Bluetooth, HDMI, USB
Continuous Shooting	Up to 5 fps
Battery Type	LP-E17 Lithium-Ion
Weight	Approximately 8.96 Pounds (with lens, battery, card)

7. WARRANTY & SUPPORT

7.1 Warranty Information

This Canon EOS Rebel SL3 camera comes with a **90-day limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or repair.

Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service, or further information, please visit the official Canon support website or contact Canon customer service. Refer to the official Canon documentation included with your product for specific contact details in your region.

