

[Manuals.plus](#) /

› [SideKing](#) /

› SideKing 2L Electric Plant Sprayer User Manual

SideKing SK-S2LR-P

SideKing 2L Electric Plant Sprayer User Manual

Model: SK-S2LR-P

Brand: SideKing

1. INTRODUCTION

Thank you for choosing the SideKing 2L Electric Plant Sprayer. This automatic, rechargeable sprayer is designed to simplify your plant care, gardening, fertilization, and cleaning tasks. Its one-button operation and adjustable nozzle provide convenience and efficiency for both indoor and outdoor use.



Image: The SideKing 2L Electric Plant Sprayer, pink in color, being held and used to mist a green potted plant. An additional long, flexible nozzle attachment is shown to the left.

2. PRODUCT FEATURES

- **One-Button Operation:** Designed to free your fingers from continuous pressing and spraying. A single press starts the spray, and another press stops it, making your work easier and preventing hand fatigue.
- **Multiple Spray Modes & Extended Nozzle:** Comes with a long, extended nozzle that can be rotated 360 degrees, allowing access to difficult or less accessible areas for better watering control. Easily adjust between two spray modes (uniform mist and water column spray) by twisting the nozzle. The improved nozzle design ensures no leakage.
- **Wide Application:** This electric watering can is designed for daily convenience. Besides plant watering, it can be used for humidifying air, reducing dust, cooling pets, cleaning windows, and more.
- **Premium & High-Quality Material:** Made from high-quality HDPE (High-Density Polyethylene) with a robust body and comfortable ABS handle. The ergonomic locking handle design ensures a firm, non-slip grip. The 2-liter capacity reduces the need for frequent refills.
- **Long Battery Life:** When fully charged, the sprayer can operate continuously for 3 hours.

Electric Auto Spray Bottle

One Button to Control



Image: A person in a garden using the SideKing Electric Auto Spray Bottle, demonstrating its one-button control feature.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Electric Spray Bottle
- 1 x Extended Nozzle
- 1 x USB Cable
- 1 x User Manual

4. SPECIFICATIONS

Feature	Specification
Capacity	2 Liters (68 oz / 0.5 Gallon)
Gross Weight	0.64 kg (630 grams)
Adjustable Spout	Uniform Spray / Water Column

Material	ABS / HDPE (Acrylonitrile Butadiene Styrene / High-Density Polyethylene)
Battery	2000 mAh 3.7 V Lithium-ion (included)
Pump	Mini Self-Priming Water Pump
Charging Voltage	5 V (USB Charging)
Full Charge Time	Approx. 3.5 hours
Continuous Operation Time	Up to 3 hours
Dimensions (L x W x H)	12.95 x 12.95 x 26.92 cm (approx. 5.1 x 5.1 x 10.6 inches)
Model Number	SK-S2LR-P

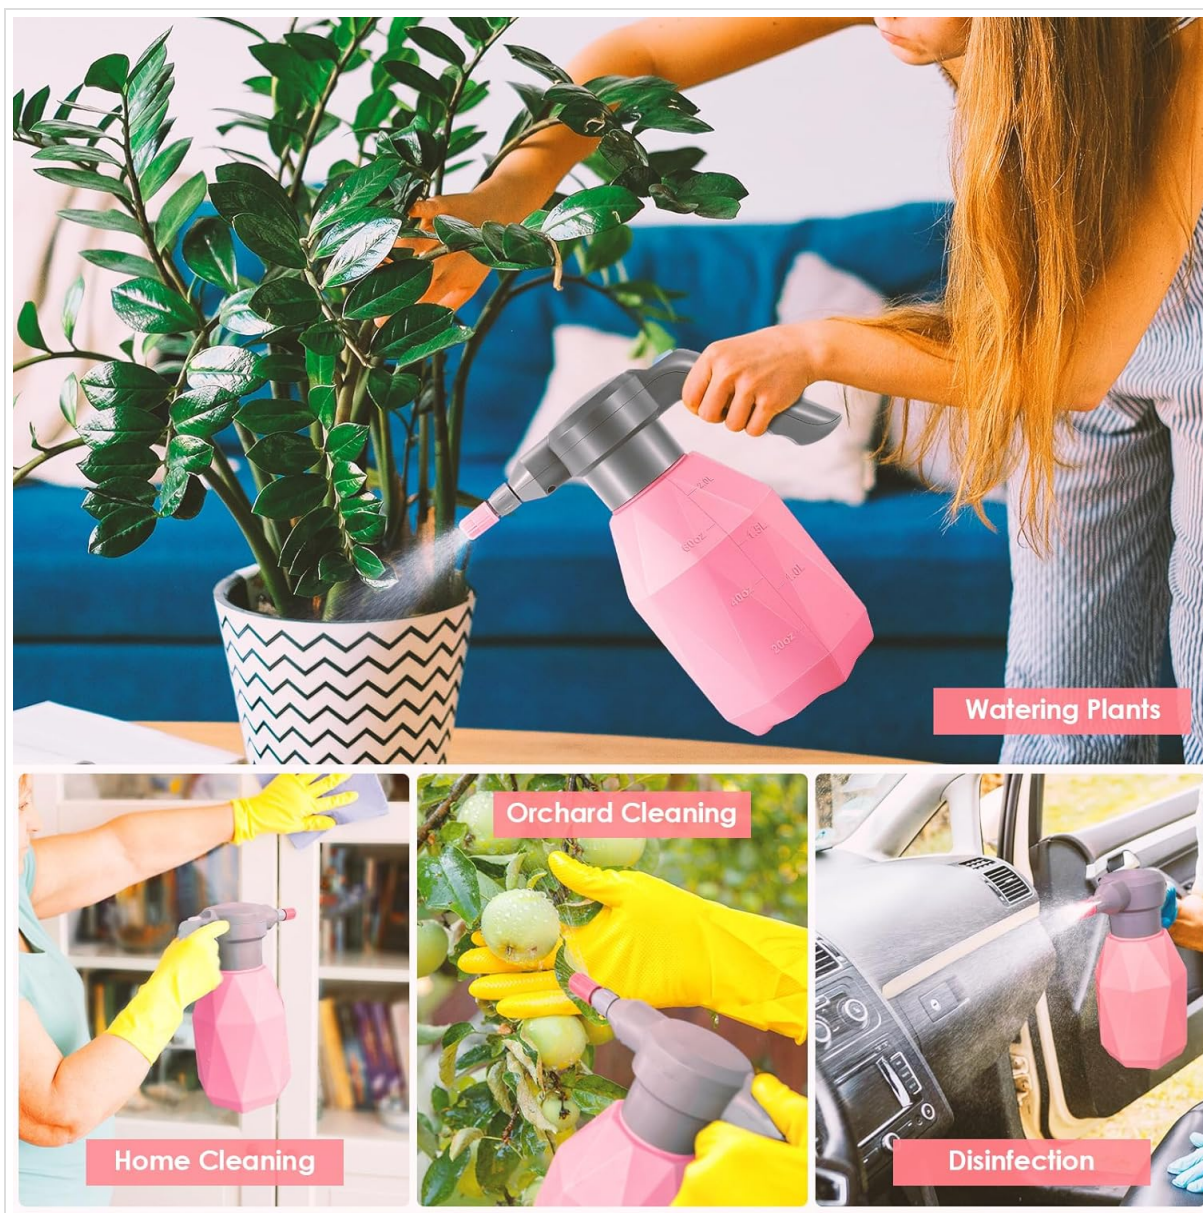


Image: A diagram illustrating the dimensions and capacity markings (2L, 60oz, 1.5L, 40oz, 1.0L, 20oz) on the SideKing Electric Plant Sprayer bottle.

5. SETUP

5.1 Initial Charging

Before first use, ensure the battery is fully charged. Connect the provided USB cable to the charging port on the sprayer's handle and plug the other end into a 5V USB power adapter (not included). The charging indicator light will show the charging status. A full charge takes approximately 3.5 hours.



Image: A close-up view of the SideKing Electric Plant Sprayer's handle, highlighting the USB charging port and indicating a 2000mAh battery capacity.

5.2 Filling the Bottle

1. Unscrew the top section (handle and pump assembly) from the bottle by twisting counter-clockwise.
2. Fill the bottle with the desired liquid (water, fertilizer solution, cleaning solution, etc.). Do not exceed the 2L maximum fill line.
3. Carefully screw the top section back onto the bottle, ensuring it is securely tightened to prevent leaks.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

To turn on the sprayer, press the power button located on the handle once. The sprayer will begin to spray automatically. To turn off the sprayer, press the power button again.

6.2 Adjusting Spray Mode

The sprayer offers two spray modes: uniform mist and water column. To switch between modes, twist the nozzle at the end of the spout. Twist clockwise for a finer mist and counter-clockwise for a more direct water column spray.



Image: A visual guide demonstrating how to adjust the spray pattern of the SideKing Electric Plant Sprayer by twisting the nozzle, showing both a fine mist and a direct stream.

6.3 Using the Extended Nozzle

For hard-to-reach areas or specific applications, attach the extended nozzle. This nozzle can be bent and rotated 360 degrees for precise targeting.

Multiple Spray Modes

Adjustable Nozzle



Image: The SideKing Electric Plant Sprayer with its flexible, extended nozzle, illustrating its 360-degree adjustability and various spray angles.

6.4 Applications

This electric sprayer is versatile and can be used for:

- Watering indoor and outdoor plants.
- Applying liquid fertilizers or pesticides.
- Humidifying the air.
- Cooling pets.
- General home cleaning (e.g., windows, surfaces).
- Orchard cleaning or disinfection.



Image: A collage demonstrating the multi-purpose use of the SideKing Electric Plant Sprayer for watering plants, home cleaning, orchard cleaning, and disinfection.

7. MAINTENANCE

7.1 Cleaning After Use

If you have used any solution other than plain water (e.g., fertilizer, cleaning solution), it is crucial to clean the bottle and nozzle thoroughly after each use. Fill the bottle with clean water and spray for at least 20 seconds to flush out any residual solution from the pump and nozzle. This prevents clogging and extends the product's lifespan.

7.2 Storage

Always empty the manual mister and clean the nozzles completely by spraying water after use. When storing the battery-powered sprayer for extended periods, it is recommended to charge the batteries every 2 months to maintain battery life.

7.3 Battery Care

Avoid completely draining the battery frequently. Recharge the sprayer when the performance starts to

diminish.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sprayer does not turn on.	Battery is low or depleted.	Charge the sprayer fully using the provided USB cable.
No spray or weak spray.	<ul style="list-style-type: none">• Nozzle is clogged.• Insufficient liquid in the bottle.• Battery is low.	<ul style="list-style-type: none">• Clean the nozzle by twisting it and flushing with clean water.• Refill the bottle.• Recharge the battery.
Liquid leakage.	<ul style="list-style-type: none">• Top section not screwed on tightly.• Nozzle not properly seated.	<ul style="list-style-type: none">• Ensure the top section is securely tightened onto the bottle.• Check if the nozzle is twisted correctly and fully seated.

9. WARRANTY AND SUPPORT

For any questions or concerns regarding your SideKing Electric Plant Sprayer, please contact SideKing customer support. While specific warranty details are not provided in this manual, SideKing is committed to addressing customer inquiries as quickly as possible.

Please refer to your purchase documentation or the SideKing official website for the most up-to-date warranty information and contact details.