



Manuals.plus /

› SymWell /

› SymWell Replacement Remote Control RN02A/B User Manual for Senville Air Conditioners

SymWell RN02A/B

SymWell Replacement Remote Control RN02A/B User Manual

For Senville Split Type Wall-Mounted Inverter Room Air Conditioners

1. INTRODUCTION

This manual provides instructions for the SymWell Replacement Remote Control, model RN02A/B. This remote is designed to operate various Senville split-type wall-mounted inverter room air conditioners. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.

2. PRODUCT OVERVIEW

The SymWell Replacement Remote Control RN02A/B is an ergonomic infrared remote designed for ease of use with compatible Senville air conditioning units. It provides essential functions for controlling your air conditioner.

2.1 Compatible Models

- RG51F/EU1
- RG51F1/EU1
- RG51F3/EU1
- SENL-09CD
- SENL-12CD
- SENL-18CD
- SENL-24CD
- SENL-09HD

 
2.2 Remote Control Features

- Ergonomic design for comfortable handling.
- Infrared connectivity for reliable communication with the air conditioner.

- Button control for intuitive operation.
- Displays temperature in Celsius.

2.3 Remote Control Layout (Back View)



AUTO  SET TEMP

24°C



ON/OFF

FP/EYE

MODE

TIMER ON

TEMP

FAN/SLC

TIMER OFF

SLEEP FRESH



TURBO SELFCLEAN

LED FOLLOW ME

Image 1: Back view of the SymWell Replacement Remote Control RN02A/B. The image displays the rear casing of the remote, which is light-colored. A label is visible in the upper-middle section, indicating "QC. PASS" and "MODE: RN02A/B". Three small, dark, vertical slots are present at the top edge, likely for a speaker or sensor. The overall shape is rectangular with rounded corners.

3. SETUP

3.1 Battery Installation

The remote control requires batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or unclip the cover to open the battery compartment.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

***Note:** Always replace both batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.*

4. OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

4.1 Basic Functions

- **Power Button:** Press to turn the air conditioner ON or OFF.
- **Mode Button:** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **Temperature Adjustment Buttons (▲/▼):** Increases or decreases the set temperature. The remote displays temperature in Celsius.
- **Fan Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Button:** Controls the louver's swing function.
- **Timer Button:** Sets the ON/OFF timer for the unit.
- **Sleep Button:** Activates or deactivates the sleep mode.

***Note:** Specific button labels and functions may vary slightly depending on the original remote design this unit replaces. Refer to your air conditioner's original manual for detailed function descriptions if needed.*

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or the remote fails to operate the air conditioner reliably. Follow the battery installation steps in Section 3.1.

5.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Confirm the remote is pointed directly at the air conditioner.
- Verify the remote is within the maximum operating range (approximately 10 meters).

- **Air conditioner not responding to specific functions:**

- Some advanced functions may not be supported by all air conditioner models or may require specific button combinations not detailed in this general manual. Refer to your air conditioner's original manual.

7. SPECIFICATIONS

Brand	SymWell
Model	RN02A/B
Compatible Devices	Senville Split Type Wall-Mounted Inverter Room Air Conditioners (RG51F/EU1, RG51F1/EU1, RG51F3/EU1, SENL-09CD, SENL-12CD, SENL-18CD, SENL-24CD, SENL-09HD)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic
Maximum Range	10 Meters (approx. 33 feet)
Item Weight	0.01 Pounds (approx. 4.5 grams)
UPC	640807062834

8. WARRANTY AND SUPPORT

For any questions regarding the operation or compatibility of this replacement remote control, please contact the seller or manufacturer directly. Information regarding specific warranty terms may be available from your point of purchase.

