

## Generic XSSX-8PB

# Deal4GO Replacement Button Set Instruction Manual

For Xbox Series S & Xbox Series X Controllers (Model: XSSX-8PB)

## 1. INTRODUCTION

This instruction manual provides essential information for the installation and care of your Deal4GO 8-Pack Plastic ABXY Button, Menu/View/SYNC/Share Key Set replacement for Xbox Series S and Xbox Series X controllers. This set is designed to replace worn or broken original buttons, restoring the functionality and appearance of your controller.

## 2. PRODUCT OVERVIEW

The Deal4GO replacement button set includes a complete array of essential buttons for your Xbox Series S or Series X controller. These buttons are manufactured to match the original specifications, ensuring a precise fit and responsive feel. The set is ideal for customizing your controller or replacing damaged components.



Figure 2.1: Overview of the Deal4GO 8-Pack Replacement Button Set.

This image displays the full complement of buttons included in the package, showcasing their design and color scheme (red and black). The set includes the primary ABXY action buttons, the central Xbox button, and the crucial Share, Menu, and View keys.

### 3. COMPATIBILITY

---

This button set is specifically designed for:

- **ALL VERSIONS** of Xbox Series S controllers
- **ALL VERSIONS** of Xbox Series X controllers

**Important Note:** This product is **NOT COMPATIBLE** with the following controller models:

- Xbox One Elite controllers
- Xbox One S controllers
- Xbox One X controllers

- Any other Xbox One controller variants

## 4. PACKAGE CONTENTS

---

Upon opening your package, please verify that all the following components are present:

- 1x A button
- 1x B button
- 1x X button
- 1x Y button
- 1x Xbox button (XB)
- 1x Share button
- 1x Menu button
- 1x View button



Figure 4.1: Individual button components included in the set.

This image provides a clear view of each individual button, allowing for easy identification and verification against the package contents list.

## 5. INSTALLATION GUIDE

---

Replacing the buttons requires opening your Xbox Series S/X controller. This process is considered to be of **medium technical difficulty**. If you are not comfortable with disassembling electronic devices, it is recommended to seek assistance from an experienced technician or refer to detailed video tutorials online.

### 5.1. Tools Required (Not Included)

- **T8 Torx Security Screwdriver:** Required for opening the controller casing.
- **T6 Torx Screwdriver:** May be required for internal components depending on controller revision.
- Prying tool (plastic spudger recommended)
- Tweezers (optional, for handling small parts)

### 5.2. Installation Steps (General Overview)

While a step-by-step guide for controller disassembly is beyond the scope of this manual, the general procedure involves:

1. **Prepare Workspace:** Ensure a clean, well-lit, and organized workspace to prevent loss of small components.
2. **Remove Battery:** Disconnect and remove any batteries from the controller.
3. **Disassemble Controller:** Carefully use the T8 screwdriver to remove the screws securing the controller's back casing. Use a prying tool to gently separate the casing halves.
4. **Locate and Remove Old Buttons:** Once the controller is open, identify the buttons you wish to replace. Carefully remove the old buttons. Note their orientation and placement.
5. **Install New Buttons:** Place the new Deal4GO buttons into their respective slots, ensuring they are correctly oriented and seated. The new buttons are designed to be exactly the same as the original ones for a perfect fit.
6. **Reassemble Controller:** Carefully reassemble the controller, ensuring all internal components are correctly aligned before securing the casing with screws.
7. **Test Functionality:** After reassembly, test all buttons to ensure they function correctly.



Figure 5.1: Underside view of buttons, showing mounting points.

This image illustrates the underside of the buttons, which reveals their mounting points and internal design, crucial for correct installation within the controller.

## 6. MAINTENANCE AND CARE

---

To ensure the longevity and optimal performance of your replacement buttons:

- **Cleaning:** Use a soft, dry cloth to wipe the buttons. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the controller.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the plastic and markings.
- **Storage:** Store your controller in a clean, dry environment away from extreme temperatures and direct sunlight.

## 7. TROUBLESHOOTING

---

If you encounter issues after installation, consider the following:

- **Button Not Registering:**

- Ensure the button is correctly seated and aligned within its housing.
- Verify that the conductive pad beneath the button is clean and making proper contact.
- Double-check that the controller's internal ribbon cables or connections were not dislodged during reassembly.

- **Button Feels Stiff or Stuck:**

- Confirm that no debris is lodged around the button.
- Ensure the button is not misaligned or installed backward (though unlikely for these specific buttons, always verify).
- Check for any excess pressure from the controller casing if it was reassembled too tightly.

- **Compatibility Issues:** Re-verify that your controller model is indeed an Xbox Series S or Series X controller, as these buttons are not compatible with Xbox One series controllers.

If problems persist, it may be necessary to re-open the controller to inspect the internal components and button placement.

## 8. SPECIFICATIONS

Attribute	Detail
Product Model Number	XSSX-8PB
Product Dimensions	0.91 x 0.39 x 0.39 inches (approximate for individual buttons)
Item Weight	0.35 ounces (total package)
Manufacturer	Generic
Country of Origin	China
Date First Available	August 2, 2020

## 9. WARRANTY AND SUPPORT

As this product is a replacement part, specific warranty information may vary. For any questions regarding product defects, returns, or technical assistance, please contact the seller directly through your purchase platform. Please retain your proof of purchase for any warranty claims or support inquiries.