

[Manuals.plus](#) /

› [Veken](#) /

› Veken Dog Grooming Kit Clippers Instruction Manual

## Veken VK052718US

# Veken Dog Grooming Kit Clippers Instruction Manual

Brand: Veken | Model: VK052718US

### PRODUCT OVERVIEW

The Veken Dog Grooming Kit Clippers are designed for professional and home pet grooming, offering a low-noise, rechargeable, and cordless solution for various coat types. The kit includes the main clipper unit and essential accessories for a complete grooming experience.



Image: VeKen Dog Grooming Kit Clippers and included accessories.

Key features include:

- **Professional Dog Trimmer:** Rechargeable with built-in battery, safe to use while charging, low heat and noise. Features long battery life and ceramic-coated stainless-steel blades for durability and sharpness.
- **Detachable Blade:** Easy to clean for extended device life and smooth, sharp cutting action.
- **Protective Combs:** Includes 3, 6, 9, and 12mm plastic lock-on guards, plus five built-in length adjustments (0.8mm/1.1mm/1.4mm/1.7mm/2.0mm) for various hair types and lengths.
- **Low Noise and Vibration:** Operates at approximately 50 decibels, reducing stress for pets during grooming.
- **IPX7 Water Resistance:** Allows for thorough cleaning of the clippers after use.

Your browser does not support the video tag.

 
Video: Overview of the Veken Low Noise Dog Grooming Kit, highlighting its features and quiet operation.

## WHAT'S INCLUDED


Your Veken Dog Grooming Kit includes the following components:

- 1 x Dog Clippers
- 4 x Positioning Combs (3mm, 6mm, 9mm, 12mm)
- 1 x Oil bottle
- 1 x USB Cable
- 1 x Hair Brush
- 1 x Hair Comb
- 1 x Beauty Comb
- 1 x Beauty Scissors
- 1 x Travel Bag


## PET GROOMING IN 4 EASY STEPS

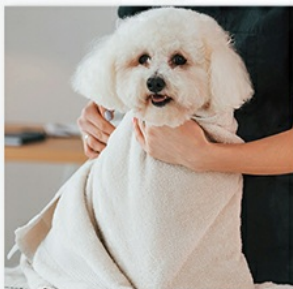

 
1. Bathe your pet

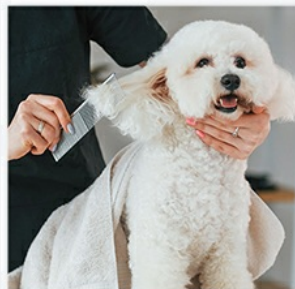

 2. Detangle the fur with a comb

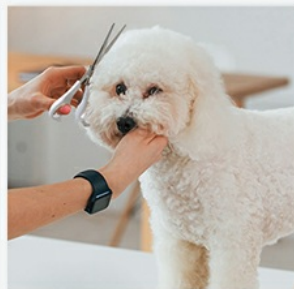


 3. Use scissors to cut areas with long fur

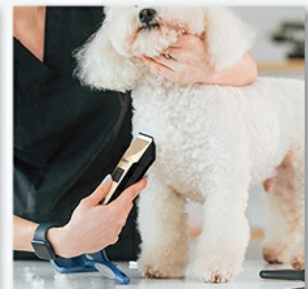

4. Trim the fur

### BEFORE

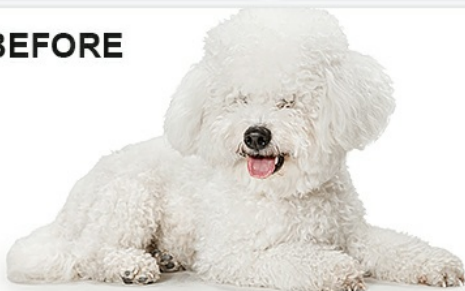 

### AFTER



Image: All accessories included in the Veken Pet Grooming Set.

## SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe operation and prevent injury or damage to the product:

- Keep out of reach of children.

- Always unplug from the electrical outlet when not in use.
- Do not use while charging if the cord is damaged.
- Do not use in a bathtub or near water.
- Do not touch moving parts during operation.
- Always use scissors to cut long and thick hair shorter before using the clippers to prevent jamming.
- After cleaning, dry with a clean towel and apply the lubricating oil to the trimmer blade before storing in a cool, dry place.

## SETUP

### Initial Charging

Fully charge the clippers before the first use. Connect the provided USB cable to the clipper's charging port and a suitable USB power adapter. The LED digital display will indicate the battery charge level.



Image: USB charging port on the Veken clippers.




 
 
To extend battery life, do not exceed 24 hours for any single charge. If left unused for an extended period, charge the battery once every six months.

### Preparing Your Pet for Grooming

Before trimming, bathe and brush out your pet's hair. If the hair is too long or thick, trim with scissors first to prevent the clippers from jamming. Gently expose your pet to the clippers by turning them on nearby to familiarize them with the sound and vibration, allowing for an easier grooming process.

# Veken

## PET GROOMING SET

-  Silent: < 50dB
-  Strong Power
-  Waterproof: IPX7
-  USB Charging
-  5 Levels

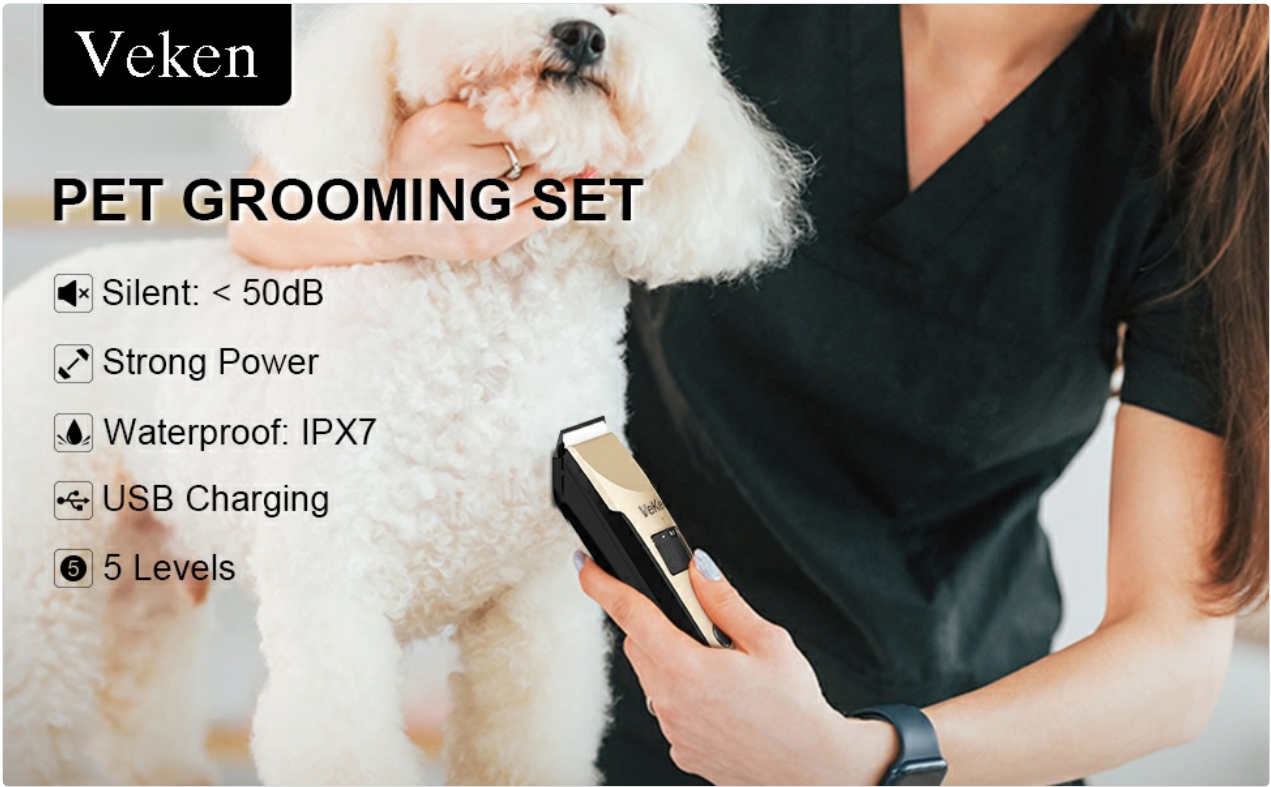 


Image: Pet grooming in 4 easy steps, including preparation.

### Attaching Guide Combs

Select the appropriate guide comb (3mm, 6mm, 9mm, or 12mm) based on the desired hair length. Line up the U-shape on the guide comb with the trimmer and push inwards with your thumb until it snaps into place.

Your browser does not support the video tag.

Video: Demonstrates how to attach the guide comb to the clippers.

## OPERATING INSTRUCTIONS

### Blade Adjustment

The clippers feature five built-in length adjustments (0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm) directly on the main device. Use the adjustment dial to select the desired cutting length. This allows for precise trimming without a guide comb for shorter lengths.

# Ensure an Even Cut at the Length You Choose



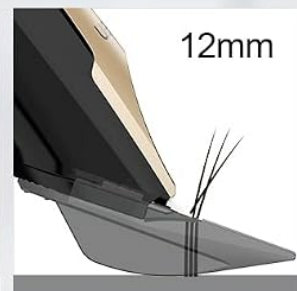


Image: Blade length adjustments and guide comb options for precise cutting.

## Grooming Technique

Ensure your pet's hair is smooth before grooming to avoid hair clogs. When using the trimmer, the machine should always be touching the skin and moved in the direction of hair growth for an even cut. Avoid holding the clippers at an angle that could cause uneven trimming or discomfort.

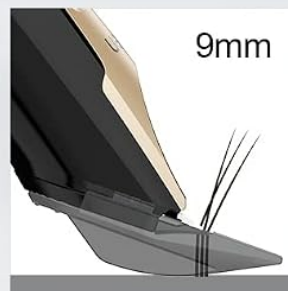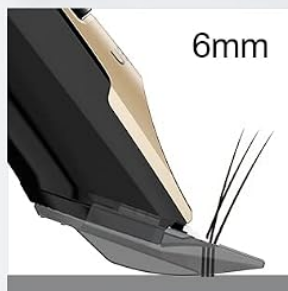

## LED Digital Display

Better control the grooming work

Image: Correct usage of the dog trimmer for optimal results.

The low noise and vibration design helps reduce stress for pets during grooming, making the experience more comfortable for them.

# Low Noise Pet Clippers

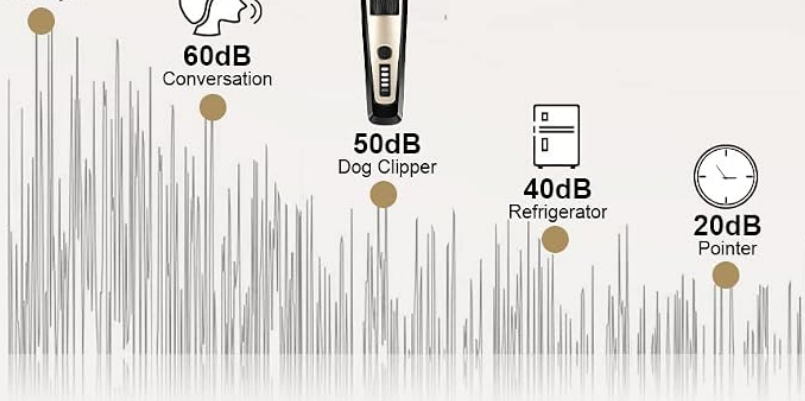 


Image: Low noise operation of the Veken pet clippers.

## Cleaning the Clippers

The Veken Dog Grooming Clippers have an IPX7 water resistance rating, meaning they can be thoroughly cleaned under running water. After each use, remove the blade and rinse the clippers to remove any hair and debris.



**Fully Washable Device**

**Waterproof Grade: IPX7**



Image: The Veken clippers are fully washable for easy cleaning.

## Lubrication

After cleaning and drying the blade with a clean towel, apply a few drops of the included lubricating oil to the trimmer blade. This ensures smooth operation and extends the life of the blades. Store the clippers in a cool, dry place.



Image: Applying lubricating oil to the clipper blade.

## Blade Removal and Installation

The top blade is detachable for easy cleaning and maintenance. To remove, press against the white tooth part of the cutter head with your thumb and push it down, holding the blade to prevent dropping it. To install, gently slide the blade against the clippers and line it up, then press down until you hear a click.

Your browser does not support the video tag.

Video: Instructions on how to remove and install the blade on the dog clippers.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clippers jamming or not cutting effectively	Hair is too long or thick; blades are dull or clogged; insufficient lubrication.	Pre-trim long/thick hair with scissors. Clean blades thoroughly. Apply lubricating oil to blades.
Reduced battery life or not charging	Battery not fully charged; prolonged disuse without charging; faulty charging cable/adapter.	Ensure full charge (do not exceed 24 hours). Charge every six months if unused. Check USB cable and adapter.
Excessive noise or vibration	Blades are not properly aligned or lubricated; internal issue.	Ensure blades are correctly installed and lubricated. If problem persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Veken
Model Number	VK052718US
Power Source	Battery Powered (Rechargeable)
Blade Material	Stainless Steel, Ceramic
Unit Count	1 Count
Item Weight	1.26 pounds
Product Dimensions	9.13 x 6.5 x 2.13 inches
Water Resistance Rating	IPX7
Noise Level	< 50 decibels
Runtime	1 hour
Included Components	Hair Clipper, 4 Positioning Combs, Oil bottle, USB Cable, Hair Brush, Hair Comb, Beauty Comb, Beauty Scissors, Travel Bag

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your Veken Dog Grooming Kit Clippers, please refer to the contact details provided with your product packaging or visit the official Veken website. Keep your purchase receipt as proof of purchase for any warranty claims.