

[Manuals.plus](#) /

› [tectake](#) /

› tectake Industrial Desk with Storage - Model 404227 - User Manual

tectake 404227

tectake Industrial Desk with Storage - Model 404227

User Manual for tectake Industrial Desk, 140 x 60 x 76.5 cm, Dark Brown

1. INTRODUCTION

Thank you for choosing the tectake Industrial Desk, Model 404227. This manual provides essential information for the safe assembly, proper use, and maintenance of your new desk. Please read these instructions carefully before assembly and retain them for future reference.

This desk features a robust design with a large work surface and two side storage compartments, built for productivity and durability. It includes adjustable feet for stability and is made from MDF with a protective melamine coating and a powder-coated steel frame.



Image 1.1: The tectake Industrial Desk, Model 404227, shown with a computer, speakers, and decorative items.

2. SAFETY WARNINGS

- **Weight Distribution:** The desktop supports up to 200 kg. Ensure weight is evenly distributed across the surface to prevent damage or instability.
- **Adjustable Feet:** The plastic feet can be adjusted to compensate for uneven floors and enhance stability. Ensure all feet are firmly on the ground and adjusted correctly before use.
- **Assembly:** Follow all assembly instructions carefully. Do not overtighten screws. Ensure all components are securely fastened before using the desk.
- **Children:** Keep small parts and packaging materials away from children during assembly.
- **Cleaning:** Use a soft, damp cloth for cleaning. Avoid harsh chemicals that may damage the surface finish.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Desk components (MDF panels, steel frame)
- Assembly hardware (screws, bolts, plastic feet, etc.)
- Assembly instructions (this manual)

4. SETUP AND ASSEMBLY

Assembly is designed to be quick and easy. It is recommended to assemble the desk on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the parts list (usually found in the separate assembly guide or on the packaging).
2. **Assemble Frame:** Connect the steel frame components using the provided hardware. Ensure all connections are finger-tight before final tightening.
3. **Attach Desktop:** Secure the MDF desktop panel to the assembled steel frame.
4. **Install Side Compartments:** The two side storage compartments can be positioned variably. Attach them to the frame as desired. One shelf can be removed to create space for a PC tower.

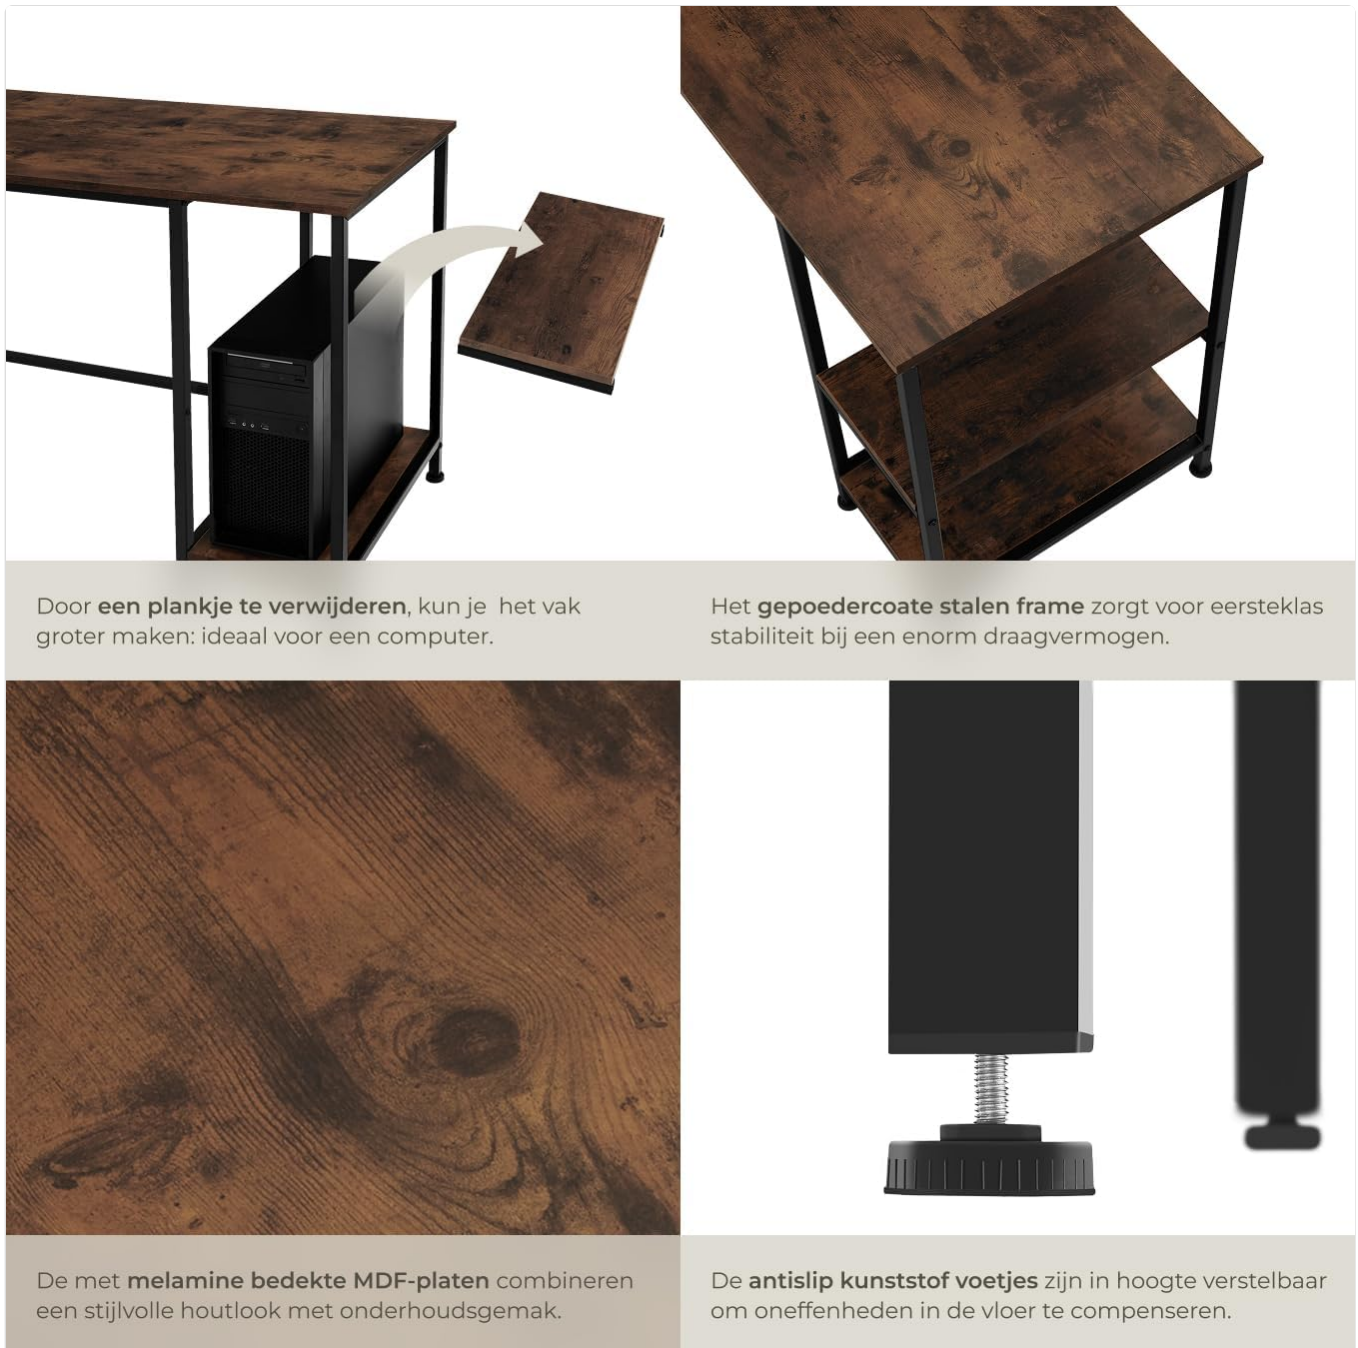


Image 4.1: Illustration of the removable shelf feature for a PC tower, close-up of the wood grain finish, and the adjustable plastic feet.

5. **Attach Adjustable Feet:** Screw the plastic adjustable feet into the bottom of the desk legs.
6. **Final Tightening:** Once all components are in place, carefully tighten all screws and bolts. Do not overtighten.
7. **Leveling:** Place the desk in its desired location. Adjust the plastic feet to ensure the desk is stable and level on uneven surfaces.

5. OPERATION AND USE

Your tectake Industrial Desk is designed for various uses, including as a computer desk, gaming table, or general office workspace.

- **Work Surface:** The large desktop provides ample space for laptops, monitors, documents, and other office accessories.
- **Storage Compartments:** Utilize the two side compartments for organizing books, files, or electronic devices. The flexible design allows for one shelf to be removed to accommodate larger items like a PC tower.

- **Weight Capacity:** Adhere to the maximum load capacities: 200 kg for the desktop and 25 kg per side compartment. Distribute weight evenly.

6. MAINTENANCE AND CARE

Regular maintenance will help prolong the life and appearance of your desk.

- **Cleaning:** Wipe surfaces with a soft, slightly damp cloth. For stubborn marks, use a mild soap solution and immediately dry with a clean cloth. Avoid abrasive cleaners, solvents, or harsh chemicals.
- **Spills:** Clean up spills immediately to prevent staining or damage to the melamine coating.
- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Avoid Heat and Moisture:** Do not place hot items directly on the desktop without protection. Avoid prolonged exposure to direct sunlight or excessive moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly/unstable	Uneven floor; loose connections; feet not adjusted.	Adjust the plastic feet to level the desk. Check and tighten all assembly screws and bolts.
Parts do not fit during assembly	Incorrect orientation of parts; wrong hardware used.	Refer to the assembly instructions carefully. Ensure parts are oriented correctly. Verify you are using the correct screws/bolts for each step.
Scratches on surface	Rough handling; sharp objects.	Use coasters or protective mats for items. Avoid dragging objects across the surface. Minor scratches may be concealed with furniture repair kits.

8. SPECIFICATIONS

AFMETINGEN

Totale afmetingen

140 x 60 x 76,5 cm

Bureauplaat

140 x 60 cm

Bovenste zijplank

20,5 x 58 x 28,5 cm

Onderste zijplank

20,5 x 58 x 24,5 cm

Dikte MDF-platen

1,5 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

Draagkracht

Bureauplaat 200 kg

Per zijvak 25 kg

Gewicht ca. 19 kg

Materiaal melamine gecoat MDF,
gepoedercoat staal, polyethyleen

INHOUD

Bureau

Montagemateriaal

Montagehandleiding



Image 8.1: Diagram illustrating the key dimensions and technical details of the desk.

- **Model Number:** 404227
- **Brand:** tectake
- **Overall Dimensions (L x W x H):** 140 x 60 x 76.5 cm (approximately)
- **Desktop Dimensions (L x W):** 140 x 60 cm (approximately)
- **Upper Side Compartment (L x W x H):** 20.5 x 58 x 28.5 cm (approximately)
- **Lower Side Compartment (L x W x H):** 20.5 x 58 x 24.5 cm (approximately)
- **MDF Panel Thickness:** 1.5 cm (approximately)
- **Steel Frame Dimensions:** 2 x 2 cm (approximately)
- **Adjustable Feet Range:** 1.5 cm (approximately)
- **Desktop Max Load Capacity:** 200 kg
- **Side Compartment Max Load Capacity:** 25 kg per compartment
- **Weight:** 19 kg (approximately)
- **Materials:** MDF panel, powder-coated steel, polyethylene

- **Color:** Dark Brown Industrial
- **Features:** Height adjustable feet

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. tectake products are designed for durability and quality.

If you encounter any issues or have questions not covered in this manual, please contact tectake customer support. Contact details can typically be found on the tectake website or your purchase invoice.

Manufacturer: tectake

Website: www.tectake.com (Please check for your regional website)

© 2025 tectake. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09L54Z7N9>

More documents and user manuals: <https://manuals.plus/>